

 
MEDEK



MODEL N°:HL-810B

Vacuum cleaner Instructions

For household use only

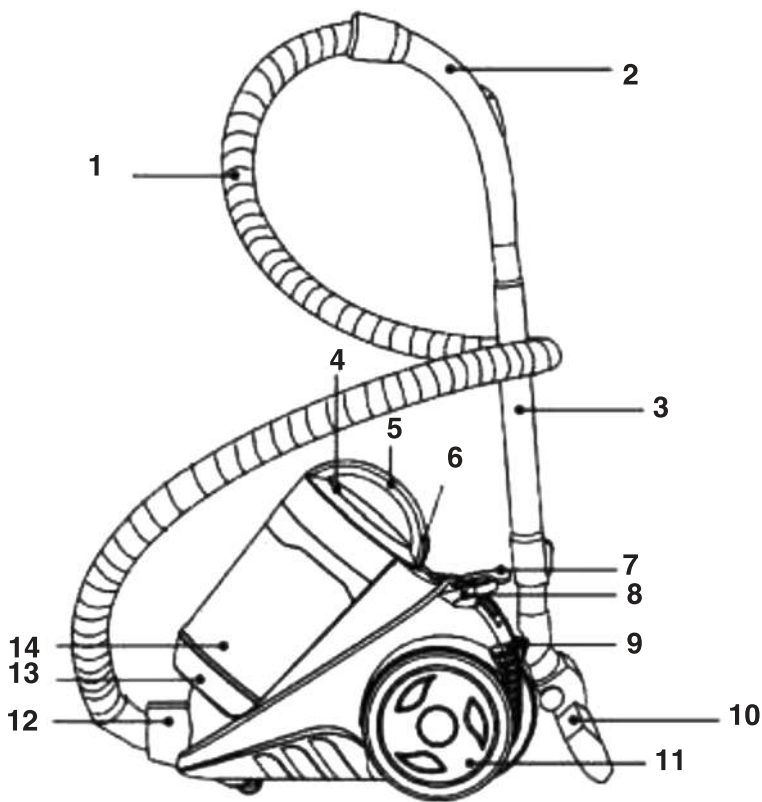

- | | |
|----------------------------|-----------------------|
| 1. Hose | 8. Power/Speed Button |
| 2. Handle | 9. Air Exhaust Plate |
| 3. Tube | 10. Floor Brush |
| 4. Dust Cup Lid | 11. Rear Wheel |
| 5. Dust Cup Handle | 12. Hose Connector |
| 6. Dust Cup Release Button | 13. Dust Cup Bottom |
| 7. Cord Rewinder | 14. Dust Cup |

INTENDED USE

This device is suitable for vacuuming dry floor surfaces only. Any other Use may result in damage to the device or injuries.

IMPORTANT SAFEGUARDS

General

1. Read this manual before first use thoroughly. It contains Important information for your safety as well as for the use and maintenance of the equipment. Keep these instructions for future reference and pass it on with device.
2. Pay particular attention to the warnings on the device and in this instruction manual.
3. Use the device only for its intended purpose. Improper Use may lead to hazards.
4. This device is designed for house hold use only. Not for staff kitchen areas in shops, offices and other working environments, Farm houses, by clients in hotels, motels and other residential type environments use, It is not suitable for commercial use.
5. In the event of improper use or wrong operation, we do not accept any liability for resulting damages.
6. The use of accessories and components not expressly recommended by the manufacturer may result in injuries or damages and voids the warranty.
7. This device is not intended to be used by persons(including children) with reduced physical, sensory or mental abilities or lack of experience and /or lack of knowledge unless they are supervised by a person responsible for their safety or have received instructions on how to use the device.
8. Children should be supervised to ensure that they do not play with the device.
9. Never leave the device unsupervised while it is swithed on.
10. Do not place heavy objects on top of the device.
11. Never immerse electrical parts of the device in water during cleaning or operation. Never hold the device under running water.
12. Do not under any circumstances attempt to repair the device yourself. For servicing and repairs, please consult and authorised dealer or qualified customer service centre.
13. This device should not be operated with an external clock timer or separate remote control system.

Power Supply

1. The mains voltage must match the information on the rating label of the device.
2. The power plug is used as the disconnect device. Please be sure that the power plug is in operable condition.
3. Only removing the power plug can separate the device completely from the mains supply.
4. Avoid damages to the power cord that may be caused by kinks or contact with sharp corners.
5. Make sure the device, including power cord and power plug are not exposed to hot surfaces.
6. Only unplug from the power outlet by the plug itself. Do not pull on the cord.
7. Disconnect the power plug when the device is not in use. In case of malfunctions, prior to attaching accessories and prior to each cleaning.
8. If the power cord or the casing of the device is damaged or if the device is dropped, the device may not be used before it is examined by a professional electrician.
9. A damaged power cord may only be replaced by the manufacturer or a workshop commissioned by the manufacturer or by a similarly qualified person in order to avoid hazards.

Installation location

1. Place the device on a flat, sturdy and heat-resistant surface.
2. Put the device in a place which is out of reach of children.
3. Do not operate this device near flammable materials(e.g. curtains, textiles, walls) and never cover it. Ensure that there is always a sufficient safe distance from flammable materials.
4. Use this device in dry indoor areas only and never outdoors.
5. **WARNING:** Do not use this device near water or heavy moisture;e.g. in a damp basement or beside a swimming pool or bathtub.

6. In order to reduce the risk of fire and electric shock, do not expose the device to fire (fireplace, grill, candles, cigarettes and so on) or water (water drops, water splashes, vases, tubs, ponds and so on).
7. Keep this device away from all heat sources like for example, ovens, hot plates and other heat-producing devices/objects.
8. Protect this device from extreme heat (over 35 ° C) and cold (under 5 ° C), as well as from direct sunlight and dust.

SPECIFIC SAFETY INSTRUCTIONS

1. Do not use the appliance to vacuum lighted matches or hot ash.
2. Do not use the appliance to vacuum needles, drawing-plug or string, cement, plaster or other material for construction and decorations.
3. Do not vacuum up any water, liquid or damp dirt. This will cause major faults and could seriously impair the functioning and electrical safety of the appliance. Wait until any freshly cleaned or shampooed carpets or floor coverings are completely dry before attempting to vacuum.
4. Do not vacuum toner dust. Toner, such as that used in printers and photocopiers, can conduct electricity. The filter system in the vacuum cleaner may not filter it completely, causing the toner to be blown back into the room by the fan.
5. Do not obstruct air intake or outlet vents.
6. Clean the device and other accessories refer to the chapter CARE AND MAINTENANCE.

FOR THE FIRST TIME USE

 
Unpacking and checking

1. Carefully take the device and its accessories out of the packaging. Retain the packaging in case you would like to store the device away or transport it at a later date, If you choose to dispose of the packaging, then please do so according to the applicable legal regulations.
2. Check the packaging contents for completeness and damages. Should the contents in the packaging not be


complete or be damaged, do not use the device. Return it to your retail outlet immediately.

Assembling

1. Insert the hose connector into the air In take duct until it clicks into position. To remove the suction hose from the Cleaner. Rotate the hose connector And tack it away.

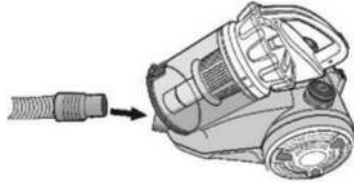

 
2. Insert the handle into the tube.

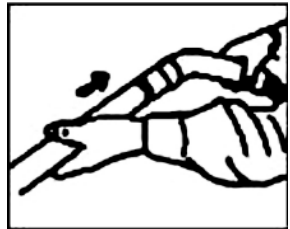

3. Extend the tube by Inserting the tube into the other tube.



 4. Fitting the accessories to the extension tube.

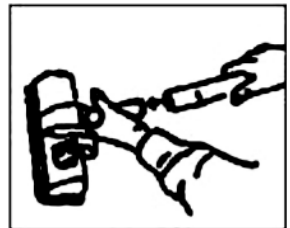

ACCESSORIES

Floor brush:

Can be used for all normal cleaning of carpets and rugs. It can also be used without the brush protruding to vacuum hard flooring.

- Vacuum carpets and rugs with the brush retracted:
Press the foot control.
- Clean hard flooring which is not susceptible to scratching with the foot control.

Crevice / dusting tool:

For cleaning radiators, corners, edges, drawers, skirting boards, ornate or carved articles, etc.

Upholstery tool

For cleaning upholstery, blinds, books, etc.



USING THE VACUUM CLEANER

Unwinding and rewinding the cable

1. Unwind length of cable and insert the plug into the power socket. A YELLOW mark on the power cable shows the ideal cable length. Do not extend the cable beyond the RED Mark.
2. To rewind the power cable, press the rewind button with one hand, and guide the other hand to ensure that it does not whip causing damage.

Vacuuming

1. Press the ON/OFF button to switch the appliance on. It is advisable to set the speed control to MIN before switching the appliance on.
2. When vacuuming. Pull the cleaner behind you on its wheels.
3. The suction power can be regulated to suit the type of flooring. Adjusting the suction power by sliding the suction power control switch upward for maximum power, downward for minimum power.

Opening the air inlet valve

It is easy to reduce the suction power for a short time, e.g. to prevent rugs or other objects being sucked into the vacuum cleaner.

1. Open the air inlet valve far enough to reduce the suction power. The floor brush will be easier to manoeuvre.
2. Close the valve up again when you are ready to use full power again.

 
CARE AND MAINTENANCE

Emptying the dust cup

Slide the release button and open
The dust cup bottom.




2. Empty the dust inside the dust cup.

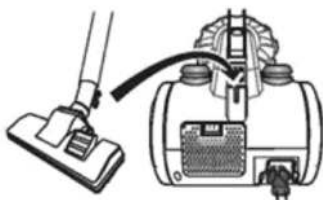

Cleaning the filter

 1. Take out the filter when it's getting dirty. Remove dust around the filter by patting it gently or with brush.

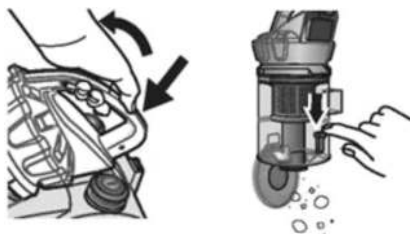

Cleaning the motor filter

When the motor filter is dirty, remove the filter guard from the back of the vacuum cleaner, take out and wash carefully in water. Dry the filter naturally & completely before replacing it.

 
DISPOSAL

Proper disposal of this product.

This label indicates that, in the EU, electronic devices cannot be disposed of with regular household waste.

Please use the return or collections systems of your municipality or contact the seller where you purchased the product.

Disassembling and Repair

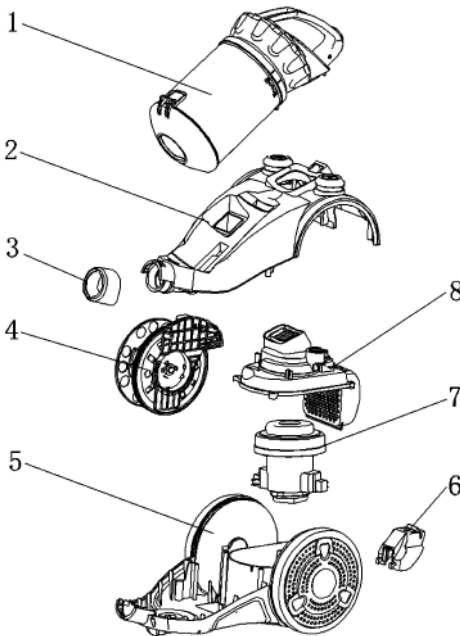


- 1. Dust cup
- 2. Middle frame
- 3. Pipe adapter
- 4. Reel
- 5. Base
- 6. Outgoing line cover
- 7. Motor
- 8. Motor hood


Disassembling and repair tools:

- 1. Philips screwdriver
- 2. Slotted screwdriver

 
If the dust collector cannot be started normally through the switch, disassemble it and check whether any wire in it is disconnected or whether the power cable is broken. If any wire is disconnected, connect it; if the power cable is broken, replace the reel with a new one.

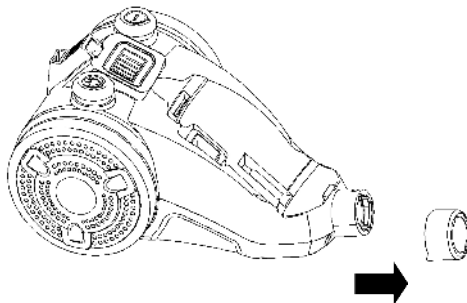

 
2. Turn over the dust collector, remove all the screws on its bottom (in the positions pointed by arrows) with a Philips screwdriver and dismount the middle frame.

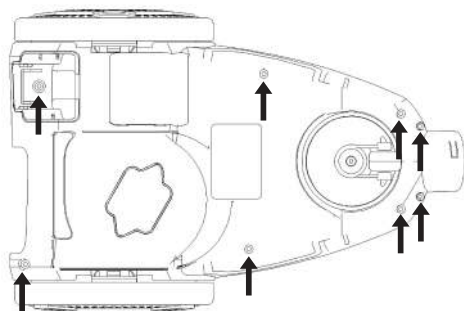

 3. Use a slotted screwdriver to remove the two screws pointed by the arrows and then the outgoing line cover pointed by arrow 1 (by pressing it gently with the slotted screwdriver). Pull the castors to one side as indicated by the arrow 2 and take out the reel.

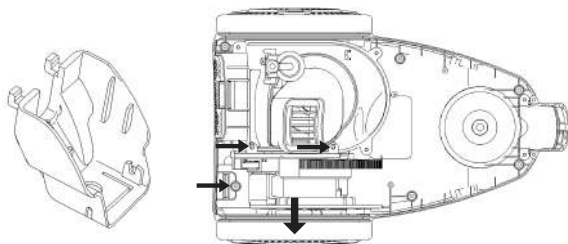

 
4. Check whether either internal wire terminals pointed by the arrows are disconnected from the reel. If they are, insert the wires; if they aren't, it is suggested that the power cable is broken and needs to be replaced with a new one. When replacing the original wire, insert it into the new reel and remount it.

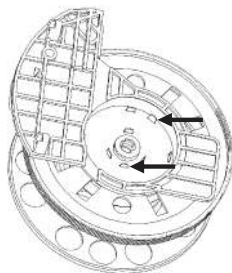


If the dust collector in service sounds abnormally, or if it smells pungently and cannot be started, it is suggested that the motor is damaged and needs to be replaced.

Method of motor replacement:

 1.Remove the four screws on the motor hood with a Philips screwdriver, open the motor hood and take out the motor. Keep in mind installation direction and wire positions of the motor when disassembling.

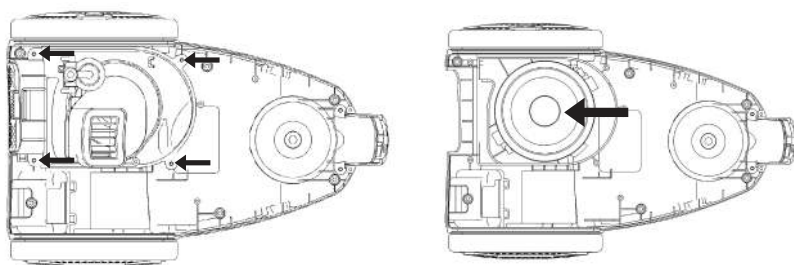

 2.Disconnect the two wires from the original motor, insert them onto the new motor, mount the rubber parts from the original motor onto the new motor, put the new motor into the base where the original motor was and finally install all the other parts back to their original positions.

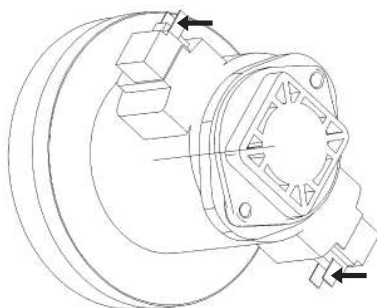

3. Before mounting the top cover, dismount the switch button. Do not mount the switch button again until all the screws and the pipe adapter have been properly mounted, otherwise the switch spring may dislocate.

