

145.00 mm

210.00 mm

MEDEK

8 Litre **Digtal** Air Fryer
USER MANUAL

RA810D



Instruction Manual

Please read carefully and save these instructions

TABLE OF CONTENTS

Important Safeguards 2

Important..... 5

Technical Specifications6

Parts 6

How to use your Air Fryer 6

Using the appliance7

After using your Air Fryer8

Cooking Manual9

Troubleshooting 11

Warranty and service13

IMPORTANT SAFEGUARDS



READ ALL INSTRUCTIONS BEFORE USE.

1. Always turn the appliance OFF and disconnect from mains power when not in use, before attempting to move the appliance and before cleaning or storing.
2. Never immerse the housing which contains electrical components and heating elements, the supply cord and plug in water or any other liquid, nor rinse them under the tap.
3. To prevent electric shock and short-circuit, avoid any liquid from entering the appliance.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years.
6. Do not leave the appliance unattended when in use or when connected to mains power.

CAUTION: Do not remove the pot until it is placed on a flat, firm and heat-resistant surface.

8. Surfaces may become hot during use. This is normal.

9. Do not let the cord touch hot surfaces, become knotted or hang from the edge of bench tops.
10. Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
11. Keep the unit clear of walls, curtains and other heat sensitive materials (leave a minimum distance of 20cm).

IMPORTANT! Do not place unit under shelving or flammable materials when in use.

12. Never overfill ingredients above the Max level mark in the pot. Keep all ingredients within the pot and do not overfill beyond the pot to prevent any direct contact with the heating element.
13. Do not move the appliance when in use.
14. Do not cover the air inlet or the air outlet when the appliance is working.
15. Do not touch the inside of the appliance while it is operating.
16. Do not use the appliance for any other purpose other than what is described in this manual.

WARNING: FIRE HAZARD. DO NOT fill the pan with oil.

17. Do not place anything on top of the appliance when in use and when stored.
18. Before connecting the appliance to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, DO NOT use the appliance.
19. This appliance is not intended to be operated by means of an external timer or a separate remote-control system.
20. The use of accessory attachments is not recommended by the appliance manufacturer may cause serious injury and/or damage to the appliance.

21. This appliance is for household use only not for commercial use. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
22. This appliance is intended to be **used indoors** in household and similar applications such as: staff kitchen areas in shops offices and other working environment, farm houses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
23. During hot air frying, hot steam is released through the air outlet. To avoid scalding keep a safe distance from steam and the air outlet.
24. Be careful of hot steam and air when you remove the pan from the appliance.
25.  **CAUTION: Hot surfaces. The baking pan and air outlet become hot when the appliance in use. Always use oven gloves whenis handling the baking pan.**

IMPORTANT!

- Use the appliance only on a dry, level, stable, and heat-resistant surface, away from any edges.
- Do not use the appliance under overhead cabinets or presses. The steam may cause damage to the cabinets or presses.
- This appliance must be connected to a three-point power outlet socket connected to Earth. If unsure check with an electrician.
- Never use the appliance with oil, this can cause a fire.
- Always unplug the power cord from mains power outlet socket when the appliance is not in use.
- Always allow the appliance to cool down completely before cleaning.

WARNING: To prevent risk of severe personal injury and/or property damage, use extreme caution when cooking.


- The manufacturer reserves the right to make changes to this appliance without prior notice.
- This item may vary slightly from the image but does not affect the specs as indicated.

Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the section “After using your air fryer”.

TECHNICAL SPECIFICATIONS

1. Rated Voltage: 220-240V~
2. Rated Frequency: 50/60Hz
3. Rated Power: 1800W
4. Capacity: 8L
5. Net Weight: 5.70kgs
6. Product Size: 330*300*365mm

PARTS

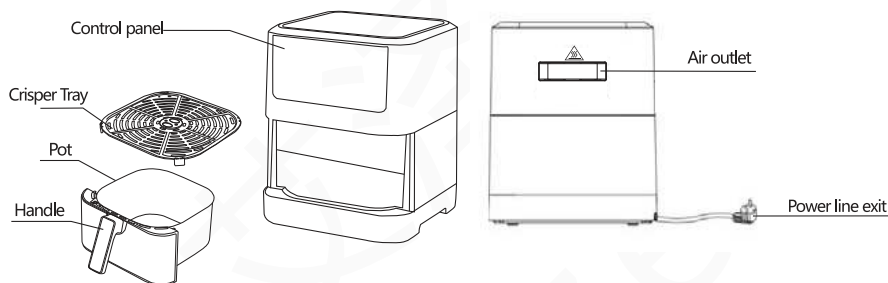

HOW TO USE YOUR AIR FRYER

Ensure the following before using the product:

1. Remove all the packing materials
2. Slide out the pot and clean it and the crisper tray with a non-abrasive sponge, hot water and dish washing liquid. Rinse with clean water and set aside to dry.
3. Wipe clean the inside and outside of the appliance with a slightly dampened cloth.

Preparing for use:


1. Place the appliance on a stable, horizontal, flat and heat resistant surface.

IMPORTANT! To prevent heat damage, place the appliance on

a heat-resistant surface only. Not recommended to use directly on laminated / vinyl bench top. Placing the air fryer on an insulated heat pad is recommended.

2. Remove the pot from the appliance and place on a flat surface.

Using the appliance:

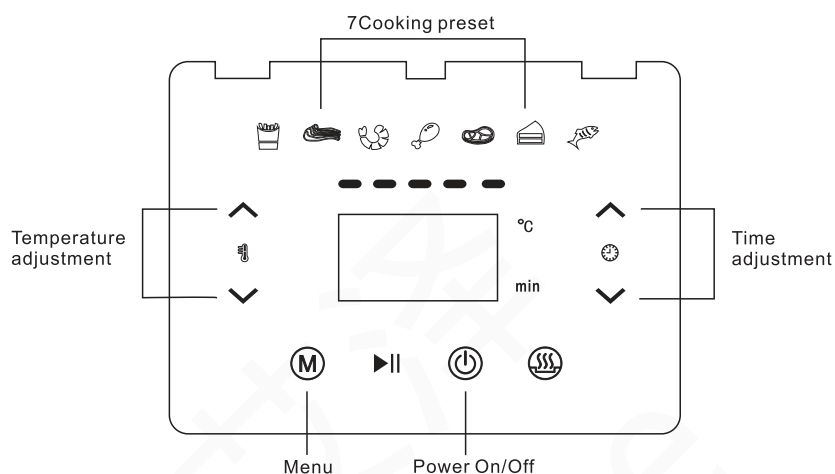

This appliance is able to cook a variety of dishes. Refer to the heading ‘Cooking Manual’ for setting temperature and times.

1. Plug the air fryer into an outlet.

2. Press Power On/Off  to light the LED display.

3. Put food into the pot.

4. Press Menu  to select or change the cooking function.

(The time & temperature setting can also be further adjusted, by touching the corresponding icons. When you want to adjust time, simply press the arrow up/down next to the time adjustment icon  on screen. This will Increase/Decrease 1 minute per press or you can increase/decrease rapidly by holding the respective button. When you want to adjust temperature, simply press the arrow up/down next to the temperature icon  on screen. This will Increase/Decrease 5 degrees per press or increase/decrease rapidly by holding the respective button.)

5. After choosing the desired settings, press icon  to start cooking.
6. When your selected cook time has elapsed, the bell in air fryer will ring.
7. Remove the pot carefully and place it on a heat-resistant surface

AFTER USING YOUR AIR FRYER

1. Remove the supply cord plug from mains power outlet socket and allow the appliance to cool down completely before cleaning. Clean it after every use.
- NOTE: Remove the pot to let the air fryer cool down faster.**
2. **Do not touch hot surfaces.**
3. **Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.**
4. Wipe the outside of the appliance with a moist soft cloth.
5. Clean the pot and the crisper tray with hot water, a non-abrasive sponge and dishwashing liquid.

NOTE: The pot and crisper tray are dishwasher-safe.

Tip: If dirt is stuck to the pot or crisper tray, fill the pot with hot water and some dishwashing liquid. Leave it in the pot to soak for about 10 minutes.

6. Clean the inside of the appliance with a slightly dampened cloth and polish it with a soft dry cloth.
7. If required, lightly brush the heating element to remove any attached food residue.
8. Make sure all parts are clean and dry before storing or using it again.
9. Store the air fryer in a safe, cool, dry place. Do not place heavy objects on top of the air fryer during storage as this may damage the appliance. Keep it away from children.

STORAGE:

- *Unplug the appliance and let it cool down.
- *Make sure all parts are clean and dry.
- *Place the air fryer in a clean and dry place.

COOKING MANUAL

	Min-max Amount(g)	Temperature °C	Time (Min)
Snacks			
French Fries ✓	300-500	200	15-20
Spring rolls	300-600	200	8-10
Frozen chicken nuggets	300-700	200	6-10
Frozen breadcrumbed cheese snacks	300-600	180	8-10
Stuffed vegetables	400-500	160	10-15
Meat			
Steak ✓	300-700	180	15-20
Shrimp ✓	300-700	160	15-20
Drumsticks ✓	300-700	160	30-40
Pork ✓	300-700	180	25-30
Fish ✓	400-700	180	15-20
Baking			
Cake ✓	500	160	20-25
Quiche	600	180	20-22
Muffins	500	200	15-18

NOTE: The temperature and time in the manual are approximates. You can adjust the time and temperature according to the volumes of the ingredients placed in the pot.

TROUBLESHOOTING

Problem	Possible cause	Solution
The fryer doesn't work.	The appliance is not connected to mains power outlet socket.	Connect the appliance into a mains power outlet socket.
The ingredients fried in the fryer are not done.	The amount of ingredients in the pot is too high.	Place smaller batches of ingredients in the pot. Smaller batches are fried more evenly.
	The set temperature is too low.	Set the temperature to the required temperature setting (refer to the above cooking manual).
	The preparation time is too short.	Set the timer to the required preparation time.
The ingredients are fried unevenly in the fryer.	Certain types of ingredients need to be tossed/turned halfway during the cooking process.	Ingredients that lie on top of or across each other (e.g. fries) need to be tossed/turned halfway during the cooking process (refer to the cooking manual).
Fried snacks are not crispy when they come out of the fryer	You used a type of snacks meant to be prepared in a traditional deep fryer.	Use oven snacks or lightly brush some oil onto the snacks for a crisper result.
Can't slide the pot into the appliance properly	There are too many ingredients in the pot.	Do not fill the ingredients over the "MAX" mark in the pot.
	The crisper tray	Push the crisper tray down into

	is not placed in the pot properly.	the pot until you hear a ‘click’.
White smoke comes out from the appliance.	You are preparing greasy ingredients.	When you fry greasy ingredients in the fryer, a large amount of oil will leak into the pan. The oil produces white smoke and the pan may heat up more than usual. This does not affect the appliance or the end result.
	The pan still contains grease residues from previous use.	White smoke is caused by grease heating up in the pan. Make sure you clean the pan properly after each use.
Fresh chips are fried unevenly in the fryer.	You did not use the right potato type.	Use fresh potatoes and make sure that they stay firm during frying.
	You did not rinse the potato chips properly before you fried them.	Rinse the potato chips properly to remove starch from the outside of the fries.
Fresh chips are not crispy when they come out of the fryer	The crispiness of the chips depends on the amount of oil and water in the fries.	Make sure to dry the potato chips properly before adding the oil.
		Cut the potato chips smaller for a crispier result.
		Add slightly more oil for a crisper result.

WARRANTY AND SERVICE

This Limited Warranty is for one full year from the date of purchase. It is applicable to the original purchaser only and is not transferable to a third party user. Repair or replacement of defective parts is solely at the seller's discretion.

In the event that repair isn't possible, the seller will replace the product/part. If product repair/replacement won't suffice, the seller has the option of refunding the cash value of the product or component returned. Product defects not covered under the Warranty provisions include normal wear and damage incurred from use or accidental negligence, misuse of instruction specifications or repair by unauthorized parties. The manufacturing company is not liable for any incidental or consequential damages incurred by such circumstances.

Important Notice:

Please retain original packaging for Warranty purposes. Please return with ALL supplied accessories.

Supplier reserves the right to make changes at any time without prior notice.



■ Recycling: This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Importer :MEDEK FRANCE ,
ADD :05 rue de Rouen 94700 maisons ALFORT France
MADE IN CHINA