

 
MEDEK



Before use,
please watch this
video carefully

INSTRUCTION MANUAL

CAPSULE ESPRESSO MACHINE

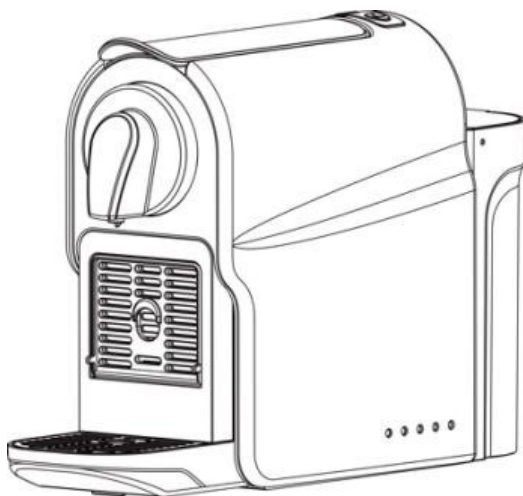

KM-C0518

Read this manual carefully before using the appliance.
Keep it for future reference.

INDEX

1. IMPORTANT SAFETY PRECAUTIONS	2-5
2. TECHNICAL INFORMATION	6
3. GETTING TO KNOW YOUR COFFEE MACHINE	7
4. USING YOUR COFFEE MACHINE	8-10
5. PERSONALIZED SETTING	10
6. RESET TO FACTORY SETTINGS	11
7. TROUBLESHOOTING	11
8. CLEANING AND MAINTENANCE	12

IMPORTANT SAFETY PRECAUTIONS

The safety precautions are part of the appliance. Read all of the instructions in this manual carefully before installation or using your new appliance for the first time. Keep them in a place where you can find them and for future reference.

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

The coffee-maker shall not be placed in a cabinet when in use.

Regarding the instructions for cleaning surfaces in contact with food, please refer to the chapter "Cleaning and maintenance".

WARNING! Misuse may lead to injury.

The heating element surface is subject to residual heat after use.

- The appliance is intended to prepare beverages according to these instructions.
- Do not use the appliance for other than its intended use.
- This appliance has been designed for indoor and non-extreme temperature conditions use only.
- Protect the appliance from direct sunlight effect, prolonged water splash and humidity.

IMPORTANT SAFETY PRECAUTIONS

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance
- The manufacturer accepts no responsibility and the warranty will not apply for any commercial use, inappropriate handling or use of the appliance, any damage resulting from use for other purpose, faulty operation, non-professionals' repair or failure to comply with the instructions.

Avoid risk of fatal electric shock and fire.

- In case of an emergency: immediately remove the plug from the power socket.
- Only plug the appliance into suitable, easily accessible, earthed mains connections. Make sure that the voltage of the power source is the same as the specified on the rating plate.
- The use of an incorrect connection voids the warranty.

IMPORTANT SAFETY PRECAUTIONS

The appliance must only be connected after installation.


- Do not pull the cord over sharp edges, clamp it or allow it to hang down.
- Keep the cord away from heat and damp.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid all risks.
- If the cord is damaged, do not operate the appliance.
- If an extension cord is required, use only an earthed cord with a conductor cross-section matching input power.
- To avoid hazardous damage, never place the appliance on or beside hot surfaces such as radiators, stoves, ovens, gas burners, open flame, or similar.
- Always place it on a horizontal, stable and even surface. The surface must be resistant to heat and fluids, like water, coffee or similar.
- Disconnect the appliance from the mains when not in use for a long period.
- Disconnect by pulling out the plug and not by pulling the cord itself or the cord may become damaged.
- Before cleaning and servicing, remove the plug from the mains socket and let the appliance cool down.
- Never touch the cord with wet hands.
- Never immerse the appliance or part of it in water or other liquid.
- Never put the appliance or part of it in a dishwasher.
- Electricity and water together is dangerous and can lead to fatal electrical shocks.
- Do not open the appliance. Hazardous voltage inside!
- Do not put anything into any openings. Doing so may cause fire or electrical shock!

IMPORTANT SAFETY PRECAUTIONS

Avoid possible harm when operating the appliance.

- Never leave the appliance unattended during operation.
- Do not use the appliance if it is damaged or not operating perfectly. Immediately remove the power plug from the power socket. Contact the authorized representative for examination, repair or adjustment.
- A damaged appliance can cause electrical shocks, burns and fire.
- Always completely close the operating lever and never open it during operation. Scalding may occur.
- Do not put fingers under coffee extraction nozzle, risk of scalding.
- Do not put fingers into capsule compartment or the capsule shaft. Danger of injury!
- Water could flow around a capsule when not perforated by the blades and damage the appliance.
- Never use a damaged or deformed capsule. If a capsule is blocked in the capsule compartment, turn the machine off and unplug it before any operation.
Contact the authorized representative.
- Fill the water tank only with fresh and potable water.
- Empty water tank if the appliance will not be used for an extended time (holidays, etc.).
- Replace water in water tank when the appliance is not operated for a weekend or a similar period of time.
- Do not use the appliance without the drip tray and drip grid to avoid spilling any liquid on surrounding surfaces.
- Do not use any strong cleaning agent or solvent cleaner. Use a damp cloth and mild cleaning agent to clean the surface of the appliance.
- To clean machine, use only clean cleaning tools.
- The manufacturer reserves the right to change instructions without prior notice.

TECHNICAL INFORMATION

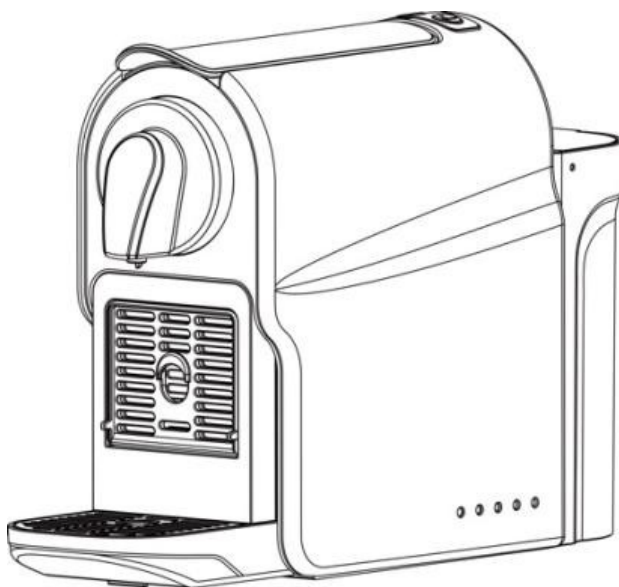

Compatible capsule: Same specification as Nespresso

Dimensions: 330*116*228mm

Approximate weight: 2.5KG

Water tank capacity: 0.65L

Used capsule tank capacity: 9-11 capsules

Rated power: 1350W

Rated voltage: 220-240V~

Rated frequency: 50/60Hz

GETTING TO KNOW YOUR COFFEE MACHINE

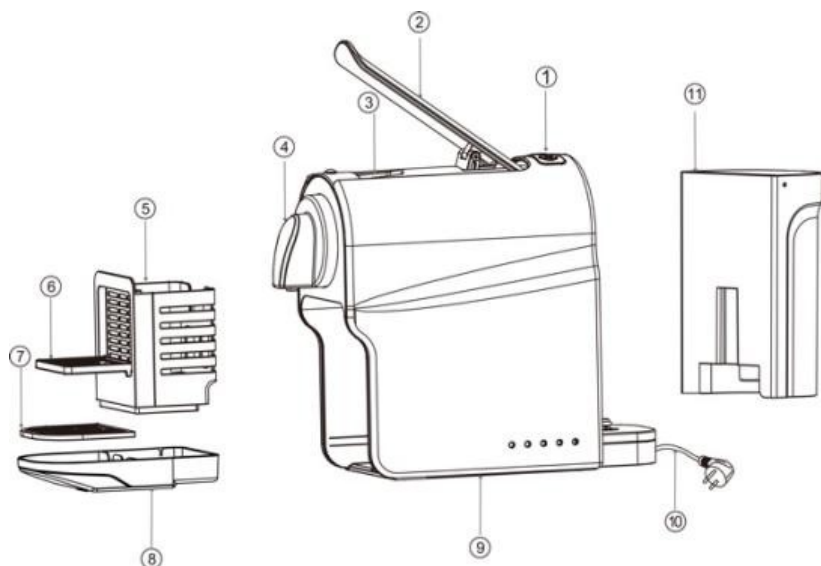


Fig.1

- 1. Coffee buttons
- 2. Operating lever
- 3. Capsule compartment
- 4. Coffee extraction nozzle
- 5. Used capsule container
- 6. Espresso coffee cup tray

- 7. Lungo coffee cup tray
- 8. Drip tray
- 9. Machine body
- 10. Power cord
- 11. Removable water tank

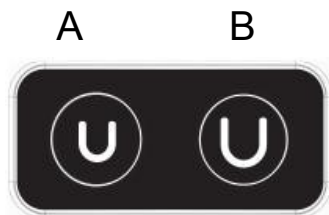


Fig.2
Control panel buttons


CONTROL PANEL

- A. Espresso coffee extraction button
- B. Lungo coffee extraction button


USING YOUR COFFEE MACHINE

Using your coffee machine for the first time


Confirm whether any accessories are missing and the appliance is not damaged. Then clean the inner parts, then install and operate the machine as per following steps with diagrams.

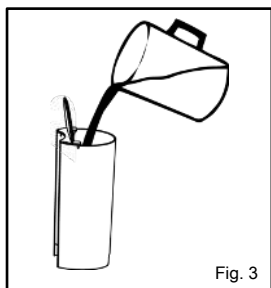


Rinse the water tank then filling with potable water

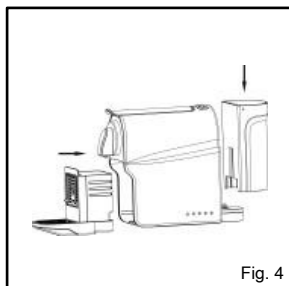


Install water tank, drip tray and capsule container in proper position on the machine

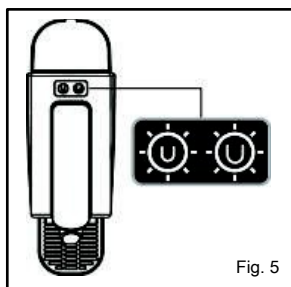


Turn ON the machine by connecting the plug into mains, both buttons blink for 3 times

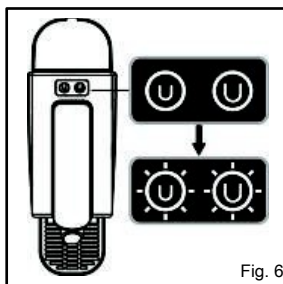

Press any button to start heating up with continually lights blinking for approx. 20-35 seconds

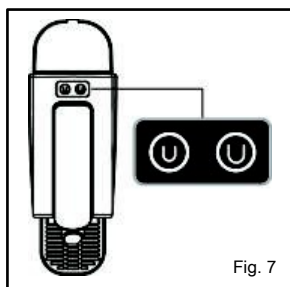

When buttons stop blinking and shows steady light, the machine is ready to use

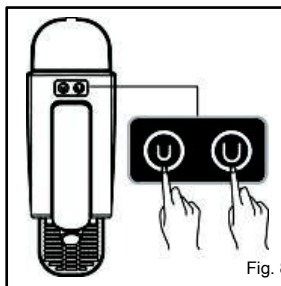

Press and hold Espresso and Lungo buttons simultaneously to turn OFF the machine



USING YOUR COFFEE MACHINE

Note: Before making any coffee, make sure to rinse your machine by:

- 1.Placing a container under coffee extraction nozzle.
- 2.Closing the operating lever and pressing the Lungo button to rinse the machine.
- 3.Repeat this three times.


Regular coffee extraction

After filling with potable water into the tank, repeat previous operations from step.5 to 7, then please start your coffee extraction as per following steps with diagrams.

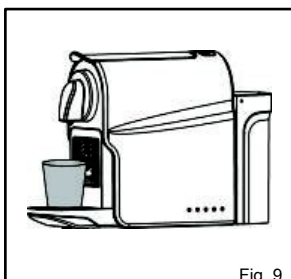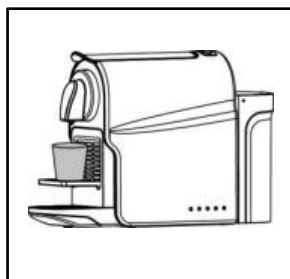


F

Place a cup on the coffee cup tray

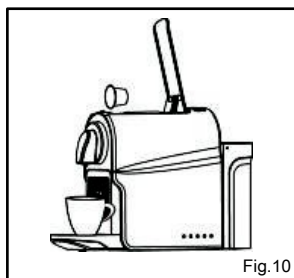


F

Open the operating lever, insert a capsule then closed

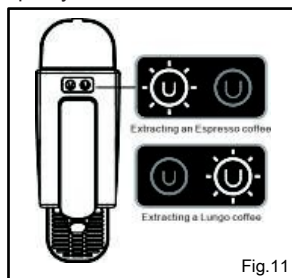

F

Press Espresso or Lungo coffee button with its light blinking, the coffee extraction operations starts

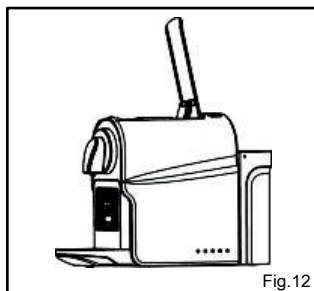

F

Open the operating lever after extraction stopped, the capsule will be automatically ejected and drop into the used capsule container

USING YOUR COFFEE MACHINE

Note:

1. The pre-defined factory volume for Espresso coffee ($35\pm 10\text{ml}$) / Lungo coffee ($65\pm 10\text{ml}$).
2. Extraction will stop automatically or press the selected coffee button to stop ahead.

Energy saving concept


- Automatic OFF mode: the machine will turn into OFF mode automatically after 30 minutes of non use. The boiler turned off and the external surface of the machine cools down. All button indicator lights on the control panel go out.
- When the user presses any extraction button again, the appliance exits standby mode, restart heating up process until "Ready to use" mode (see Fig.7) in approx. 20-35 seconds.

PERSONALIZED SETTING

The control panel also can be used to personalize the different extracted coffee capacity.

Note: The pre-defined factory volume for Espresso coffee ($35\pm 10\text{ml}$) / Lungo coffee ($65\pm 10\text{ml}$).

- Check whether there is any potable water in the water tank, ensure the machine is turned ON. Wait until the control panel buttons indicate "Ready to use" (see Fig. 7).
- Then press any coffee button and hold for 3 seconds until coffee flow out then release the button (see Fig. 13). As soon as the extraction has reached the capacity desired, press the selected coffee button again and the operation is complete.
- The machine will memorize current personalized setting and keep same capacity extraction for next time unless new programming has been defined.

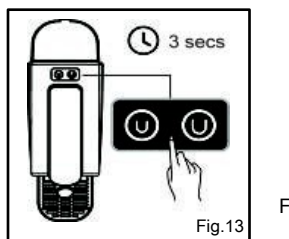

Programming the coffee extraction button

Note: If the user fails to press the coffee extraction button to complete the above operation, the appliance will automatically extract coffee for 2 minutes

(Volume of 500 ± 20 ml).

RESET TO FACTORY SETTINGS

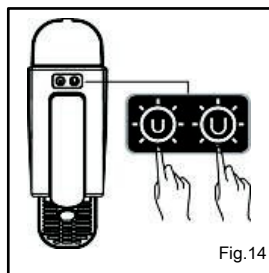


Fig.14

- Factory setting for Espresso coffee (35±10ml) / Lungo coffee (65±10ml).
- Ensure the machine is turned OFF without mains connected.
- After the power cable is connected to the socket, press the Espresso and Lungo cup buttons at the same time during the period when the indicator F flashes for three times to restore the factory settings.

Original setting of extraction buttons


TROUBLESHOOTING

• PUMPING


If the machine is not used for a long time, it may cause difficulties in pumping water. If so, please refer to the content below and make sure the machine is powered on and the heating process is complete.

- STEP 1#: Use a hand priming syringe to pump POTABLE water from the water tank.
- STEP 2#: Insert the hand priming syringe into the water tank during the machine runs under the "Lungo" mode. Continuously pump water 2-3 times.
- STEP 3#: Put the water tank back into the machine.

1#

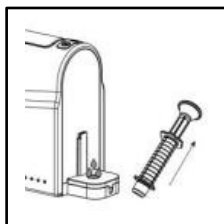

2#

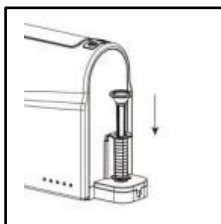

3#



• Alerts and alarms (NTC malfunction)

Both coffee extraction buttons blinking alternately (see Fig. 15)

Please turn the appliance OFF, wait for 2 minutes and turn it on again to check if the problem is solved. If not, contact the authorized representative for examination, repair or adjustment.

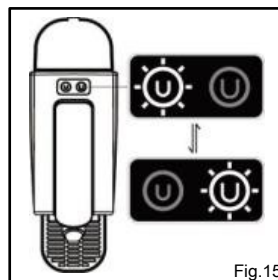


Fig.15

Luminous alert for NTC malfunction alarm

F

CLEANING AND MAINTENANCE

Warning: Always confirm that the appliance has been turned OFF from the mains after each use or before cleaning.

- Empty the drip tray and the used capsule container after each use.
- Clean the coffee extraction nozzle and inside the machine regularly with a damp cloth.
- Never immerse the appliance or part of it in water.
- Do not use any strong or abrasive solvent, sponge or cream cleaner. Do not put in the dishwasher.
- In order to keep your coffee machine working efficiently, you must regularly clean the mineral deposits produced by the water. You are recommended to carry out descaling to the appliance every three months or after approx. 200 capsules extractions.



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption

Power consumption in standby mode	0.5W
Maximum time required to automatically reach shut down mode	30min

Medek France
94700 maisons ALFORT France
MADE IN CHINA
<http://www.medekfrance.com>