

MEDEK

**HAND MIXER
INSTRUCTION MANUAL
Model:MEDSW**



Please read this booklet carefully before using and save it for future reference.

INSTRUCTION MANUAL



A. Ejector B. speed control C. Turbo
D. Housing E. Hooks F. Beaters

IMPORTANT SAFETY RECOMMENDATION:

1. Read the instructions for use carefully before using your appliance for the first time.
2. Don't use outdoors. Your appliance is intended solely for domestic use and within the home.
3. Don't use your appliance if it has been damaged. You should contact an approved service centre.
4. Never place the appliance, the power cable or water in any other liquid.
5. This appliance shall not be used by children.

Keep the appliance and its cord out of reach of children.

6. Never touch the beaters and dough hooks. When the appliance is operating, don't allow long hair, scarves etc. to hang down over the accessories when they are in operation.
7. Unplug the appliance before handling it in any way (fitting and removed of accessories.)
8. Never fit accessories with different functions at the same time. (Dough hooks and beater etc.)
9. The power cable must never be close to or in contact with the hot parts of your appliance. Close to a heat source or resting on sharp edges.
10. If the supply cord is damaged, the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard, must replace it.
11. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the

hazards involved.

12. Children shall not play with the appliance.

13.If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

14.Please cut off the power when nobody use it or before pull down, fix and clean it.

15. The instruction manual should be included operation time of attachment.

16. Please cut off the power, when you want to change addition parts or similar parts during using.

Regarding the instructions for cleaning surfaces in contact with food, please refer to the chapter “Cleaning and maintenance”. Switch off the appliance and disconnect from the power supply before changing accessories or approaching parts that move in use. Always disconnect the appliance from the supply if it is left unattended

and before assembling, disassembling or cleaning.

WARNING! Misuse may lead to injury. Only use accessories and spare parts that are supplied or recommended by the manufacturer. The use of accessories and spare parts that are not recommended by the manufacturer may result in personal injury

HOW TO USE THE APPLIANCE

Beaters and dough hooks

1. Insert the beaters or dough hooks until they are locked into place. Always insert the accessory equipped with a toothed crown into the opening indicate on the appliance by a crown which is similarly toothed.
2. Plug in the appliance.
3. Depending on the quantity to be prepared. Place the ingredients in an appropriate container.
4. Plunge the beaters or hooks into the container and start the appliance by turning the control knob to the right.
5. Turn the control knob to the right in “1”~ “5”.

6. Depending on the model, the appliance may be equipped with a turbo button which allows your appliance to reach top speed.
7. When you have finished using it, reset the control knob to position "0".
8. Unplug the appliance.
9. Eject the beaters or dough hooks by pushing the eject handle.

MIXING INSTRUCTION

SPEED	DESCRIPTION
1-2	For mixing dry ingredients with liquids, folding whipped egg whites and cream into mixtures, stirring gravies and sauces and mashing vegetables.
3-4	For mixing cake mixes, puddings or batters. For using the dough hooks when mixing dough or heavier cake mixes.
5	For whipping cream, evaporated or powdered milk, egg whites or whole eggs.

For mixing minced meat or kneading heavy dough.

TURBO

Same as speed “5”

CAUTION:

1. After 3 minutes continuous use, allow a few minutes rest before next use.
2. Do not operate more than 3 minutes at one time.

HOW TO CLEANING

1. Unplug the appliance.
2. Clean the body of the appliance using only a damp cloth.
3. Clean the beaters or dough hooks under running water or in the dishwasher. Rinse and dry.
4. On completion of using your appliance it is strongly recommended that you clean the accessories immediately. This will remove any clinging food from the accessories. Preventing food drying out of the residue food. Making cleaning easier and the possibility of bacterial growth.

Technical Data:

Model: MEDSW

220-240V~ 50-60Hz 300W



Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

MADE IN CHINA

Importer : MEDEK FRANCE, Add : 05 rue de Rouen
94700 Maisons Alfort France