


INSTRUCTION MANUAL HANDLE HELD BLENDER SET

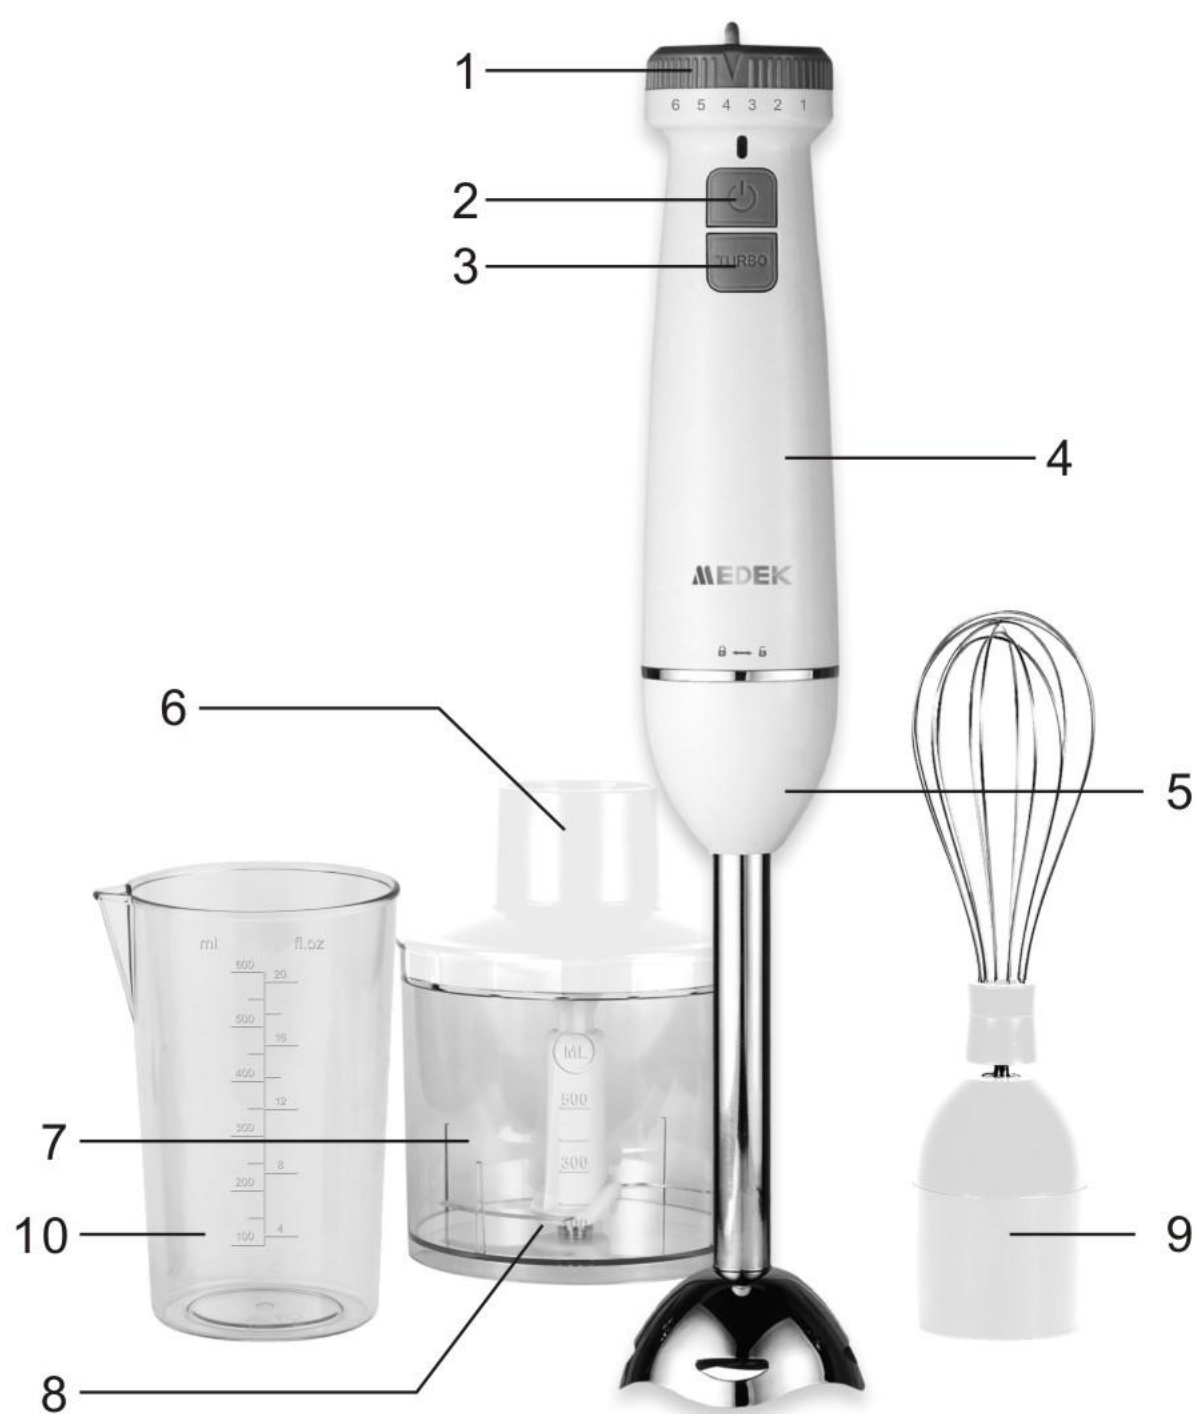

Model: MEDFY701
220-240V ~ 50-60 Hz 600 W

- 1. Speed control
- 2. One speed
- 3. Turbo speed
- 4. Blender body
- 5. Blender Shalft
- 6. Gear box
- 7. Chopper bowl
- 8. Chopper blade
- 9. Whisk
- 10. Beaker

WARNING! Misuse may lead to injury.
Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
Regarding the instructions for the use of accessories, operation times and speed settings, thanks to refer to the below paragraphs.
Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph of the manual.

IMPORTANT SAFETY RECOMMENDATION

1. Read the instructions carefully before using your appliances for the first time.
2. Make sure the rated voltage in your local place is conformity to the rating plate on the unit.
3. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. Do not use outdoors. The appliance is household use only.
5. Unplug your appliance when you finish using it or clean it.
6. Do not use the appliance if it has damaged. You should contact an approved service center.
7. If the supply cord is damaged, the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard, must replace it.
8. Do not allow long hair, scarves etc. to hang down over blender stick or whisk when they are in operation.
9. Never put the appliance close to heat source.
10. Please the note: The blades of the appliance are sharp. Handle the blades with care.
11. Before using your appliance first time, clean the various accessories carefully. Do not immerse motor unit in water or any liquid.
12. Save the instruction for your future reference.
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
14. Children shall not play with the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Switch off and disconnect from the supply the appliance before changing accessories or approaching parts, which move in use.
17. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

HOW TO USE STICK BLENDER

1. Twist the blender shaft onto the blender body at anti-clockwise until it is locked.
2. Plug in the appliance.
3. The beaker must be not more than 2/3 full to prevent over flowing.
4. Always use the stick blender to blend ingredients together with water or other liquid.
5. Do not use the stick blender to blend hard foods only, such as coffee bean, ice cubes, sugar, cereals, chocolate etc.
6. It has 6 speeds, which can be controlled from "1" to "6" according to different ingredients, with speeds ranging from low to high.
7. **Do not operate the stick blender more than 30 seconds at one time, allow a few minutes rest for next use.**
8. When you take out the blender shaft from the blender body, make sure of it unplugged.
9. Its blade is sharp, handle it with care to avoid any hurt of you.
10. The max. capacity of beaker is 600ml, the quantity of ingredients consist of 1 parts soaked carrots and 4 parts water.

HOW TO USE WHISK AND FROTHER

1. Turn the whisk or frother onto the blender body at anti-clockwise until it is locked.
2. Plug in the appliance.
3. Two speeds set for mixing eggs or creams etc. In operation, please take care of your long hair or scarves etc. hanging down over the rotating whisk to avoid any damage to you.
4. After using it, please do not press the switch to avoid liquid ingredient splashed to make your clothes or table dirty.
5. **Operate whisk each time for not more than 1 minute, otherwise the motor will be burnt if it is performed long time.**
6. Always unplug it after your using or cleaning.

HOW TO USE CHOPPER

1. Place chopping blade on the center pin of chopper bowl.
2. Fill in the food in chopper bowl, such as meat, cheese, onions, herbs, garlic, carrots almonds, prunes etc..
3. Put the gear box on the chopper bowl, and turn it at clockwise until locked.
4. Locate motor unit onto the gear box, and plug in.
5. Press the switch to operate the chopper. During the processing, hold the motor unit with one hand and other for chopper bowl.
6. After use, unplug it and take the motor unit from gear box; then remove the gear box.
7. Carefully take out the blade. Handle the blade with care because it is sharp!
8. Remove the processed food from the chopper bowl.

CAUTION: Chopping time does not exceed more than 30 seconds each time, and food quantity is under 500 g.

HOW TO CLEANING

1. Unplug the appliance.
2. Clean the body of the appliance with a damp cloth. Do not immerse the motor unit in any liquid.
3. The chopper gear box may be rinsed under the tap, but do not immerse it in water.
4. Clean the blades and accessories immediately after using, and avoid bacterial growth. Take care of the blades because they are too sharp!!

CAUTION: Use extreme care when handing the Double Blade Knife. Do not touch the Blades with your fingers. The Blades are very sharp and can cause injury if touched.

1. Carefully unpack the Stick Blender and all accessories.
- 2.

Wash the blender shaft, Chopper box , beaker and Whisk in warm soapy water. Rinse and dry thoroughly.

3. Never immerse the Blender Body, Gear box in water or any other liquid. If necessary, these attachments can be wiped clean with a moistened cloth. The Blender shaft can be washed under running water; but be careful not to allow water to enter the hollow shaft.
4. Always dry the Stick Blender thoroughly so that no water can enter the Blender Body.



Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption

Power consumption in off mode	0 W
Power consumption in standby mode	-- W
Maximum time required to automatically reach shutdown mode	-- min

Importer :MEDEK FRANCE ,
ADD : 94700 maisons ALFORT France

MADE IN CHINA