 


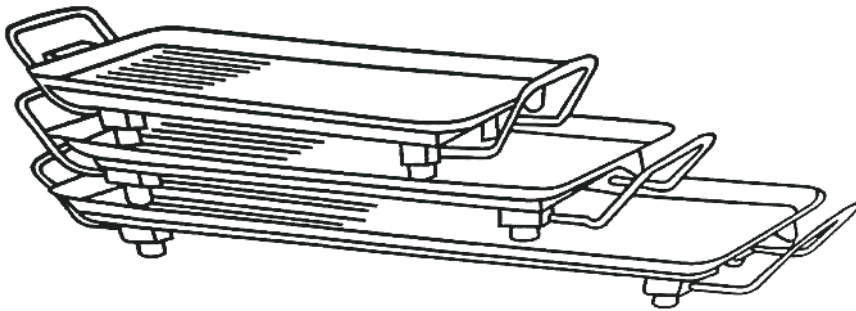

INSTRUCTION MANUAL
MULTIFUNCTIONAL ELECTRIC GRILL
MODEL:MEDG48

MADE IN CHINA

Thank you for buying our Multi- grill.

Please read these operating instructions carefully and keep them in a safe place. If you pass the unit on to someone else, please give them these operating instructions as well.

Important safety instructions:

- Please read these operating instructions through carefully before using the pan.
- Only connect the unit to an AC power supply. The voltage listed on the rating plate must coincide with the voltage of your power supply.
- Never leave the unit unattended during use.
- Keep children away from the unit. Pay particular attention when children are in the vicinity!
- Avoid danger of tripping, do not allow the electric cable to hang down.
- Keep the electric cable away from hot surfaces and open flames or sharp edges.
- Never touch the electric cable and plug with wet hands.
- Never immerse the unit, electric cable or plug into water or other liquids. Danger to life through electric shock!
- Do not use the unit outside.
- The unit is only intended for use in the house and not for commercial purposes.
- Check the unit, electric cable and plug regularly for visible damage. Do not use the unit under any circumstances if you have noted any damage.
- Have damage repaired by a qualified specialist only. Never attempt to repair any damages yourself.
- Only use the unit on a heat-resistance surface. Never position the unit close to hot surfaces or open flames.
- High temperatures are present during operation. Only touch the handles on the unit.
- The temperature regulator must not come into contact with the unit!
Always pull out the plug before removing the temperature regulator!

 
Packaging information:

The unit is packaged to protect against transport damage.

The packaging materials are recyclable. Please dispose of the packaging materials via the appropriate recycling system in an environmentally-friendly manner.


Unit overview:

- 1 Thermostat connector
- 2 Heating plate
- 3 Handles
- 4 Support

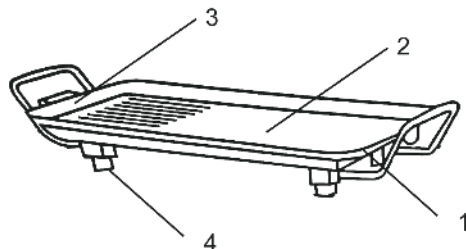

Temperature sensor:

 - 1 Temperature sensor
- 2 Electric plug
- 3 Electric cable
- 4 Temperature regulator
- 5 Control lamp


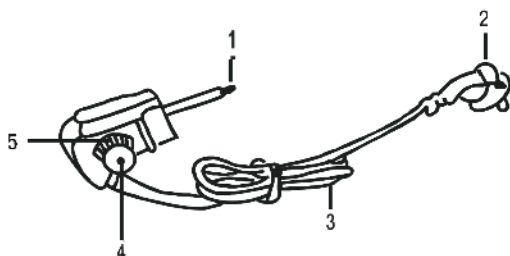


Preparing the unit:

Start-up:


Note:

  Before using the unit for the first time, carefully clean the unit and cover. Do not use any aggressive detergents, brushes with metal or nylon bristles or sharp objects such as knives or spatulas for cleaning the unit. Avoid damaging the non-stick coating. Always dry the unit thoroughly after cleaning it.

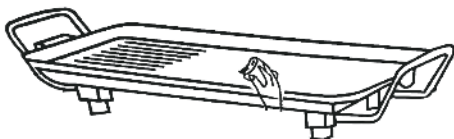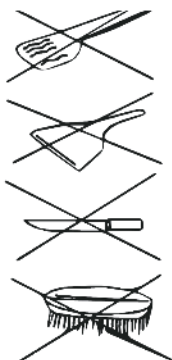

1. Connecting the unit:

1. Connect the temperature regulator to the base of the basic unit. Make sure that the plug is connected properly.
- 2 Set the temperature selector switch to heat level "0".
3. Connect the plug to a 220-240 V 50 / 60 Hz fuse socket

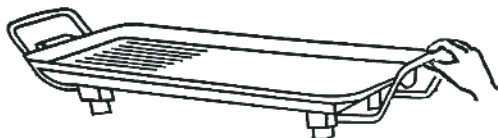

ATTENTION:

Do not use a multiple cables or extension cables



Preparing foods:

1. Brush the heating plate with a little cooking oil.
2. Set the temperature regulator to the required heat level.
The control lamp will light up to signal that the unit is ready for use (ON).




Heating levels	TemperatureC°	Food type
1 & 2	100-150 C°	Roasted food, meat, etc.
3 & 4	150-200 C°	Pancakes, scrambled eggs, bacon, etc.
5	About 240 C°	Grilled meat etc.
Thermostat		Warming function

It takes 5-10 minutes after the unit is switched on before the control lamp goes out. You can then start cooking the food.

Once cooking is complete, the unit can be kept warm. To do this, set the temperature regulator to the thermostat level.


Note:

1. Please be careful when using the aluminium plate hot, hands can not touch the baking tray
- 2.. Please do not use close to the oil splash hurt hands, head close to the eye injury
3. The whole baking tray cannot be put into the dishwasher.

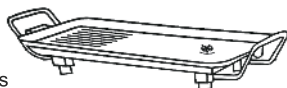

After use:

Set the temperature regulator to the 0 level and pull the plug out of the mains socket! Allow the unit to cool down thoroughly before cleaning it.

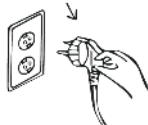

Claims & Warranties:

In case of possible product defects, please contact the dealer from whom you purchased the device. For this reason we recommend you save your purchase receipt.

Important note: Please **do not** send your device to our address without having been requested to do so by our Service team. The costs and the risk of loss for unsolicited mailings will be undertaken by the sender. We reserve the right to refuse the acceptance of unsolicited mailings or to return the corresponding merchandise to the sender carriage forward, that is, at the sender's expense.