

MEDEK

INSTRUCTION MANUAL

MEDLB70 Chopper



Before use, please watch this video carefully

This equipment power management function is inappropriate as for the intended use.

● IMPORTANT SAFETY INSTRUCTIONS

- ** Read all instructions before using.

● **Please learn this part well and use the appliance correctly.

These instructions explain the possibility hazards and accidents involved. ● The input voltage is 220-240V~ 50/60Hz.

● Be sure to cut off the power before dismantling /assembling or adjusting the appliance.

● If the cable is damaged, return the appliance, to avoid hazard.

● The chopper won't run unless it's properly assembled. ● Don't detach or amend the appliance by non-professional repair personnel, to avoid hazard.

● Don't use the appliance for any purpose other than those described in these instructions.

● Don't use the appliance run empty or overload.

● Please do not heat the appliance in the microwave oven or freeze in the refrigerator, to avoid appliance burst.

● Please do not use the appliance for dry grinding hard food like soybean, rice and frozen meat etc., and succulent liquid foods. ●

Please do not touch the blade unit or motor during the appliance is running, to avoid personal injury or damage the appliance. ● Don't run the appliance for more than 30seconds continuously, after 30 seconds, let it cool for 2 minutes before using it again.

- Please cut off the power before you open the appliance. Don't open the chopper till the motor and blades stop moving.

- If the appliance stops running during the normal operation, maybe it is caused by motor temperature protection. Please turn off the swift and cut off the power, cool it about 20-30 mins before using again.
- The chopper bowl and blade unit lid can use 100°C hot water for cleaning and sterilizing.
- Don't put the motor unit in water or other liquid, or wash it by water or the other liquid.
- Please DO NOT use steel ball and the other abrasive cleaning tools to avoid scratch the appliance.
- Don't use dishwasher to clean the appliance.
- Keep the appliance and cable out of reach of children and persons with no capacity. Children must not use or play with the appliance.
- The appliance is only suitable for personal or family use. It's not suitable for commercial use.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Children shall not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order

to avoid a hazard.

- Warning: potential injury from misuse.
 - Be careful when handling the sharp cutting blades, emptying the bowl and during cleaning.
 - Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.
 - Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use. ●
- Regarding the operating times and speed settings for accessories, thanks to refer to the following section.
- Regarding the cleaning surfaces in contact with food, thanks to refer to the following section.
 - The appliance is only suitable for personal or family use. It's no suitable for commercial use.
 - Only use accessories recommended by the manufacturer and those provided with the appliance, otherwise they could constitute a danger to the user and a risk to the appliance.

● TECHNICAL SPECIFICATIONS

Model:	MEDLB70
Voltage/Frequency:	220-240V~ 50/60Hz
Power rating:	400W

Capacity	1.5 L
Speed	2 Speeds

● KNOW YOUR MINI CHOPPER

1.I level Button

2.II level Button

3.Power cord

4.Motor unit

5.Lid

6.Side blade unit


7.Main blade unit

8.Hand shank


9.Bowl

10.Non Slip mat

11.Spatula

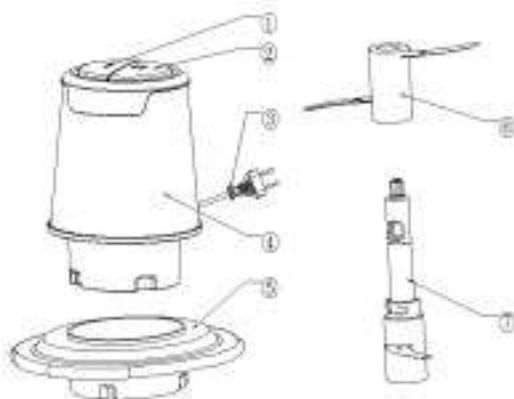

Item	Part	Function
1	I level Button	To contrc
2	II level Button	To contrc and carr
3	Motor unit	Main unit

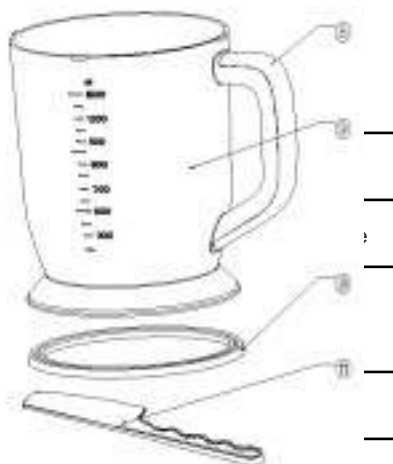

4	Lid	Safety protections during operation
5	Side blade unit	Making food (vegetable, fruit, meat) mud and stuffing after assembling with main blade unit, bowl and lid.
6	Main blade unit	Making food (vegetable, fruit, meat) mud and stuffing after assembling with side blade unit, bowl and lid.
7	Bowl	Serving food
8	Non Slip mat	Anti-slip , need to assemble on the product during operation, can be detachable for cleaning
9	Spatula	Take out the food

The advantage of your mini chopper

- 1)S blade design make perfect chopper effect.
- 2)I level Button / II level Button can control the chopper level easily.
- 3)Motor overheat protection, good for safety use.
- 4)Plastic chopper bowl, healthy and easy cleaning.
- 5)Detachable parts, easy cleaning.
- 6)Change-speed gear box, smooth running, low noise and strong chopping
- 7)With Spatula and easily to take out food.

● HOW TO USE

Before using, please clean all parts which will touch the food.


- 1.Take out the mini chopper and accessories, use the food cleanser and water to clean the lid, main/side blade units, chopper bowl. Use wet cloth to clean the motor unit.
- 2.Put the anti-slip mat to the flat surface, then assemble the chopper bowl on it. Avoid knocking it by the other thing and keep it way from the children.

3.Assembling


- a) Put the chopper bowl on the non-slip mat. (Fig 1)



b) Fix the main/side blade unit into the blow shaft, then put the food. (Fig 2)

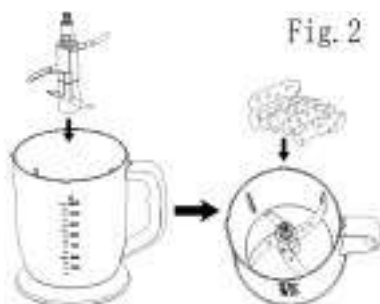

c) After putting the food, cover the lid as Fig 3.

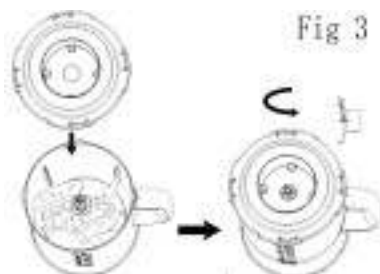

d) Put the motor unit on the chopper lid, the blade unit handle is aligning with the middle hole of main unit.(Fig 4)




06

e) After assembling the appliance well, plug in the power cord and press the switch, the appliance will start working. When the finger leave the switch, the appliance will stop running.

f) How to assemble/disassemble the main/side blade unit.

Assemble method: Put the side blade unit to the main blade unit (Fig 1 and Fig 2), and screw the side blade unit anticlockwise(Fig 3), then took off the blade protective sleeve Disassemble method: Take out the side blade unit by clockwise from main blade unit.

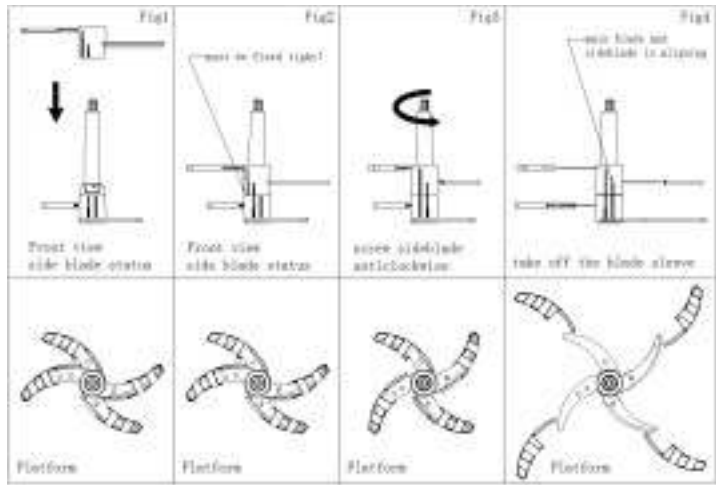

Remark

1. There are 2 anti -slip lines on main/side blade unit. If the 2 lines didn't align well it means you didn't assemble the main/side blade unit well.
2. If you didn't assemble the side blade well before using, the side blade unit may loose and touch the bowl or lid and hurt the human. Please use it correctly.
3. There is safety lock on the main unit. During operation, please lay the appliance flat and press the button strongly to start the operation, otherwise the appliance cannot be activated.
4. Meat food making method: can choose only single layer or double layers blades for your mini chopper. Installed the blade into chopping bowl, removed the muscle, bone, skin of the meat food before processing, cut the food into 1-2 cm massive and put into the bowl. The processing food cannot exceed the maximum limit of scale line of corresponding meat food. Fruits and vegetables making method: choose double layers blade, installed the main or side blade into bowl, cut the food into strips or massive, width of strip about 1-2 cm, length should not more than 5-10 cm. The massive food should not more than 2-3 cm. The processing food cannot exceed four-fifths of the total bowl, make the lid exact match the edge of the bowl.
5. Connect the power supply, press the switch lightly, start to work. Don't run the appliance for more than 30 seconds continuously
6. This appliance have 2 levels.
7. After processing, cut off the power. After the blade stopped running, move out the main unit and open the lid, remove the chopping blade, and take out the food with a spatula or chopsticks.
8. If the processing food stick on the bowl, please turn off the switch and cut off the power, use a spatula or chopsticks to scrape it off and then make the processing again.
9. If within 30 seconds haven't reached the effect you want, please loosen the switch and interval after 2 minutes again for processing, which is conducive to extend the product life.

07

Processing table

Ingredients	Recommended quantity	Ingredients	recommended quantity
Vegetable	70g	Bread	2 piece

Garlic	100g	Onion(quartered)	100g
Capsicum	70g	Pork(20mm cubes)	200g
Peanut	150g	Beef (20mm cubes)	200g

● **CLEANING AND MAINTENANCE**

- 1.Unplug before dismantling or cleaning
2.Wipe the outside of the motor unit with a clean damp cloth, don't immerse the motor unit in water. 3.Wash the removable parts in warm soapy water, rinse well, drain, and air dry 4.Don't put any part of the appliance in a dishwasher.
5.Blades are extremely sharp, please do clean it by hand directly to avoid injury. Please use clear water to clean it so that you can see blade clearly.
Please dry the appliance part before re-assembling the parts.

● **WARNINNGE**

Please check the plug before using. Ensure the plug is in good condition to avoid electric shock. 	Please use the rated voltage and use plug , don't use the universal plug with the other appliance 
Don't let the power cord hang over beside the table or touch the high temperature object. 	The appliance is only for indoor use. Don't used outdoor
Don't put the appliance into water or other liquid. Don't touch it by wet hand to avoid leakage of electricity accident	If the cable is damaged, don't use it to avoid hazard.

Don't retrofit the appliance. Don't detach or amend the appliance by non-professional repair personnel, to avoid fire, electric shock or injury	Keep the appliance out of reach of children and persons with no capacity
Don't touch blade to avoid injury	Don't run the appliance more than 30 seconds continuously

● COMMON PROBLEM ANALYSIS

Phenomenon	Reason	Handling method
The appliance cannot work after power on	Didn't cover the lid well	Check the lid and cover it well
Bad smell from motor	It normal phenomenon from new motor	If you have used several times but it still has bad smell ,please send it back to maintenance station.
The appliance stop running during the normal operation	1.The voltage is too low 2.Motor temperature protection	1.Check if the voltage is too lower 2.Rest 20-30 minutes
The knife was stuck Abnormal noise or	The knife was stuck by food	Turn off the swift, cut off the power, take out the food and cut them to small pieces

shock	1.Didn't assemble the blade unit well 2.Didn't put the appliance smoothly. 3.The voltage is too high 4.Too much food	1.Takeout the food and assemble the blade unit well 2.Put the appliance smoothly 3.Check if the voltage is too high 4.Turn off the swift, cut off the power, take out extra food
-------	--	---

Remark: If still unable to clear up the troubles after the above analysis, please contact our maintenance station or the dealer. It is forbidden to disassembly by non-professional personnel

09

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

The device complies with the European Directives 2014/35/EU and 2014/30/EU.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption
This equipment power management function is inappropriate as for the intended use.

Power consumption in off mode	0.175W
Power consumption in standby mode	N/A
Maximum time required to automatically reach shutdown mode	N/A

Importer: Medek France
ADD:94700 maisons ALFORT France
MADE IN CHINA