 


MEDEK

Instruction Manual

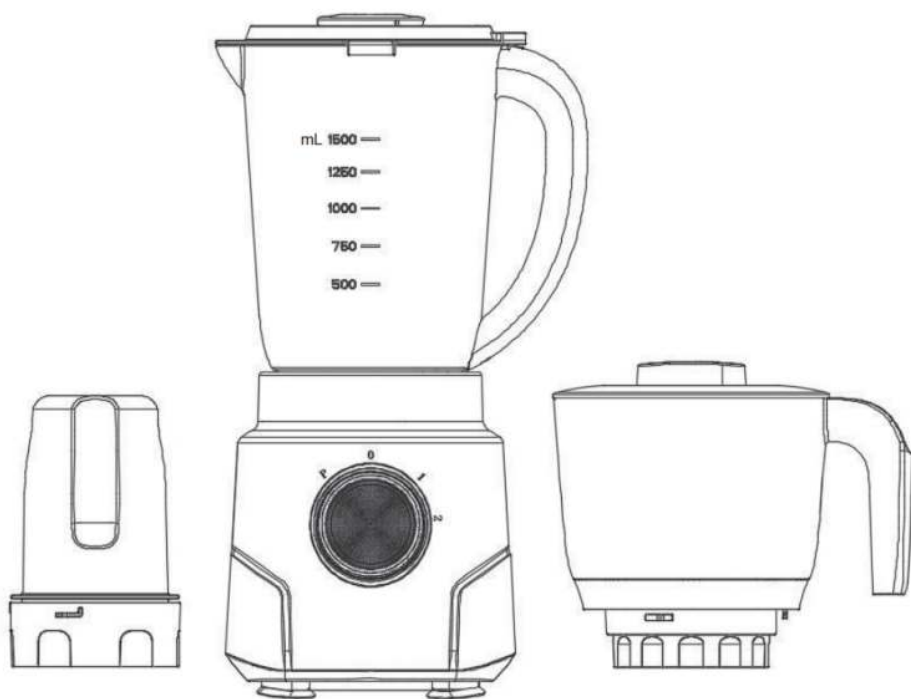

Stand Blender

Model no: MEDLB611

rated voltage: 220-240V~

rated frequency: 50-60Hz

rated power: 500W



Before use, please watch this video carefully

PLEASE RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE

IMPORTANT SAFEGUARDS

1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged , it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting the moving parts.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to "off", then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
12. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
13. Children shall not play with the appliance.
14. Do not leave the machine on unattended.
15. When removing the blender from the motor unit, wait until the blades have completely stopped.
16. Always operate blender with cover in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.

19. Do not use outdoors.

20. Do not use appliance for other than its intended use.

When you first use this product, you may smell some peculiar smell, this is a normal phenomenon when the motor is used for the first time, please don't worry, this smell will disappear automatically after a few uses

WARNING: Potential injury from misuse. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

CAUTION: Ensure that the blender is switched off before removing it from the stand.

Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.

Regarding the operating times and speed settings for accessories, thanks to refer to the following section.


Regarding the cleaning surfaces in contact with food, thanks to refer to the following section.

This appliance is intended to be used in household and similar applications such as:

- **staff kitchen areas in shops, offices and other working environments;**
- **farm houses;**
- **by clients in hotels, motels and other residential type environments;**
- **bed and breakfast type environments.**

For home use only

KNOW YOUR BLENDER

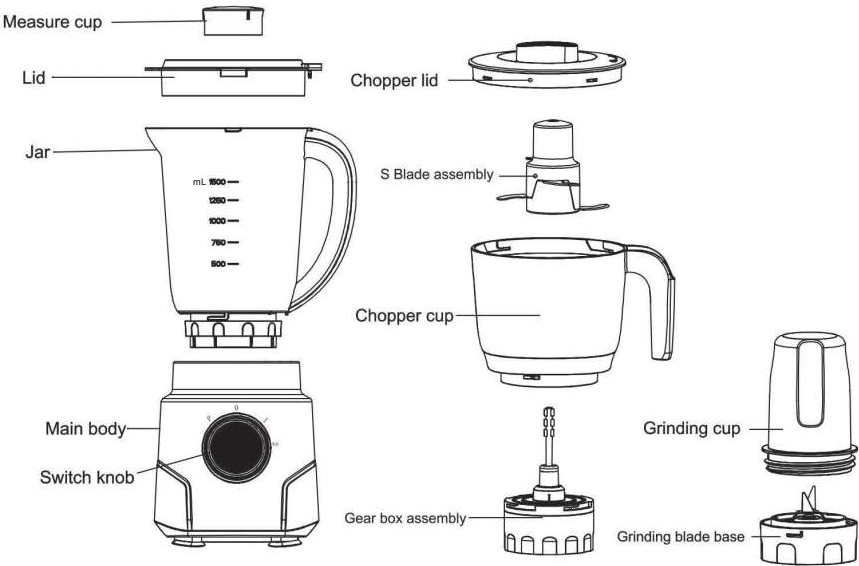

Instructions :
Before using the product for the first time, thoroughly wash the parts that come into contact with the food

Steps for usage:



1、 Juice cup assembly

(1) Wash and cut the ingredients and put them in the juice cup. Close the lid and turn the lid clockwise into place Insert the measure cup into the lid and turn it clockwise into place(Fig.1)

(2) Make sure the knob of the main unit is at the "0" position, Align the cup assembly with the lower part of the handle "▼" "



Install it at the "🔒" position on the main unit (Fig. 2), and rotate it clockwise in place (the cup is installed in place after you hear a "click" sound). At this time, "▼" is facing the host on the "🔒" position (Fig. 3)

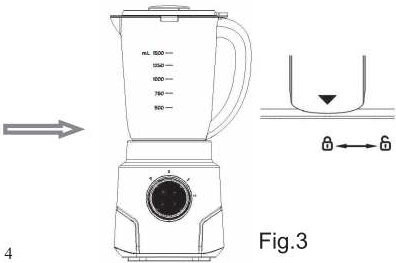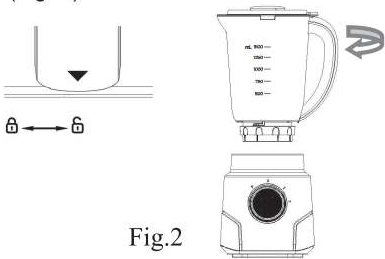

2. Chopper cup assembly

(1) Rotate the gearbox assembly clockwise from the bottom of the cup assembly up onto the chopping cup (Fig 4/Fig 5). The gearbox is properly installed once you hear a "click" sound.

(2) Align the handle of the chopping cup assembly (with the gearbox attached) with the "🔒" mark on the main unit, then rotate it clockwise to lock it onto the main unit. The cup assembly is properly installed once you hear a "click" sound. At this point, the handle of the chopping cup should be directly aligned with the "🔒" position on the main unit (Fig6/Fig7).

(3) Align the cross slot on the S-blade assembly with the flat part of the rotating shaft on the gearbox assembly, then place it into the cup. Next, add the ingredients, and rotate the chopping cup lid clockwise to fasten it. The cup lid is properly installed once you hear a "click" sound (see Fig 8/Fig 9).



fig4



fig5

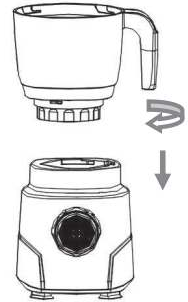


fig6

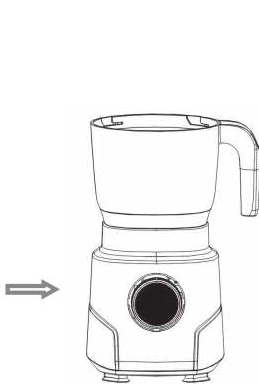


Fig7



Fig 8

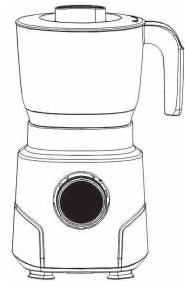


Fig 9

3. Grinding cup assembly

Place the ingredients into the grinding cup, then screw the grinding cup clockwise into the grinding cup blade holder until the "▼" mark on the grinding cup aligns with the "▼" mark on the grinding cup blade holder and further aligns with the "▼" mark on the main unit (Fig 10). Continue rotating it clockwise until it is in place—you will hear a "click" sound when the grinding cup is properly installed. At this point, the "▼" mark on the grinding cup should be directly aligned with the "🔒"

position on the main unit (Fig 11/Fig 12).

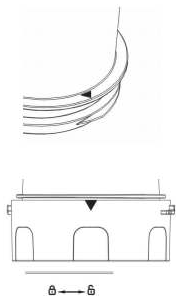


Fig 10

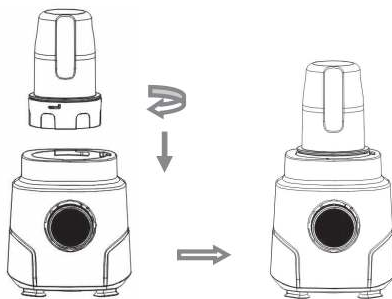


Fig 11

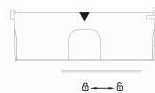


Fig 12

4. Rotate the knob to the corresponding speed level, the machine starts working.

How to use

The using of jar:

1. Peel or core the fruit or vegetable, then cut into small pieces (about 15X15X15mm).
2. Place the food to be blended into the jar. Usually, certain amount of drinking water or other liquids has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.

Note: Please do not add boiling water to the jar or run the appliance empty.

3. Put the lid on the cooking cup and make sure the measuring cup is closed.
4. Plug the power cord into a standard wall outlet.
5. Turn the speed control to the appropriate speed to set your mixing task.
6. For fast or fragile mixing tasks, turn the control knob to the P position and hold for a few seconds, then release, the control knob will automatically return to the "0" position. Do this a few times until you get the effect you want. If you want to add food while the food processor is working, please open the measuring cup and put the food into it through the feeding port of the cup lid (as shown in Fig 13).

Lid feeding port, you can add ingredients during the working process

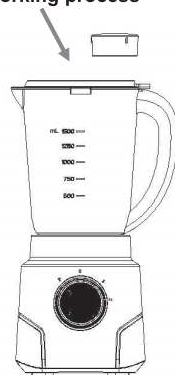


Fig.13

7. When the desired effect is achieved, turn the control knob to the "0" position.

Note:

- 1) For each use, the consecutive operation time should not exceed 3 minutes, and at least 10 minutes rest time must be maintained between two continuous cycles. Please let the unit cool to room temperature before performing next operation cycle.
- 2) If you want to stop the machine during operation, just push the knob to O position anytime.

The using of chopper

Cut the meat to be processed (deveined, maximum 300g) into cubes of approximately 30×30×30mm. For other fruits and vegetables, such as carrots, potatoes, and cucumbers, cut them into small pieces (approximately 15×15×15mm). Place the cut ingredients into the chopping cup with the S-blade assembly, and ensure the cup lid is fully closed and securely fastened. Adjust the knob to the appropriate gear according to your needs to start operation, and the continuous use time should not exceed 30 seconds.

The using of grinder:

Place coffee beans or shelled nuts into the coffee/nut grinding cup. Do not exceed the maximum capacity, which is equivalent to 100g of soybeans. The continuous use time of the coffee/nut grinding cup should not exceed 30 seconds.

When achieved the effect you want, turn the knob to O position.

CARE AND CLEANING

This product contains no user serviceable parts. Please ask service personnel for assistance.

1. Before cleaning, please unplug the power cord.
2. For easy cleaning, please clean it immediately after using this product. Because the food will stick to the cooking cup after drying, it will increase the difficulty of cleaning.
3. Pour a small amount of warm soapy water into the cooking cup, then turn the knob to the P position, and pour out the soapy water after running for a few seconds.
4. Remove all detachable components. Take the blending cup assembly off the base; the cup base can be removed by rotating it counterclockwise (see Fig 14) for cleaning. Disassemble the chopping cup and the gearbox assembly (see Fig 15), and disassemble the grinding cup (see Fig 16).



Fig 14



Fig 15



Fig 16

5. Components that can be rinsed with water: blending cup base, grinding cup blade holder, and chopping cup assembly.
6. Components that can be rinsed with water and cleaned in a dishwasher: measuring cup, blending

- cup lid, blending cup, chopping cup, chopping cup lid, S-blade assembly, and grinding cup. The temperature must not exceed 60°C.
7. Components that must not be rinsed, soaked, or cleaned in a dishwasher: main unit, and chopping cup gearbox assembly.
8. When cleaning the blades in the cooking cup assembly, first brush the blades with warm soapy water, and then wash them thoroughly under the tap. Do not touch sharp blades, handle with care. And please dry it upside down and keep it out of the reach of children.
- 8.Please dry the outer surface of the base with a damp cloth. Stubborn stains can be cleaned with abrasive cleaners. If liquid gets into the stand, please unplug it first, then wipe it dry with a dry cloth.

Warning

- 1) Do not immerse the base part in water to avoid electric shock.**
- 2) Please do not wash this product with rough washing pads or detergents.**
- 3) The base part is not dishwasher-safe, please do not put it in the dishwasher for cleaning.**



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption

This equipment power management function is inappropriate as for the intended use.

Power consumption in off mode	0,2 W
Power consumption in standby mode	N/A
Maximum time required to automatically reach shutdown mode	N/A

Medek France
94700 maisons ALFORT France
MADE IN CHINA
<http://www.medekfrance.com>