



Instruction manual



MULTIFUNCTIONAL ELECTRIC GRILL

Model :MED026-B

Rated power:2000W

Rated frequency :50/60Hz

Rated Voltage:220-240V ~

Cooking size: 90*23cm

***Non-stick coating for easy cleaning**

***With detachable temperature controller**

***With non skid feet**

***Thickness: 2.0mm**

Important safety instructions:

- 1,By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- 2,If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- 3,Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- 4,The appliance must be placed on a stable,level surface.
- 5,The user must not leave the device unattended while it is connected to the supply
- 6, This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments; – farm houses;
 - by clients in hotels, motels and other residential type environments; – bed and breakfast type environments.

7.This appliance shall not be used by children aged less than 8 years.This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

8,Keep the appliance and its cord out of reach of children less than 8 years.

9,Cleaning and user maintenance shall not be made by children unless older than 8 years and supervised

10,To protect yourself against an electric shock ,do not immerse the cord,plug or appliance in the water or any other liquid.

11,The temperature of accessible surfaces maybe high when the appliance is operating.

12,The appliance is not intended to be operated by means of an external timer or a separate remote-control system.

13,Only use the appropriate connector for this device.

Regarding the instructions for cleaning surfaces in contact with food, thanks to refer to the below paragraph "cleaning and maintenance"

BEFORE THE FIRST USE

Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.

Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products. •

Place a grease collecting tray below the grease drain. •

Place the supplied thermostat in the connection of the grill •

Put the power cable into the socket.(Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device. Voltage 220V-240V 50/60Hz)

Turn the thermostat clockwise to the highest setting and allow the device heating at least 5 minutes without food. •

When the device is turned on for the first time, a slight odour will occur. This is normal, ensure adequate ventilation. This odour is only temporary and will disappear soon. •

We advise to place a heat resistant coating between your table and the appliance (this way you don't get burn marks on your table or table cloth). •

Place the device in a well ventilated space.

USAGE


Preheat your appliance on the highest level for a few minutes until the temperature indicator goes off. •

The heating plate should be rubbed in with some food oil. •

Use the temperature knob on the supplied thermostat to choose the desired temperature.

The thermostat regulates a constant temperature. During cooking the indicator light on and off, this is normal, the temperature is constantly adjusting.

Never use sharp objects on the grill plate, this will damage the anti-stick coating.

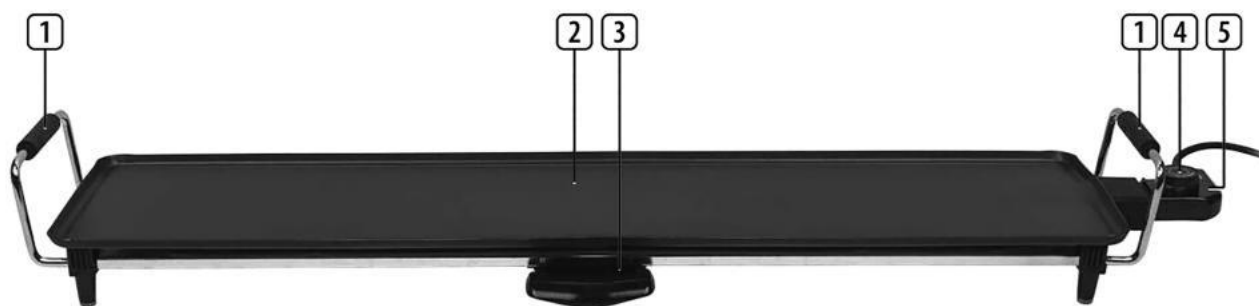

- (1) Handles
- (2) Baking plate
- (3) Grease drain
- (4) Temperature control knob
- (5) Heat up indicator

Carefully insert the thermostat unit firmly in the griddle connection point. Make sure the temperature knob is on «0» (off). Slide the grease drain under the appliance. Before inserting the plug in an earthed wall socket, check that the voltage corresponds with the information given on the information plate of the appliance. Make sure that nobody can trip over the cord or possible extension cord. Turn the temperature control knob to the required position 1-2-3-4-5

After Use:

Set the temperature control knob to the 0 level and pull the plug out of the earthed wall socket, Allow the unit to cool down thoroughly before cleaning it

CLEANING AND MAINTENANCE •

Before cleaning, unplug the appliance and wait for the appliance to cool down. •

Never pour cold water on a hot plate, this could damage the device and can cause splashing hot water. •

Wipe the inside and the edges of the appliance with a paper towel or a soft cloth.

Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the appliance. •

Remove and empty the fat collecting tray after each use and wash the tray in warm,soapy water.

The whole baking tray can not be put in dishwasher.



 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Importer: Medek France

ADD: 05 rue de Rouen 94700 Maisons-Alfort France

MADE IN CHINA