



## MEDS835 Capsule Coffee Machine Instruction Manual



**Please read the instructions and safety notes carefully before operation**

Index

1、 Safety Notice.....03

2、 Technical features.....04

3、 Brief Introduction..... 04

    1-1.Product photo..... 04

    1-2.Part description..... 04

4、 Installation.....05

    Installation Instructions .....05

5、 Operation.....05

    1.Operation of water tank .....05

    2.Preheating .....05

    3.Place the capsule.....05

    4.Put coffee cup .....06

    5. Make coffee.....06

    6. Buttons .....06

    7.Set the quantity of coffee..... 06

    8.Set the temperature of coffee.....06

6、 Maintenance and Care.....07

    Daily Cleaning and matters need attention...08

    Eliminate faults.....09

## Safety Notes

1. Please read the Manual and safety notes before operation and keep it well;
2. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.; Children shall not play with the appliance.
3. Please make sure the voltage indicated on the rating plate agrees with that of the electrical installation.;
4. Damaged power cord cannot be used; the machine shall stay away from heat sources and flammable materials;
5. Please do not use the machine in the open air, immerse it into liquid and get close to heat source;
6. If the power supply cord is damaged, it must be replaced by the manufacturer or its services agent or a similarly qualified person to avoid a hazard. Please keep the circuit dry and the use original accessories;
7. Turn off the power and unplug the power before moving the machine;
8. The original packaging can well protect the coffee machine during the transportation, please retain the packing box;
9. The proper use and maintenance can extend the service life of the coffee machine;
10. Please do not open any component of the coffee machine during the operation, and do not cut off the power supply as to avoid the deadlock of brewer or process chaos;
11. For machine failure, please consult the distributor duly, not dismantle the machine on your own; please bring the machine to authorized service center for repair if necessary. The manufacturer shall assume no liability for any accident incurred due to unauthorized disassembly;
12. The appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
13. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments.
  - Farm houses; -by clients in hotels, motels, and other residential type environments.
  - Bed and breakfast type environments
14. - The device must not be submerged.
  - the coffee maker should not be placed inside a piece of furniture when it is in use.
  - caution: avoid overflow on the connector.
  - warning: potential risks of injury in case of misuse.
  - the surface of the heating element has residual heat after use.
  - for detailed information on how to clean surfaces in contact with food, refer to the following paragraph of the package leaflet.
15. The appliance must not be immersed.

Warning: avoid spillage on the connector.

For details on how to clean the surfaces in contact with food, please refer to part "Maintenance and Care".

Warning: misuse may lead to injury.

The heating element surface is subject to residual heat after use.

The coffee-maker shall not be placed in a cabinet when in use


Warning: un-designated national standard grounding plug should not be used for avoiding danger.

2、 Technical features

Model: . . . . . MEDS835  
Dimension: . . . . . L 285\* W 132\* H270mm  
N,W. Weight: . . . . . 2.25Kg  
Length of Electric Wire: . . . . . 95cm  
Water Tank Capacity: . . . . . 0.82L  
Water Pump Pressure: . . . . . 19Bar  
Voltage / Frequency: . . . . . 220-240V 50/60Hz  
Power: . . . . . 1450W

3、 Brief Introduction

1-1、 product photo

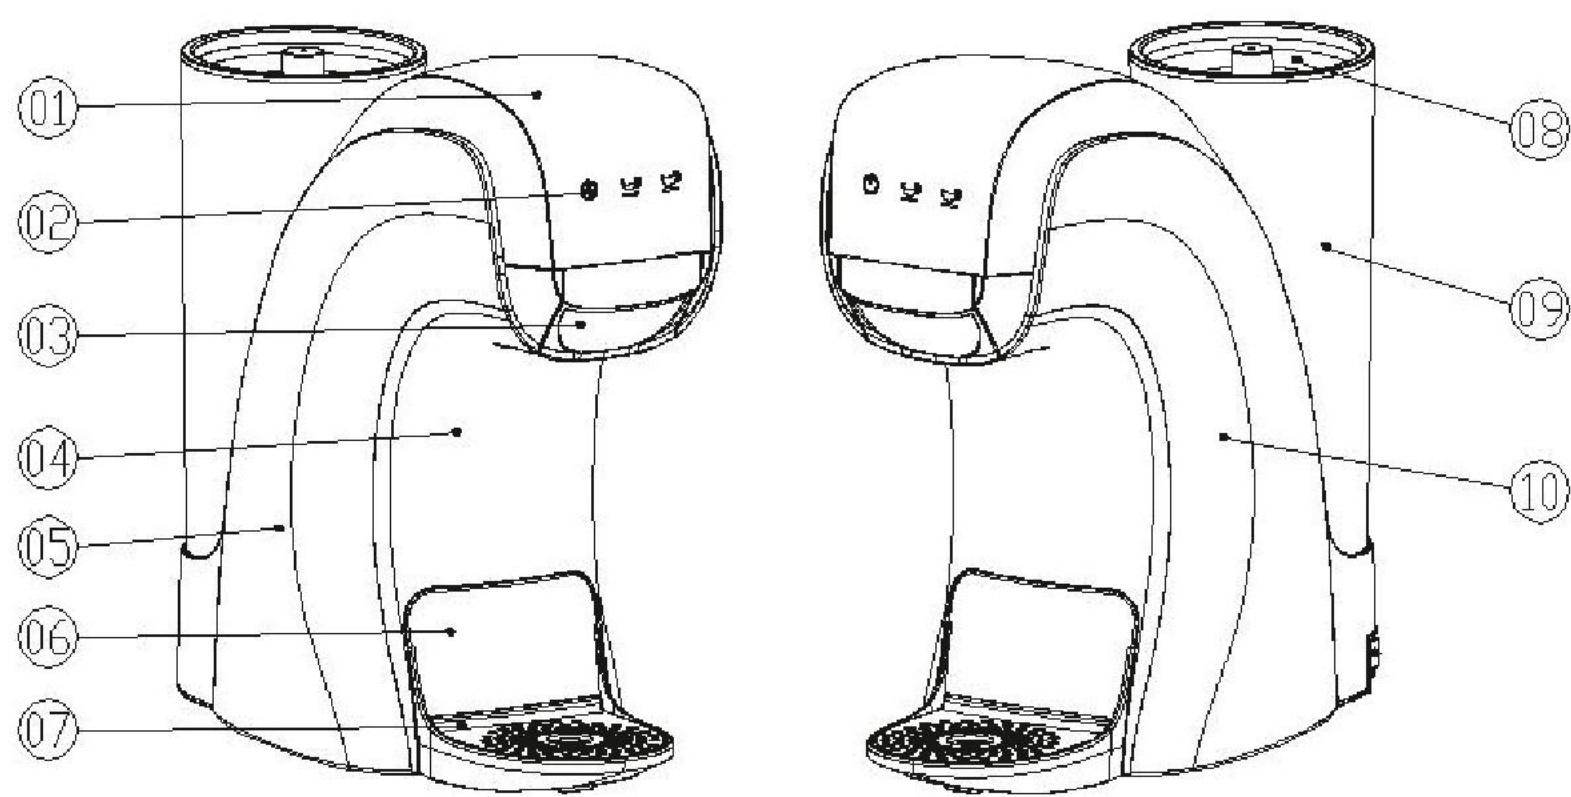

1-2、 Parts Description


|                  |                     |
|------------------|---------------------|
| 1、 Top cover     | 7、 Drip tray cover  |
| 2、 ON/OFF button | 8、 Water tank cover |
| 3、 Drawer        | 9、 Water tank       |
| 4、 Front cover   | 10、 Right panel     |
| 5、 Left panel    |                     |
| 6、 Drip tray     |                     |

# 4、 Installation

## Installation Instructions

- 1.Open the packaging to see whether there is any breakage or accessory parts shortage;
- 2.Place the machine in a dry secure place, which shall be adjacent to the current jack as well;
- 3.Take off the water tank, clean the tank, fill it with water, and then put it back on the machine (only cool purified water can be used, not hot water, tap water or other liquid) 。

# 5、 Operation

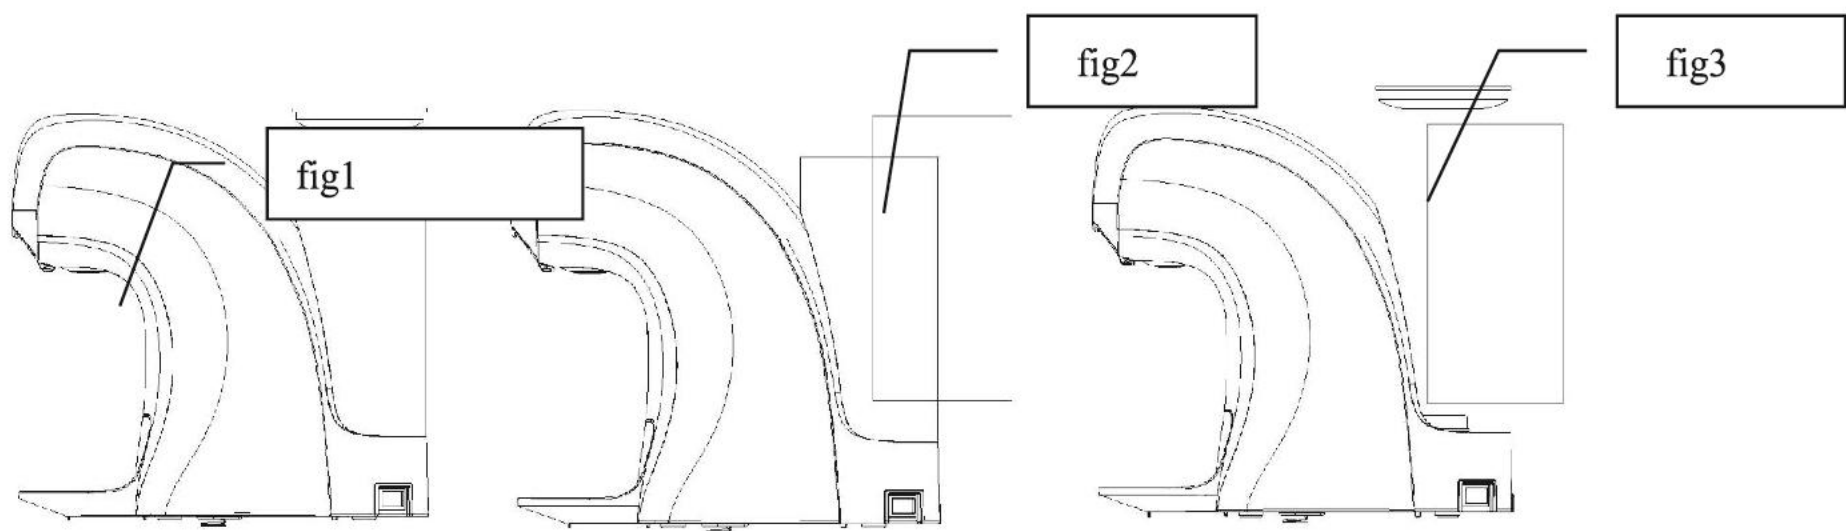


### 1、 operation of water tank

- 1 Unfold the water tank cover (fig 1)
- 2 Take the water tank from the machine (fig 2)
- 3 Fill in water (only cool purified water can be used, not hot water, tap water or other liquid), pay attention to the MAX marking, do not overfill (max. 820ml)
- 4 Replace the tank to the machine and cover the tank by the lid (fig. 1).
- 5 fold the water tank cover。 (fig. 1)

### 2. preheating


- 1 、 Fill in water, connect to power supply ,the button  (on/off) lighted in red; Switch on by pressing the button  (on/off), button  (on/off) flashes blue; the all 3 buttons light in blue which means the machine is standby for making coffee..

### 3.Place the capsule

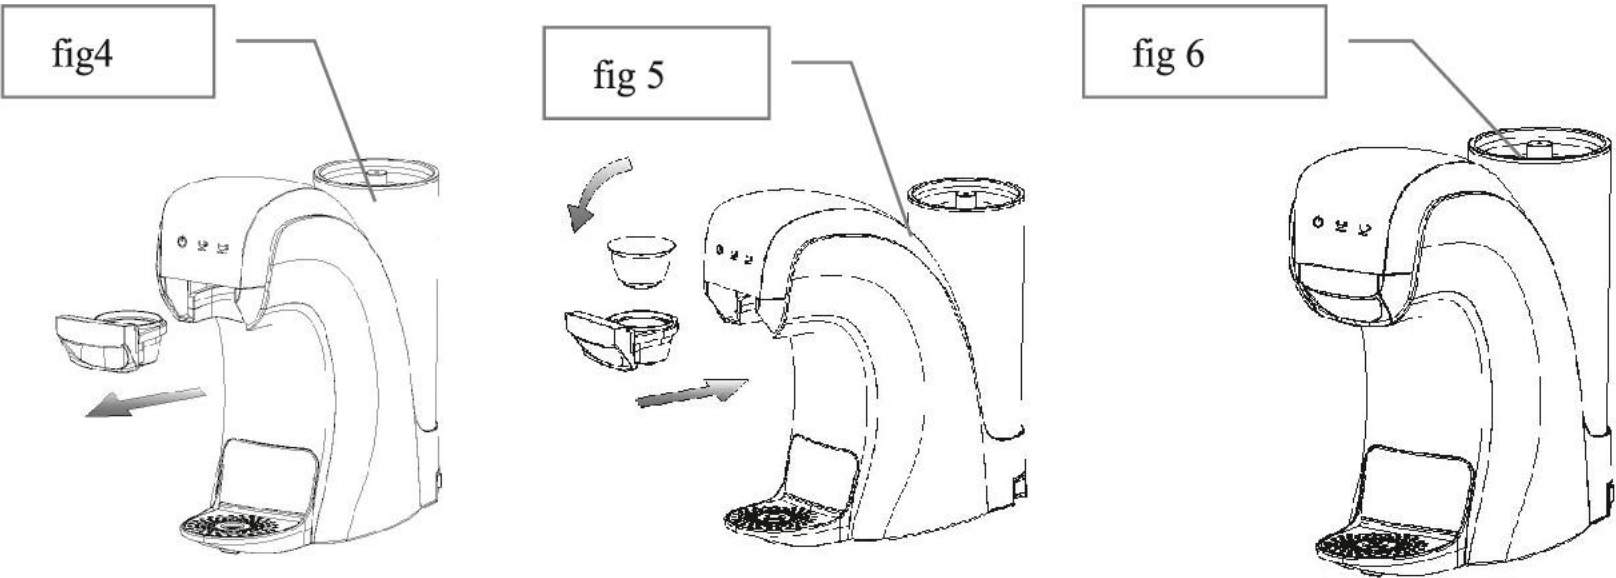

1. Pull out the drawer fig 4
2. Place the capsule in the right drawer (one capsule for each time),Each machine is equipped with three drawers, suitable for three different kinds of coffee, long and short coffee, ground coffee, tea and chocolat put the corresponding capsule, close the drawer and put it into the coffee machine to start making coffee fig 5
3. Insert the drawer into the machine, it is ready for making coffee.fig 5 and fig 6

put coffee cup

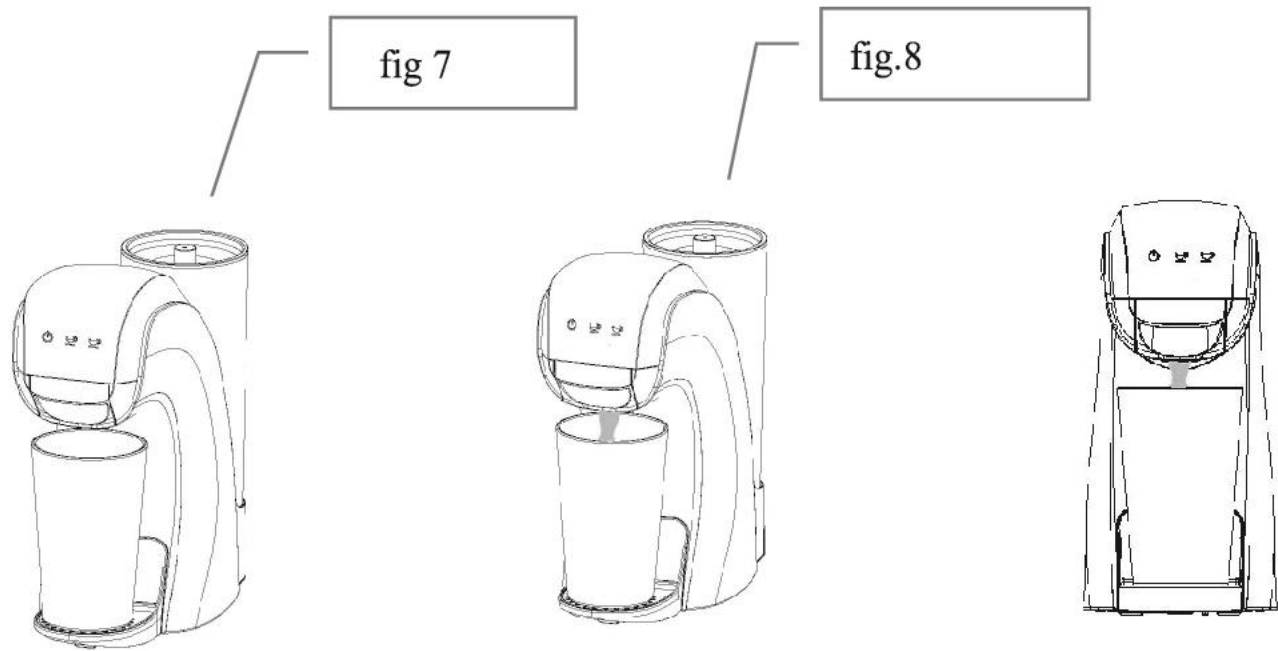

Put one coffee cup below the coffee nozzle for holding the coffee.

### 5.Make coffee

Choose a short or long cup, according to your demand (press the button for short or long one).

\* Long cup: brew 50s 110~120ml。 , brews around 110~120ml coffee.

\* Short cup: brew 30s 40~60ml。 , brews around 40~60ml coffee.

※ The time & volume will be different probably due to your chosen the different capsule brands.

### 6. Buttons

\*.on/off button (  )

\*.Short cup (  )

\*Long cup (  )

### 7.Set the quantity of coffee

1 、 according to the habit of user, adjust the coffee quantity by pressing the button of short cup or long cup. After preheating and when the machine were ready for making coffee (on/off button, short cup, long cup, all in blue):

\*Short cup button for adjusting the coffee quantity: press the button of short cup for 5 seconds then release the button, The light flashes rapidly, then press the small cup button if it gets coffee quantity that needed. The machine will remember the volume for making coffee, the same time will be used for making coffee for next times.

\*Big cup button for adjusting the coffee quantity: press the button of big cup for 5 seconds then release the button, the light flashes rapidly, then press the big cup button if it gets coffee quantity that needed. The machine will remember the volume for making coffee, the same time will be used for making coffee for next times.

2、 **back to the default setting**: press the both the short cup button and long cup button at the same time until short cup button and long cup button flash 3 times, the machine will return to the default settings.

**8.Set the coffee temperature**

1 、 according to the habit of user, adjust the coffee temperature by pressing the button of short cup or long cup. there are 6 levels for total, the normal one in the middle, could adjust up for 4 levels or adjust down 2 levels, **only when the machine is stand by position.** ( press the on/off button until it in red for long time), adjust the machine as below:

\*When the machine is plugged in, the left light will light up. Now the machine is in default 3 level. At this time, long press the right big cup key for 3 seconds, then add a 1level (the right big cup key will flash once). Long press the large cup key for 3 seconds, then add another level (the right large cup key flashes twice), a total of 6 level.

\*At this point, if you want to lower the level, hold down the middle cup button for 3 seconds and jump directly into second level.


\*If you want to return to the default third level, long press the large cup and small cup key for 3 seconds to recover. For example, press the left power key to exit when it is set well.

\*Back to the default setting of normal temperature: press both short cup button and long cup button at same time until both two buttons flash 3 times, the machine back to the default setting of temperature. **(Operate only when the machine is stand by position.)**

**9、 Maintenance and Care:**

**Daily Cleaning and matters need attention**

- 1、 Water Tank: Take off the tank, remove rest water, clean with a soft cloth and clean with clear water.
- 2、 Drip Tray & drawer: Take off them, remove water or coffee residue, clean with a soft cloth and clean with clear water.
- 3、 Outside: Wipe the outer surface with a soft cloth regularly. Keep the appliance clean, especially the switches and plug, to ensure safety.

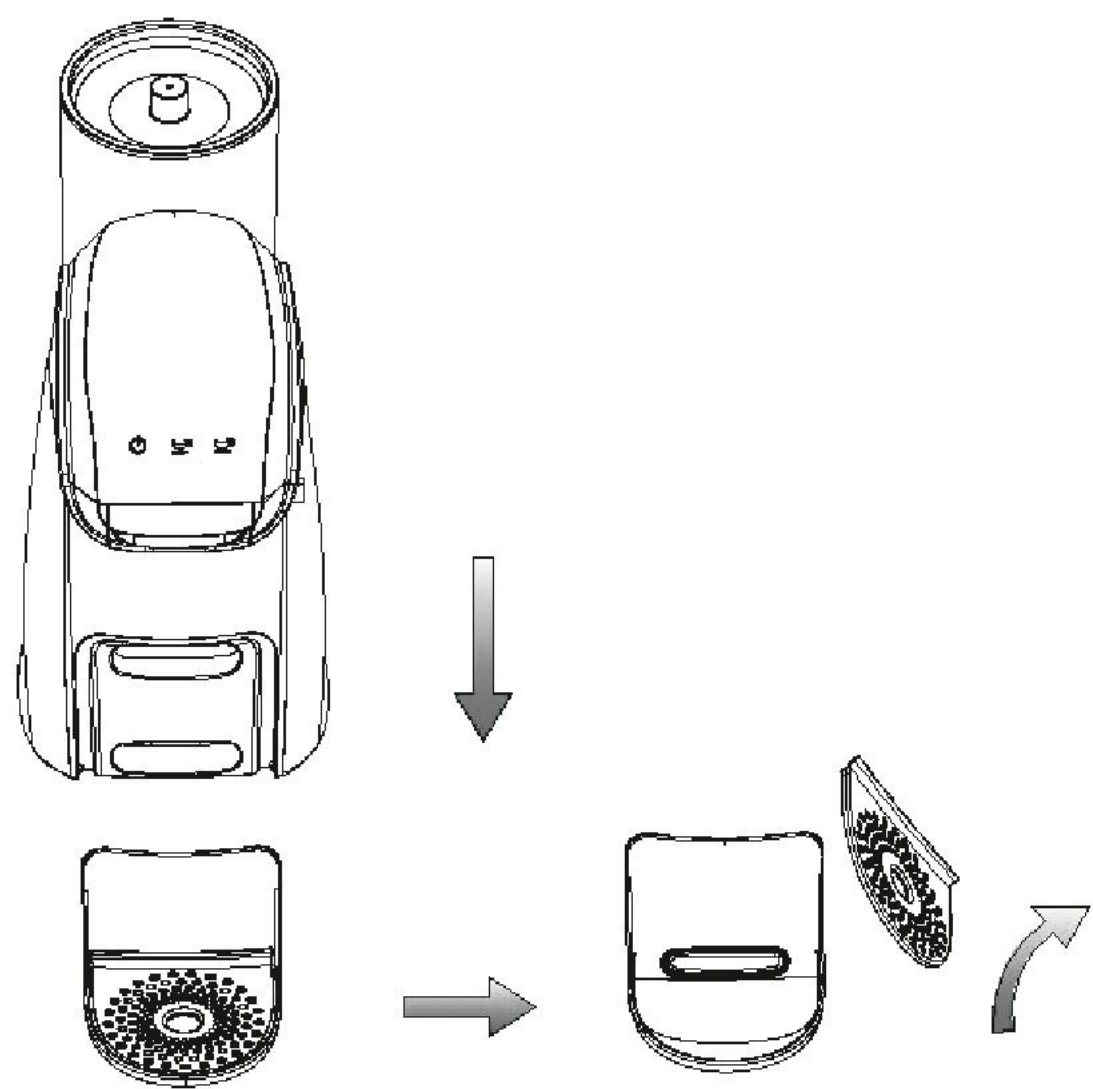

**Note: All parts are not allowed to wash the dishwasher or similar home appliances**

**Eliminate faults!**

|                                        |                                                                                                                                                                                                                                                                                                           |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No light                               | Check the power supplier,e.g. plug, voltage, fuse and main switch                                                                                                                                                                                                                                         |
| No coffee                              | Water tank empty? Fill water tank and press the button B（short coffee） and C（long coffee）several times to make sure the water tank supply water smoothly.<br>Used capsule is in the brewing system still, change a new one.<br>Make sure you choose the right drawer for the corresponding capsule brands |
| Non function after pressing the button | The placed drawer is not in the correct position, please pull and push the drawer again to make sure the drawer is in the right position.                                                                                                                                                                 |
| Coffee not hot enough                  | Preheat the cups and rinse with hot water or you can set the coffee temperature by manual as mentioned above                                                                                                                                                                                              |
| The drawer can't be pulled out         | turn off the machine, release the pressure inside the machine, try to pull out the drawer again.                                                                                                                                                                                                          |
| Big noise                              | Ensure the water tank is filled and the water tank is inserted well;                                                                                                                                                                                                                                      |
| The machine turns off by itself        | For protecting the machine and save energy sources, the machine will turn off after 25 minutes without any operation;                                                                                                                                                                                     |
| All lights flash                       | Switch off the machine for 1 minute and restart it again.                                                                                                                                                                                                                                                 |



■ This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Importer:**Medek France**

ADD:**05 rue de Rouen 94700 maisons ALFORT France**

MADE IN CHINA

Cet appareil est conforme aux exigences du règlement (UE) 2023/826 de la Commission européenne sur la consommation d'énergie en mode veille.

|                                                                         |       |
|-------------------------------------------------------------------------|-------|
| Consommation d'énergie en mode arrêt                                    | 0.28W |
| Temps maximum nécessaire pour atteindre automatiquement le mode d'arrêt | 25min |