

MEDEK

MANUEL

VACUUM CLEANER



Model No.MDK805

Please read the instruction manual carefully before operation.

IMPORTANT SAFETY INSTRUCTIONS

When using vacuum cleaner. Basic precautions should always be followed including The following

1. Check before operation that the local power supply is the same as the specifications on the rating plate
2. Do not use the vacuum cleaner to suck glowing ash, glowing cigarettes or matches, water, damp dust, etc.
3. Do not allow to be used as a toy. Close attention is necessary when used near children.
4. Do not leave the vacuum cleaner when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
5. Do not use outdoors or on wet surfaces.
6. Do not allow to be used as a toy, Close attention is necessary when used near children.
7. Use only as described in this manual, use only manufacturers recommended attachments.
8. Do not use with damaged cord or plug. If the vacuum cleaner is not working, as it should, has been dropped, damage, let outdoors, or dropped into water, return it to a service center before using.
9. Do not pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over cord. Keep cord away from heated surfaces.


10. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
11. Do not handle plug or the vacuum cleaner with wet hands.
12. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
13. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
14. Turn off all controls before unplugging.
15. Use extra care when cleaning on stairs.
16. Do not use to pick up flammable or combustible liquids, such as gasoline, matches, or use in areas where they may be present.
17. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
18. Do not use without dust bag and/or filters in place.
19. This appliance is intended for normal household use.
20. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user

maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

TECHNIQUE SPECIFICATION

Specification Model	Rated Voltage	Rated Frequency	Rated Power
MDK805	220-240V	50-60Hz	800W

PARTS IDENTIFICATIONS

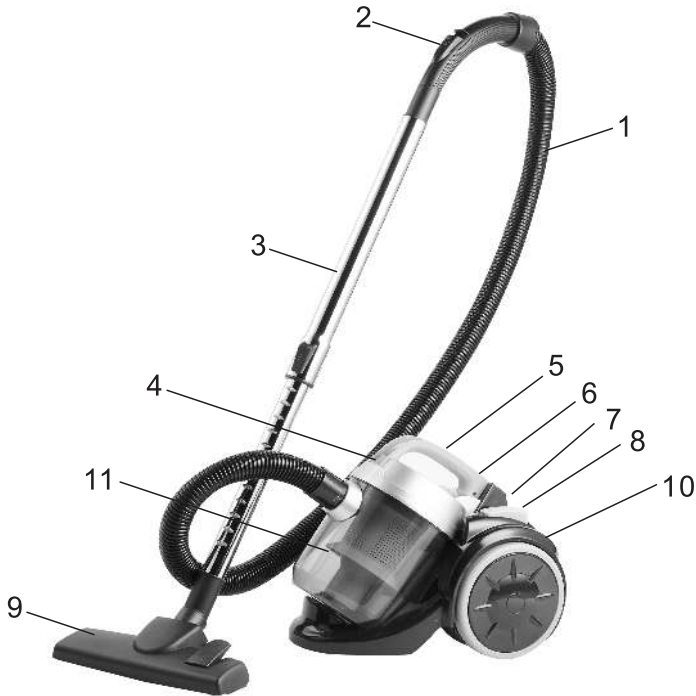

1.Hose

2.Handle

3.Metal Tube

4.Dust Bin Lid

5.Dust bin Handle

6.Dust bin Release Button

7. Cord rewind switch

8. Power on/off switch

9. Floor Brush

10. Big Wheel

11. Dust bin



Insert the hose connector into the swivel of the vacuum Cleaner



Insert the handle into the tube with a twisting force.




Same as above.



Same as above.

Fitting the extension tubes and accessories

Removing the extension tubes and accessories




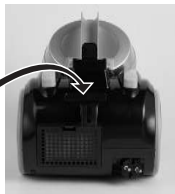


Brush holder

HOW TO CLEAN THE DUST CABIN

- 1.Pull the dust cabin meanwhile press the lock button , to take out duct cabin;
- 2.Take out HEPA, to clean up HEPA and the dust cabin; filter and dust cabin can wash in water.
- 3.It's assembled in turn after cleaned and dry.
- 4.Floor brush, Triangle brush and 2 in 1 crevice use and operation as below pictures.



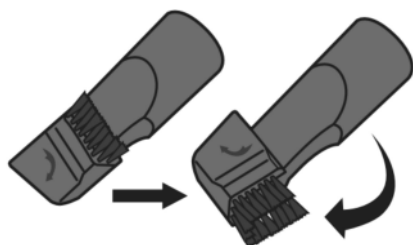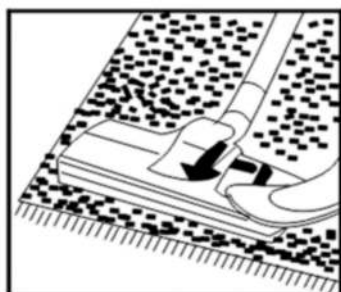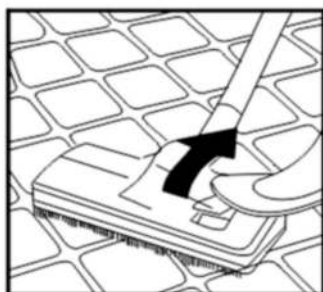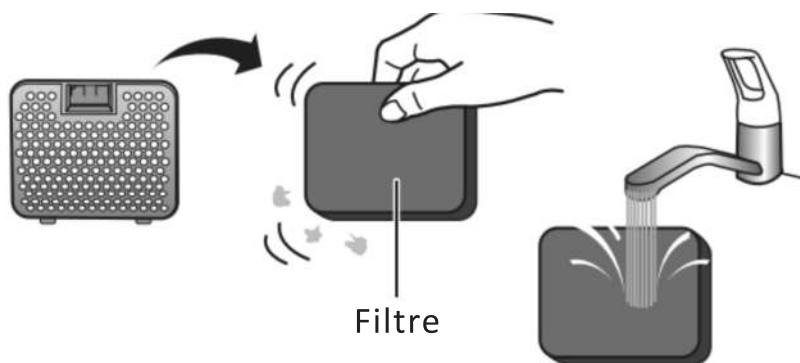

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.




The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Importer: Medek France

ADD: 05 rue de Rouen 94700 maisons ALFORT France

MADE IN CHINA

Repair and Disassembly

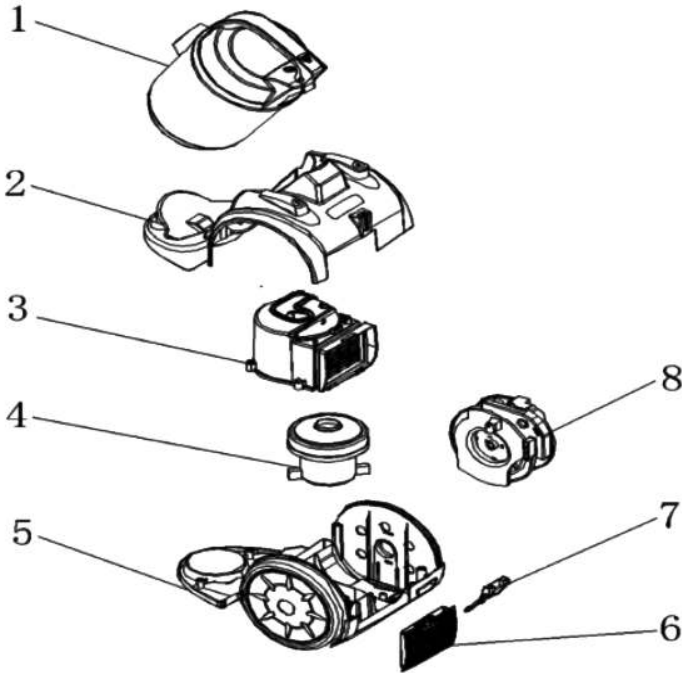

1. Dust cup
2. Middle frame
3. Motor cover
4. Motor
5. Base
6. Air outlet plate
7. Guard for outgoing line
8. Winder


Maintenance and dismantling tools:

1. Cross screwdriver

If there is no response and the machine cannot start up normally when you press the switch, disassemble the machine to rule out whether the internal wire is disconnected or the power cord is broken. Connect the disconnected wire after disassembly. In case of broken power cord, replace the winder with a new one.


Disassembly and replacement of winder:

1. After unplugging the connector, flip the machine over and remove all the screws at the bottom indicated by the arrow in the picture with a Phillips screwdriver. After removing the screws, the middle frame can be removed

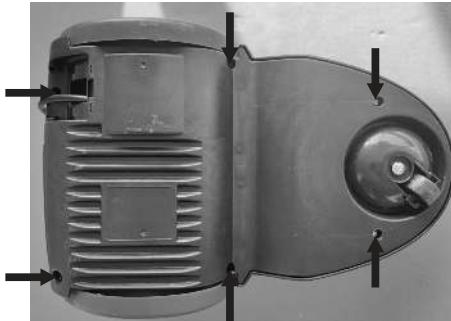


2. After removing the middle frame, remove the screw indicated by the arrow, disassemble one side of the wheel in the direction of arrow 2, and take out the winder.

Then, remove the two screws at the arrow in Fig. 2 and remove the guard for outgoing line.

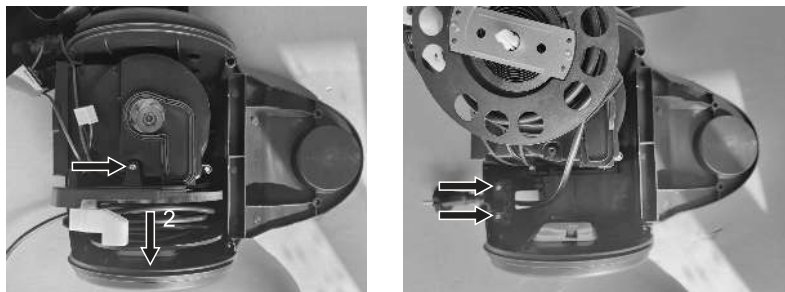


3. After removing the winder, check if the internal wire terminals at the indicated position by the arrow are disconnected from the winder and if so, plug them in and if not, the broken power cord that cannot be used for power supply should be replaced. Remove the original wire and insert it into a new winder (check the position of the red and blue wires), and reinstall and use it again by following the above steps.

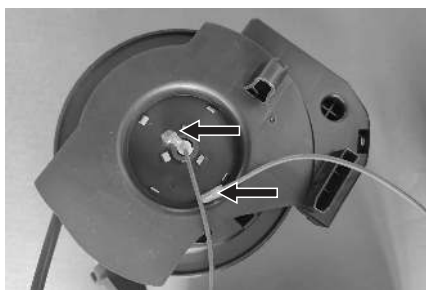


If the vacuum cleaner generates abnormal noises during use, or the machine emits pungent odor that cause startup failure, it indicates that the motor is damaged and needs to be replaced.

Replacement method of motor:

1. Remove the winder from the base by following the previous steps, and remove the four screws on the motor cover using a Phillips screwdriver. Open the motor cover and take out the motor inside and, during which, check the installation direction of the motor and the position of the internal wires.

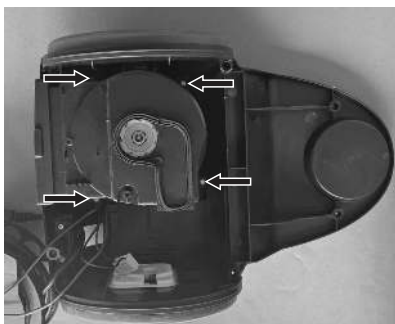

2. After taking out the motor, unplug the two wires connecting the motor, insert them into the new motor, install the rubber parts of the old motor onto the motor, place the motor into the base according to the position from where the motor is removed, and then reinstall all parts back to their original positions.

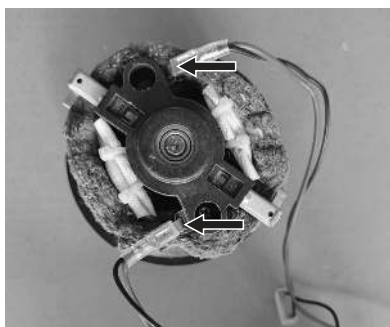

For more information, please visit
www.medekfrance.com.