


MEDEK

Handheld steam hanging ironing machine operating instruction

MD289

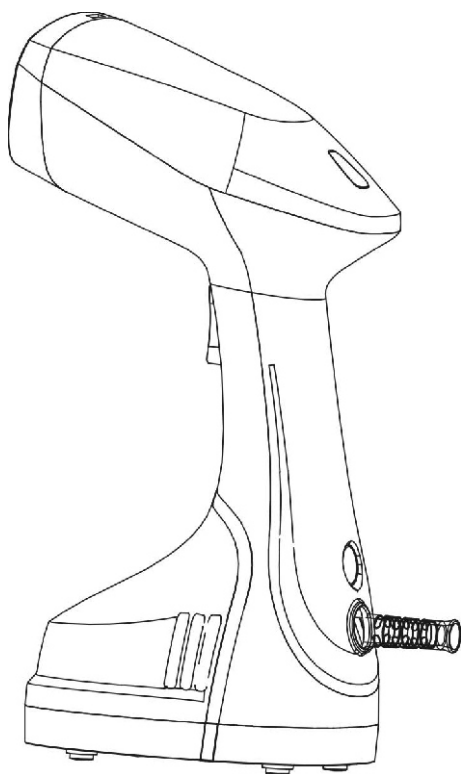

matters need attention

Before using this product, please read this instruction manual carefully and keep it properly for future reference.

danger

- Do not immerse this product in water or other liquids, and do not rinse under the tap.
- Carefully hang up the hot steam generated by the hot machine. Steam may cause burns.

warn

- Before connecting the product to the power supply, please check whether the standard voltage complies with the local supply voltage.
- Do not use the product if the plug, power cord or the product itself has been significantly damaged, or the product has fallen or leaked.
- The product can only be sent to the authorized maintenance center for maintenance. Do not repair the product by yourself, otherwise the product maintenance guarantee will be invalid.
- If the power cord is damaged, it must be replaced by the manufacturer, its maintenance department or similar department professionals.
- The fabric steamer must not be left unattended while it is connected to the supply mains
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children without supervision.
- Do not let children play with this product.
- When the product is energized or cooling, the product and its power cord should be placed beyond the reach of children under 8 years of age.
- Do not touch the steam head and hot surface during use. This product will produce high temperature steam in the process of use, please do not aim at people and animals, and do not iron the clothes worn on the body, in order to avoid the danger of scald.
- Unplug the power plug before cleaning the product, installing or removing the brush accessories, or injecting water into the water tank.



pay attention to

- Products can only use sockets with grounding.
- If the product is hot / connected to the power supply, do not allow the steam nozzle to contact any surface when placing the product.
- Check the power cord regularly for damage.
- Do not let the power cord contact with the high temperature steam during the product operation.
- Do not use this product when the water tank is out of water.
- When you leave the product for a short time, turn off the power supply and unplug the power supply.
- After ironing, turn off the power and unplug it, and let it cool completely before cleaning the product, installing or removing the accessories, emptying the tank or storing them.
- This product is limited to household use only. Please do not use this product in the bathroom or outdoors.
- Do not drag the original product on the floor again.
- Steam may damage or cause some walls or doors to fade.

- By design, your product is suitable for using tap water. If the water in your area is very hard, scale may accumulate very quickly. Therefore, it is recommended to inject distilled water into the tank to extend the service life of the product.
- Do not inject perfume, vinegar, detergent, ironing or other chemicals into the tank because this product is not suitable for these chemicals.

Steam hanging machine parts

- | | | |
|--------------------------|----------------------------|----------------------------|
| 1. bottom cap | 2. Water tank bottom | 3. Water tank (detachable) |
| 4. Decorating frame | 5.Cord protector | |
| 6.Back cover | 7.handle | 8.Lamp |
| 10.Top cover | 11.Panel decoration circle | 9..steam lock button |
| 13.stainless steel panel | 14.brush(removable) | 12.steam button |

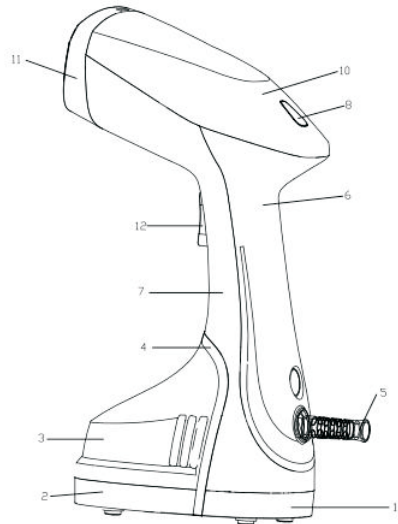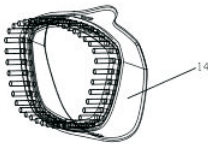

Specification: 220-240V, 50-60Hz, 1400-1600W

Off mode: N/A

Standby mode: N/A

This equipment power management function is inappropriate as for the intended use.

Before initial use

- Remove any label or cover from the steam head, straighten and straighten the wire before use.
- When using the first machine, let it steam for a few minutes. This will remove any due to what may be left behind during the manufacturing process impurities and odors.
- In order to avoid circuit overload, it is recommended that you do not use the same socket circuit together.
- When opening the package, check the list of all items and parts that you receive and avoid being discarded.

Installation and use

1. Pull the tank out by hand, open the water inlet cover and fill the tap water inlet tank. Make sure the tank is at least one third and not above the maximum water level. And then put back to the tank.
2. Hold the grip of the hanging ironing machine with your hand and install the additional cloth brush on the steam head with the other hand."Click" when installed in the correct position.
3. Connect the device to the power outlet, the power indicator will be on and the ironing machine will start heating. When the indicator goes off, preheat is complete, you can start using. When pull out the power outlet, the hanging ironing machine can be turned off, and then the indicator light will go off.

Ironing clothes

The steam hanging ironing machine is very easy to use, suitable for ironing clothing with wrinkles / creases, curtains, as well as refreshing decorative fabrics, available on most fabrics.

Note: The steam ironing machine is designed for vertically hanging clothing to avoid the use when the clothing is in the horizontal position.

1. Check whether the back of the fabric is breathable so that the steam gathers on the fabric to wet the fabric.
2. Check the clothing pockets to make sure the pockets are belongings-free.
3. Check the back of the clothing for objects that are easily damaged by steam.
4. It is recommended not to use the hanging ironing machine around the metal accessories of clothing. High temperature steam will cause the metal accessories to fade.
5. When you press the steam button, you will feel the vibration and hear the subtle hum, which is normal.
6. When ironing, gently brush the fabric up and down the crease of the fabric to flatten the crease.
7. If the ironing machine not iron the fabric, keep the steam head at least 5 cm away from the fabric
8. If the buzzing sound of the ironing machine becomes louder and there is no steam out, it means that the water is short in the tank. Please check the water level of the tank and add water to the tank.
9. Release the steam lock button will stop the steam.

After each use

1. When stopping service, remove the power cord from the power outlet.
2. Remove the tank, open the tank inlet cover and reverse the tank (in a tank or bucket) to empty the remaining water in the tank.
3. Place vertically on a flat table and waiting for the product to cool.

Care, cleaning, and storage

- Remove the steam brush from the steam head and clean with a wet cloth.
- Please do not use rough or abrasive cleaners or solvents.
- Do not dip the steam hanging ironing machine in water or other liquids.
- Do not fall, throw it, or try to bend it.
- Please do not try to remove the decomposition appliances.
- Empty the water tank after each use.
- Avoid storing electrical appliances in wet places
- Do not approach the heat source or let the sun shine directly on the electrical appliances.
- Always ensure that the steam outlet holes are clean, unstained and not blocked.
- It is recommended to store the hanging ironing machine vertically in a flat position, such as in a cabinet.

Fault maintenance guide

question	The possible solution
The ironing machine is not heated	● Check that the plug is inserted correctly. ● Check the power supply. ● Check the power supply push button.
The hanging ironing machine does not produce steam	● Check that the water level and the water tank are loaded correctly. ● Press the steam button vigorously. ● Put the hanging ironing machine in the upright position.
The water leaked from the tank	● Ensure that the water is not above the maximum water level. ● Ensure that the water tank inlet is closed properly. ● Always keep the hanging ironing machine in the upright position according to the operating instructions provided.
The steam engine has a loud hum or pumping sound	● Check water level; if no water or low, add water to the tank.
Avoid the discoloration of the metal accessories on the clothing	● Do not use the steam hanging ironing machine directly on the metal accessories. ● Use steam carefully when there are metal fittings around it.



 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Importer :Medek France

ADD:05 rue de Rouen 94700 maisons ALFORT France

MADE IN CHINA