




MD7702W

Wireless Floor Cleaner



Before using,
Please read this
using video carefully

User Manual

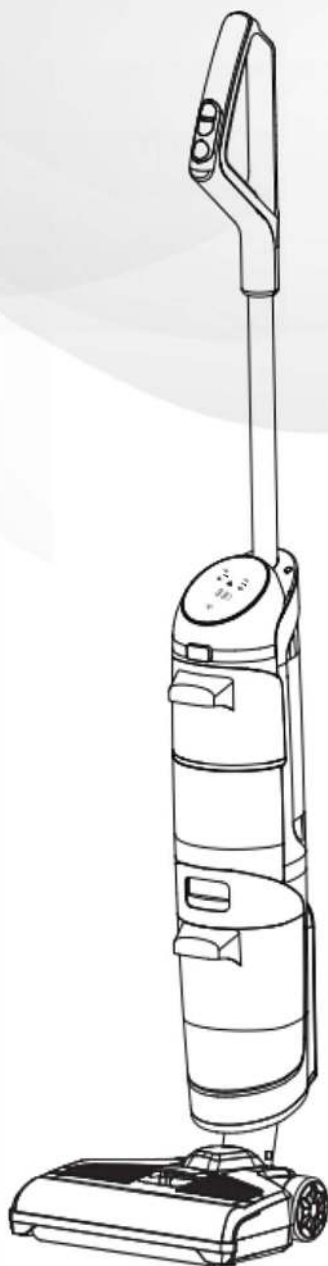

Contents

Product Illustration	24
Product Introduction	25
Product Disassembly	27
Use Instructions	31
Technical Parameter	35

⚠ WARNING

Before using this product, please read all the contents of this manual carefully and install the machine according to the procedure in this manual. Keep this instruction manual properly. If you pass the product to a third party for use, please attach this instruction with the machine. Any operation inconsistent with the instructions may cause product damage or serious personal injury. This product is only suitable for operation in the normal home environment, not suitable for industrial or outdoor use. The product is not suitable for physically, sensory or intellectual persons or persons who lack experience and commonsense (including children), unless they are supervised or directed by others to ensure their safe use.

Do not touch the plug or any live part of the product with wet hands to avoid electric shock. If the charger or plug is damaged, please stop using. Please call our professional maintenance personnel to replace it to avoid any harm. Please keep the airflow channel and moving parts away from hair, loose clothing, fingers and other parts of the body. Do not put the vacuum cleaner, accessory suction head or tool in the eyes, ears or into the mouth.

When using, if leakage or motor temperature is too high and abnormal sound is found, such as overheating, abnormal sound, peculiar smell and weak suction of the machine body, it shall stop using immediately and call professional maintenance personnel of the company.

Please use the charger specially provided by our company to charge when charging; other types of chargers can cause battery failure or extreme thermal effects.

If the product is not used for a long time, turn off the power supply and pull off the plug of the charging base.

After using the machine, please clean the sewage bucket in time to keep the ventilation path unblocked, so as to avoid the blockage causing suction drop and motor heating, thus affecting the lifespan of the floor cleaner.

After using the machine, please keep it in a dry place. The damp place will affect the insulation and lifespan of the floor cleaner.

The machine body and brush of the floor cleaner have a setting of power on, so it cannot be soaked or washed.

Please check the smooth condition of suction nozzle regularly. If there is any blockage, please remove it in time to avoid the drop of suction caused by blockage and affecting the machine performance.

Please ensure that if the machine breaks down, do not repair it by yourself. Please call our after-sales department for help. All the technical and other data embodied in this product specification are obtained by our company or designated third party testing company, and the final interpretation right belongs to our company.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

The appliance is only to be used with the power supply unit provided with the appliance.

The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

A hazard may occur if the appliance runs over the supply cord.

This appliance contains batteries can only be replaced by skilled persons.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit (BZ019-350050-AG) provided with this appliance.



Means detachable supply unit

Product Use Scope

This product is suitable for the hard ground in indoor environment, including waxed floor, stone ground, rubber floor, marble floor, granite floor, terrazzo floor, solid wood floor, composite floor, bamboo floor and all kinds of mirror tiles, porcelain tiles and other flat ground surfaces. If the product is used on uneven ground surface, the best effect may not be achieved. Do not use this product near or on the surface of inflammable or explosive objects, which may cause fire and explosion. Do not use this product near the working fireplace or heater to prevent the deformation of the machine shell. Do not suck high temperature substances (cigarette ends, burnt matches or hot ashes, etc.), ultra fine substances (such as lime, cement, wood chips, gypsum powder, ash, carbon powder, etc.), dangerous substances (such as solvents, scale removers, etc.), chemical substances (such as acid substances, cleaners, etc.), and other substances whose physical properties are uncertain.

Do not use this washing machine to absorb detergents, kerosene, gasoline, alcohol, paint, perfume, etc. These liquids may cause short circuit, fire or explosion.

Do not use this washing machine to absorb the toner and toner used in the laser printer or copier. These objects may cause fire or explosion.

Do not use this machine to absorb sharp objects, such as glass fragments, small toys, pins, paper clips, stones, gypsum, large paper pieces, etc., which may cause blockage and damage to the machine.

Do not use this machine to absorb any burning or smoking objects, such as ash without extinguished heat source, burning cigarette head or match, etc. Similar shoe oil, paint, pigment and other stains with strong grease, strong viscosity or strong dyeing property are not in the scope of use of this product.

About Cleaning Fluid

Clean according to the instructions. It is recommended to use the cleaning agents produced by our company or those approved by our company, adding them in a ratio of 1:40 (1ml of cleaning solution : 40ml of water).

Please avoid using cleaning solutions containing foaming agents, and do not add excessive amounts of the cleaning solution. When using, a large amount of foam will generate, which may pose a risk to the motor.

Users purchase the cleaning agent themselves: Please choose neutral cleaning agents for use, and add them according to the usage standards of the purchased cleaning agent. The cleaning agent must not contain acidic, alkaline solutions or substances harmful to the environment.


The cleaning agent should be kept out of reach of the child. If the cleaning solution is accidentally put into the eye, wash it thoroughly with clean water. If you eat by mistake, you should get medical attention immediately. Local environmental regulations shall be followed when dealing with sewage and cleaning solutions.


About The Machine

Do not disassemble and dismantle the closed machine by yourself. There are no parts that can be repaired by customers in the machine, and do not try to change the performance of the machine, otherwise, it will cause danger. The use of voltage which is not corresponding to the specification of this product will damage the motor and more likely to cause harm to the user. The correct rated voltage is indicated on the nameplate. When cleaning stairs, care should be taken to prevent falling.

Do not shake the machine up and down or collide violently to prevent sewage from flowing into the motor. When the motor is working, do not lift or carry the electrical appliance. Do not tip or invert the machine, as this may cause the backflowing wastewater to enter the motor interior.

To prevent tripping, the machine should be placed against the wall after use. If the clean water bucket and sewage bucket are not installed properly, do not use them. Do not place any small objects in the air outlet, nor block the air outlet. Remove any small objects that may hinder the air flow of the air outlet, and prevent the machine from overheating. Do not wet the fuselage, otherwise it may cause fire and electric shock due to short circuit of the machine.

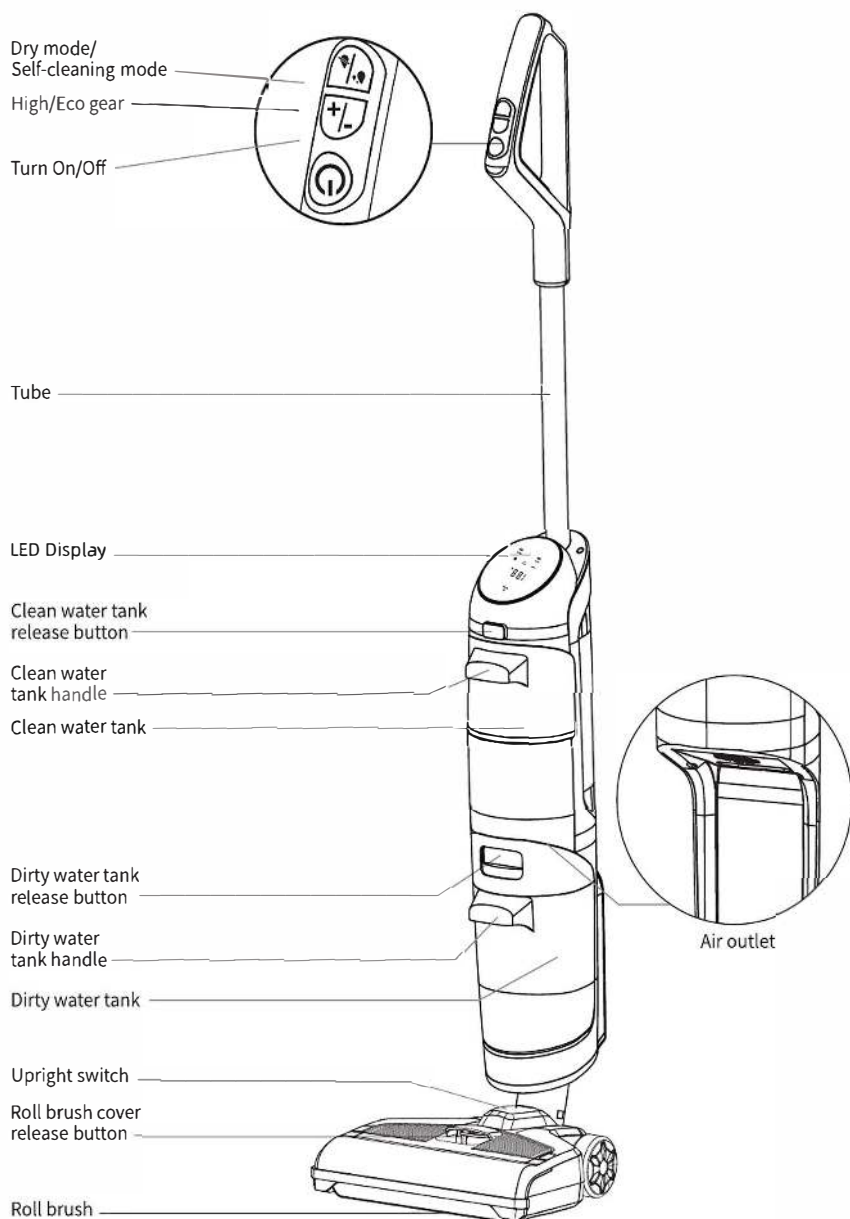

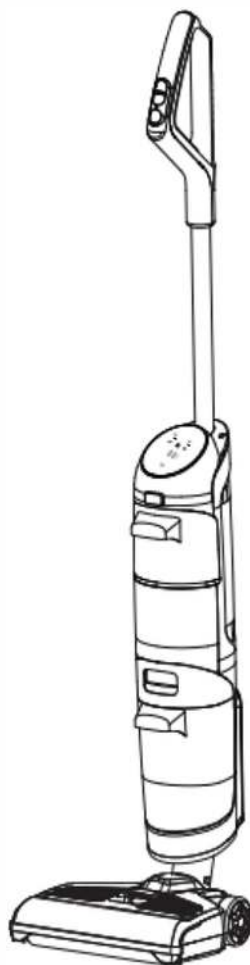


MD7702W



HEPA



Roller Brush

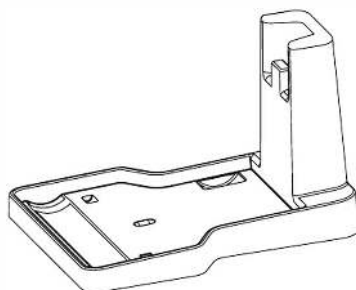

Charging Base

Self-cleaning mode
indicator light

Battery level
display

 
Brush stuck

ECO Gear
(Low-grade)

Sewage Tank
Full

MAX Gear
(Power)

Short of
clean water



Dry Mode: The ECO Gear and MAX Gear indicator lights will not illuminate, indicating that it is in the dry mode. At this time, no water will be sprayed.

Warning:




When the red icon indicator lights up, it indicates that the machine cannot work normally or needs immediate adjustment. Maintaining this working state will cause machine failure.

Insert the end of the handle into the port of the host in the vertical direction.

After hearing the click, make sure that the handle is tight without loosening, then the installation is successful.


If you want to disassemble, please use a hard object to reach into the hole on the back of the fuselage, press the shrapnel, and pull out the handle of the machine upward at the same time.

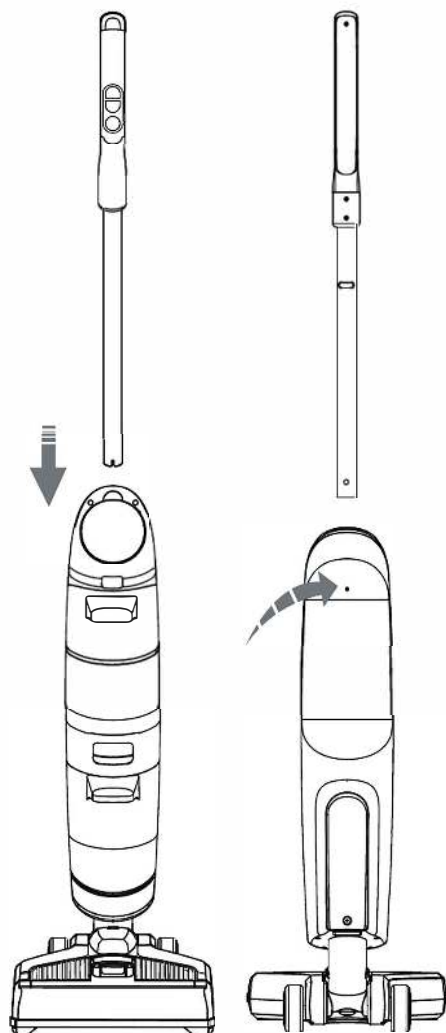

Clean Water Tank Disassembly

If you want to take out the clean water tank, hold the body with one hand, and with the other hand hold the clean water tank release button while pulling it out.



To install the clean water tank, one hand holds the body and the other hand puts the protruding part at the bottom of the water tank into the groove of the machine, then installs the upper part of the water tank. When inserting, you will hear a clicking sound at the same time, indicating that it is properly installed.

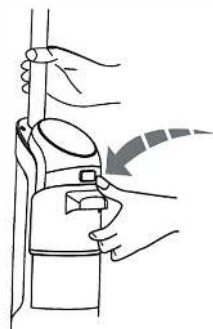

Dirty Water Tank Disassembly


To remove the dirty water tank, one hand holds the body, the other hand holds the dirty water tank release button and pulls out the dirty water tank.

To install the dirty water tank, hold the body with one hand, place the bottom of the tank into the opening support position on the body with the other hand, then gently push the water tank until you hear a click, indicating the installation is successful.

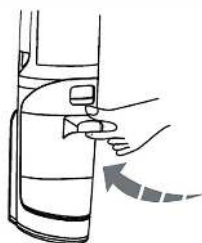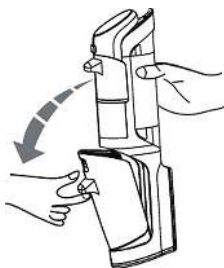

Roller Brush Cover Disassembly


To remove the roller brush cover, firstly, apply your fingers to the position as shown in the figure, and press the front release button with your thumb to pull it up to remove the roller brush cover.

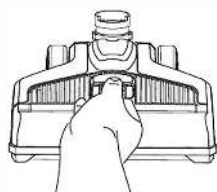

Roller brush cover disassembly


The Roller Disassembly

To remove the roller brush, pull up the left roller brush handle with your finger to remove it.

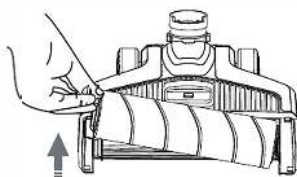

Roller disassembly

During installation, hold the roller brush handle, first align the right side with the right end cover, then insert the left handle of the roller brush into the slot, and the roller brush can be installed successfully.

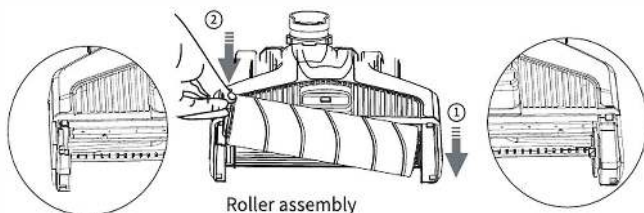


Roller assembly


Tips: Roller brush components are consumables. Please replace the consumables in time to ensure the cleaning

Roller Brush And Brush Cover Installation


When installing, align the clasps on both ends of the roller brush cover with the slots on both ends of the roller brush, press the roller brush cover forward, and then press the handle of the face cover. After hearing the click, the installation is successful.

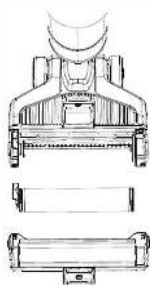


Roller brush and brush cover installation

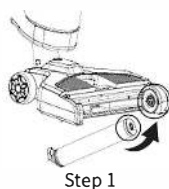


Step 1

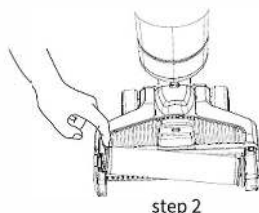

step 2

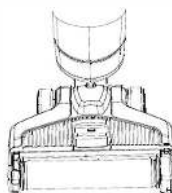

Step 3

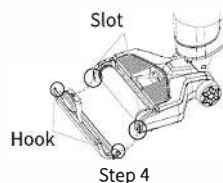

Step 4



Step 5



Step 6


Fill The Clean Water Tank

1. Gently press the water tank release button to remove the bucket.
2. Open the upper cover of the clean water bucket and pour clean water (below 60°C) to the water level where deep cleaning is needed (According to the user's requirements, add the neutral floor cleaner in proportion).
3. Cover the upper cover of the clean water bucket tightly to ensure that it is tight without looseness.
4. First, insert the raised part at the bottom of the water tank into the machine's groove, and then install the upper part of the water tank. When you hear a click sound at the same time, it is considered to be installed properly.



Dumping Sewage Of Dirty Water Tank


1. Hold the body with one hand and gently press the dirty water tank button with the other hand to remove the tank.
2. Hold the bucket cup in one hand and pull out the dirty water tank cover upward in the other.
3. After the dirty water is poured out, rinse the dirty water tank with clean water and let it dry.
4. The dirty water tank is installed back to the fuselage. After hearing the click, the installation is successful.

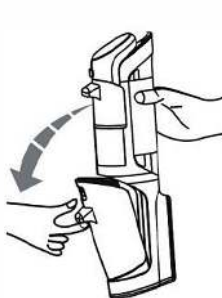


1



2

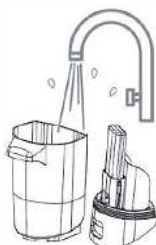

3

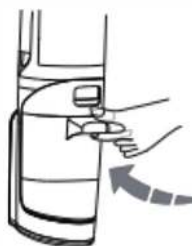

4



Notice

The roller brush and dirty water tank need to be disassembled for cleaning promptly after use. It will smell bad if not cleaned for a long time.

Please park the product upright. Do not place the machine upside down or flat on the ground, as this operation may cause water in the dirty water tank to flow back and lead to leakage.

Introduction to Button Functions

1. Turn on/off: Turn on automatically enter cleaning floor and water spray mode. Turn off will halt the cleaning operation.

2. Switch Dry Mode or Water Spray Mode/ Self-cleaning on Mode.

(1) Dry Mode/Water Spray Mode : when device is not on charging ,press  to turn on the device, press the button  to switch the water spray mode or dry mode.

(2) Self-cleaning Mode: When the device is under the charging state, press the button  to switch "self cleaning on" mode or "self cleaning off" mode. When enter the "self cleaning on" mode, on the screen ,you can see this icon light on . After the self-cleaning process is completed, the device will automatically shut down.

3. High/Eco Gear: Adjust the strength of the suction.



Turn On/Off



Dry Mode /
Self-cleaning Mode



High/Eco Gear


Upright Switch

1. Tilt the machine as shown in the figure (1), turn it on, select cleaning mode, and enter working state.

2. When the machine is upright (without turning it off), the floor brush will automatically stop rotating. At this time, the machine isn't working.


3. If the machine is closed within 30s while it is in operation (before screen off) and then opened, the machine can continue to work, the floor brush rotates normally and the machine resumes working state.

Open the body and tilt.

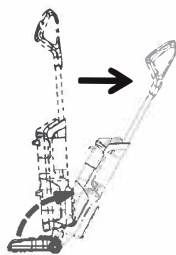

1

In upright state,
the machine does not work.

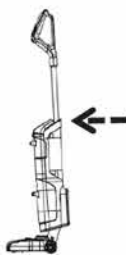

2


Tilt state, the machine
works normally.



3

MD7702W Charging

Firstly, place the machine onto the charging base, connect one end of the charger to the charging base, and the other end to a household socket. The power cord can be stowed when not charging. When charging, please stand the machine upright near the corner of the wall to avoid tripping and other injuries.

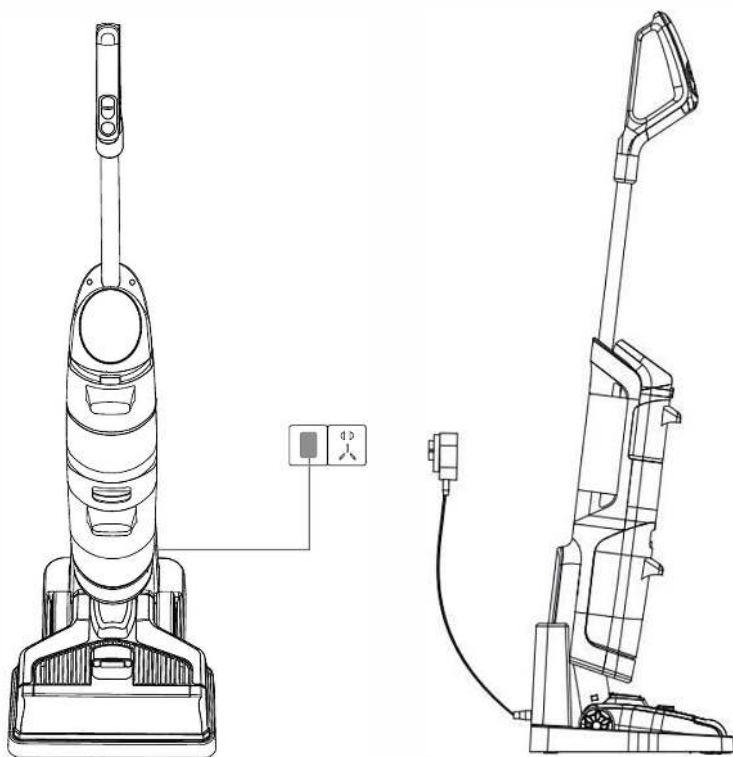

Warning:

After purchasing the product, please charge the battery according to the standard adapter provided by our company.

If the machine is not in use, it needs to be charged regularly. It is recommended to charge the battery at least once a month (it does not need to be fully charged) to avoid running out of power.

Rated voltage:	28.8 V d.c
Rated power:	180W
Battery capacity:	2600mAh
Adapter output specification:	35 V d.c. / 500 mA
Clean water Tank:	0.55L
Dirty water Tank:	0.435L
Suction :	9/14KPa
charging Time:	4-5H
Net weight:	4kg
Size:	280X335X1210mm



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption.

Power consumption in off mode	NA
Power consumption in standby mode	0.22 W
Maximum time required to automatically reach shutdown mode	<5 min

MEDEK FRANCE
94700 Maisons-Alfort France
MADE IN CHINA

Technical support: if you need more help when using this product or you have problems during the operation, you may need to contact us for more technical support.