 


MEDEK

MDK15

Spot Carpet Cleaner

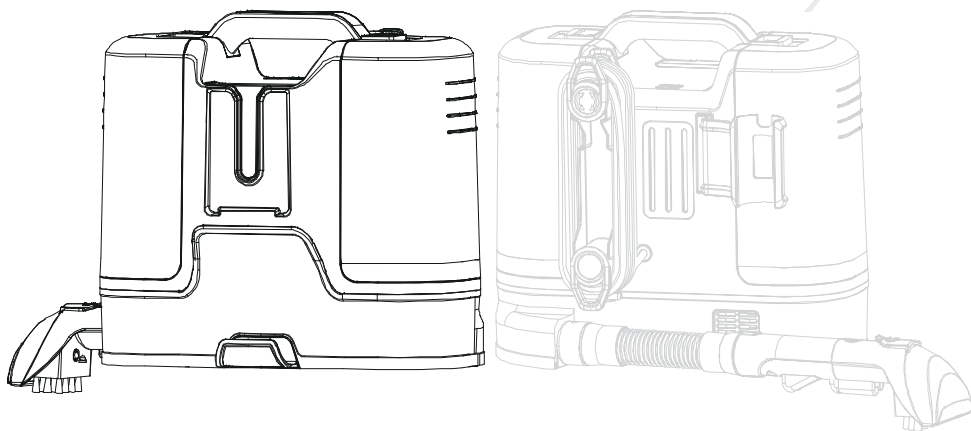



Warning

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Warning: Risk of entrapment in the hand-held accessory with rotating parts.

The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

The liquid or steam not directed towards equipment containing electrical components, such as the interior of ovens.

The appliance has to be unplugged after use and before carrying out user maintenance on the appliance.

The appliance has not been left unattended while it is connected to the supply mains;

The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking;

Keep the appliance out of reach of children when it is energized or cooling down.

Do not use electrical appliances with damaged power cords or plugs. The power cord must be replaced if there is an abnormality.

If the appliance does not work properly, or falls down or is damaged, please contact Electronic Services center.



Environmental Tips

Please discard packaging materials (plastic, Styrofoam, etc.) out of the reach of children.

Packaging material is present risk of choking in children.

After unpacking this product, please destroy the carton, plastic bag and other packing materials children may use.

Playing with the above materials, blankets, sheets or plastic film covering the carton or creating a confined space is dangerous.

Dispose of this product in accordance with local or national laws and regulations.

Before disposing of this product, please contact your local municipal or relevant government agency.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.




The device complies with the European Directives 2014/35/EU and 2014/30/EU.



This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption.

Power consumption in off mode	0W
Power consumption in standby mode	N/A
Maximum time required to automatically reach shutdown mode	N/A

Importer: Medek France
ADD: maisons ALFORT France
MADE IN CHINA

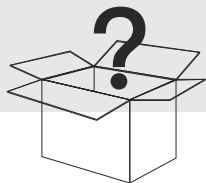

Packing Details

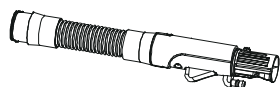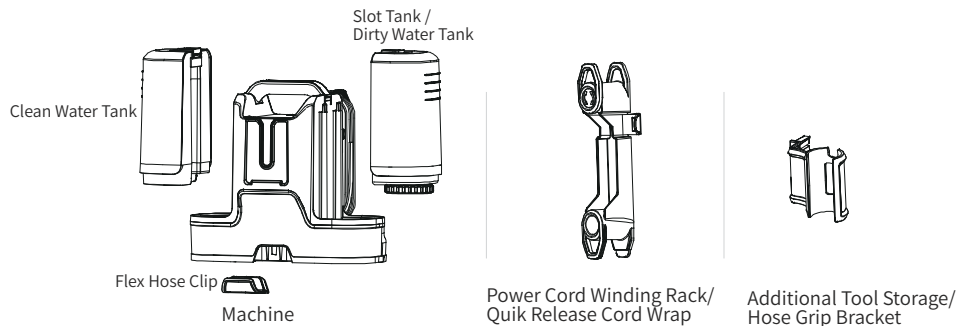

Hose Connection Tool/
Adaptor Tool



Standard Brush/
Brush Tool




Self-cleaning Brush


Rated Power:	450W
Rated Voltage:	220- 240V ~, 50- 60Hz
Vacuum:	≥12 Kpa
Clean Tank Capacity:	1.8L (clean water) (Max. level: 1.4 L)
Sewage Tank Capacity:	0.6L (dirty water)
Noise:	≤85dB
Net weight:	3.8kg
Size:	335*235*305mm




Catalog

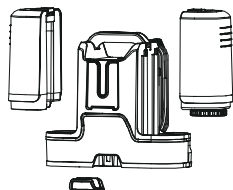

Installation Procedure 18

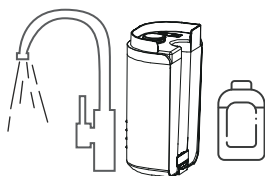

Steps to Use Clean Water Tank 19

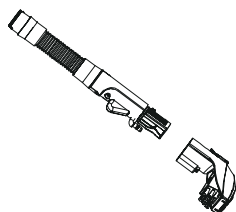


Cleaning Steps 20




Sewage Tank Use Steps/Slot tank/
Dirty Water Tank Use Steps 22



Keep Clean 23

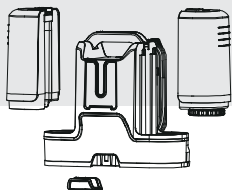


Installation Procedure

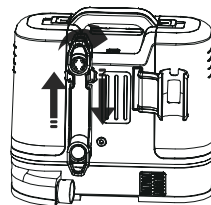


1. Wrap the power cord around the cord wrap.

1

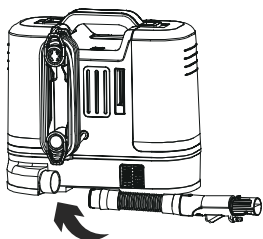


2. Connect the hose tool.

2

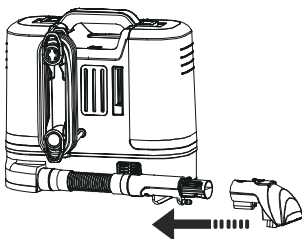


3. Connect the brush tool to adaptor tool.

3

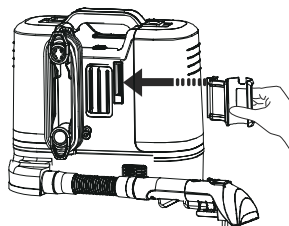


4. Snap the hose grip bracket into the slot on the back right side of the machine.

4

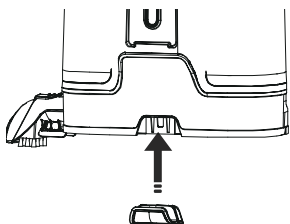


5. Slide the flex hose clip into the slot found on front of the machine at the bottom. You should here a "snap" when it's locked in.

5

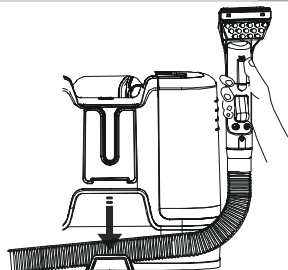


6. Wrap the flex hose around the machine and snap hose grip into bracket.

6

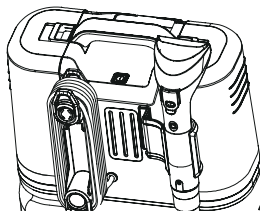

7. Make sure this brush totally fixed on this additional tool storage.

7

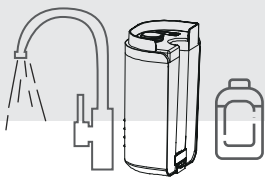

Steps to Use Clean Water Tank

 


 Water not exceed 60°C




1. Remove the clean water tank vertically by pulling the button of the tank.

1

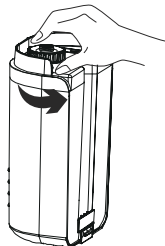


2. Twist the clean water tank cap.

2

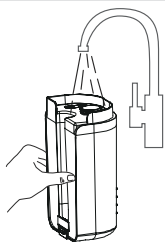


3. Add some water in this tank.

3

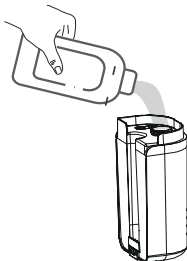


4. Add neutral detergent to clean water according to the proportion.

4

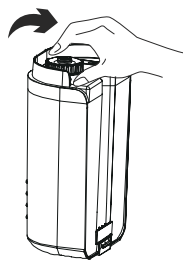


5. Make sure the water tank cap firmly tighten.

5

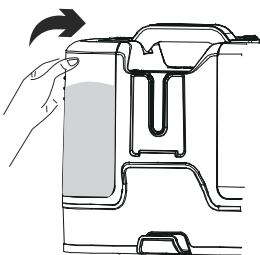


6. Place clean tank onto this machine.


6

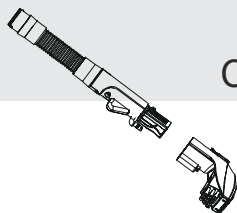


Cleaning Steps

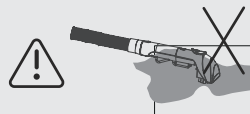


1. Please make sure all can be wet cleaning before using this machine to cleaning.

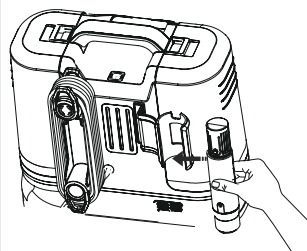


2. Snap hose grip into the machine bracket.

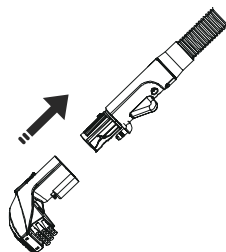


3. Connect the brush tool to adaptor tool.

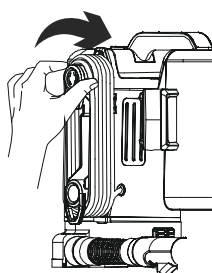


4. Twist the quick release Cord Wrap.

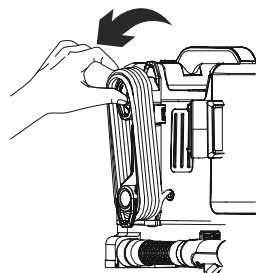


5. Release the power cord.

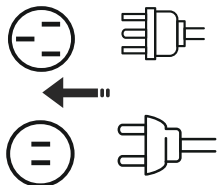

6. Plug in electrical power outlet.


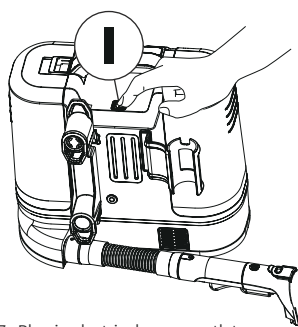


7. Plug in electrical power outlet.

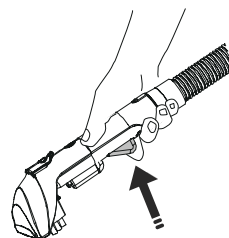


8. Switch the button on the hose grip.



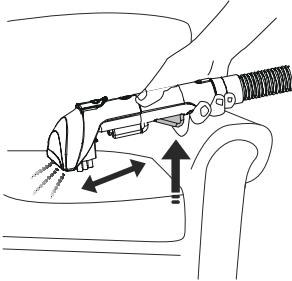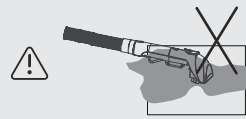


9. Point the tool above the spot or stain and press the spray trigger.

9

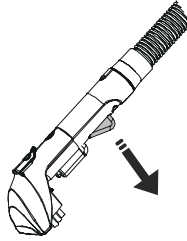


10. Loose the button on the hose grip.

10

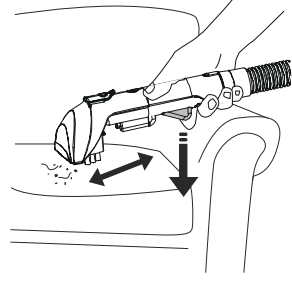


11. Place the brush onto carpet and slowly move backwards.

11

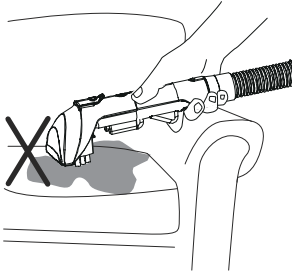


12. Do not use too much deep cleaning formula when using.

12

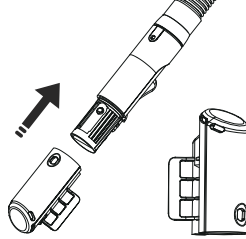


13. Install the self-cleaning brush onto the hose connection tool / adapter tool.

13

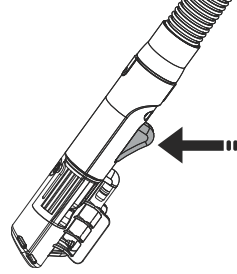

14. Long press the water spraying button.

14

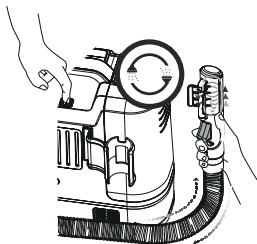


15. After starting the machine, hold down the water spray button for a duration that depends on the actual level of dirtiness. The water will automatically rinse the hose and suck the dirty water into the slot tank / dirty water tank.

15




Sewage tank use steps/ Slot tank/Dirty Water Tank Use Steps

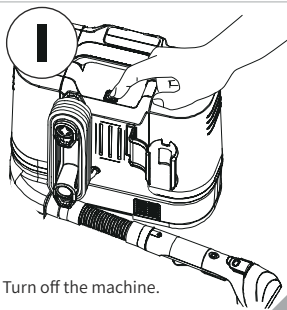


1. Turn off the machine.

1

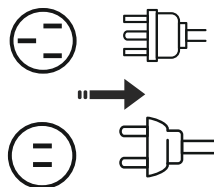


2. Unplug from the electrical outlet.

2

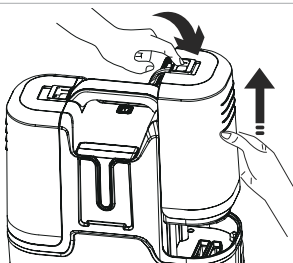


3. Remove the Clean Water Tank vertically by pulling the button of the tank.

3

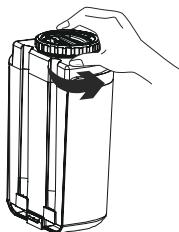

4. Twist dirty tank cap.

4

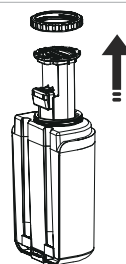


5. Remove buoy bracket.

5




6. Pour out dirty water.

6

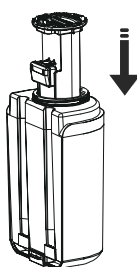


7. Place the buoy bracket.

7

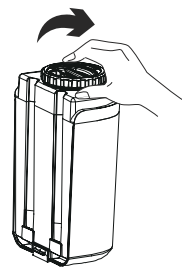


8. Cap onto dirty tank and firmly tighten.


8

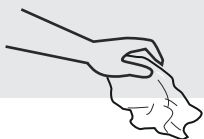


Keep Clean

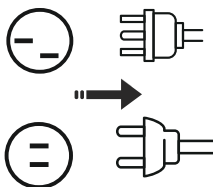


1. Unplug from the electrical outlet.

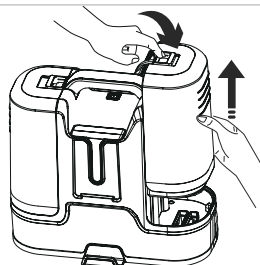


2. Remove the dirty water tank vertically by pulling the button of the tank.

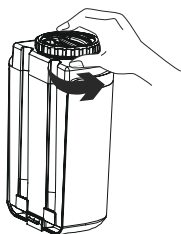


3. Twist dirty tank cap.

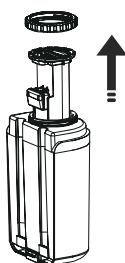


4. Remove buoy bracket.

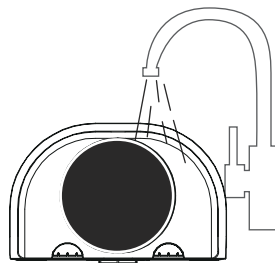


5. Hand wash the dirty water tank with clean water.

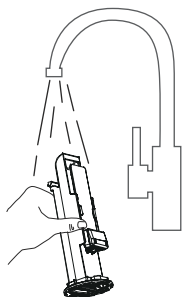

6. Wash the buoy bracket.

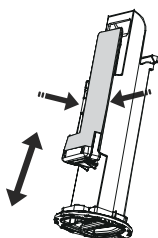


7. The buoy bracket is washable.

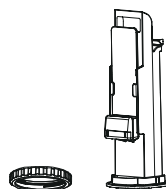


8. Make it totally dry before reassemble.



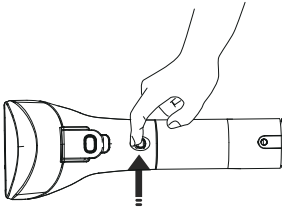


9. Disconnect the cleaning tool, push down on the button above the hose grip.

9

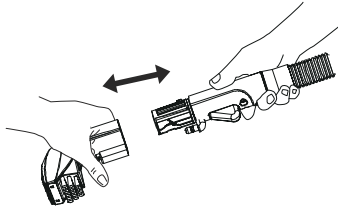

10. Pull straight off.

10

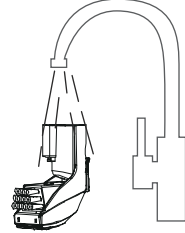


11. Wash the brush tool.

11




12. Make it totally dry before reassemble.

12

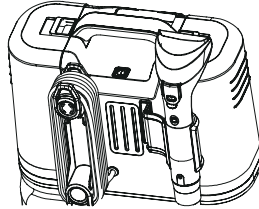


13. Snap the brush tool onto this machine bracket.

13

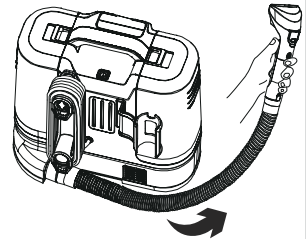


14. Easy hose storage around this machine.

14

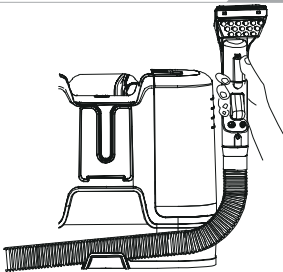


15. Wrap the Flex Hose around the machine and snap Hose Grip into bracket.

15

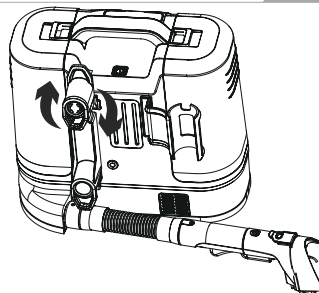

16. Release the power cord.

16

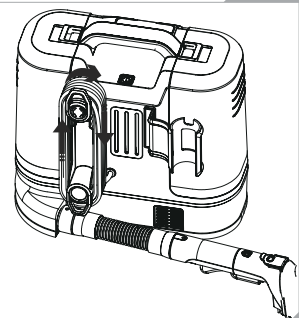

17. Wrap the power cord around the Cord Wrap.

17