



L'appareil est conforme aux directives
européennes 2014/35/UE et 2014/30/UE.

Importateur : Medek France

Adresse : 94700 MAISONS- ALFORT France

FABRIQUÉ EN CHINE



Hot Air Styler

Instruction Manual

Type: MDZY909

Save these instructions

Read all instructions before using.

Model and Specification

MDZY909 220V-240V~ 50Hz/60Hz, 1300W-1500W

Important Safeguards

When using an electrical appliance, basic safety precautions should always be observed, including the following:

ELECTRICAL SAFETY

- Switch off and unplug when not in use and before cleaning the appliance.
- Do not leave unattended whilst connected to the mains supply.
- Children should be supervised to ensure they do not play with the appliance, and the appliance and cables should be kept completely out of reach of young children.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep dryer, cable and plug dry and away from areas where they are likely to get splashed. Never immerse in water.
- When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk even when switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.


- Before use, it is necessary to verify the RCD to ensure that the protective plug is functioning properly, Press the “Reset” button, the indicator light will turn on, and press the "Test" button (simulating human electric shock). If the leakage plug can operate, it proves that it can be put into normal use.



- **WARNING:** do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not pull on the cables to disconnect from mains supply.
- Keep appliance and cable away from heat, sharp objects or anything that may cause damage. Ensure all ventilation slots, grilles etc are kept clear of debris and foreign objects.
- Do not operate the appliance if dropped, shows signs of damage or after it malfunctions. In the event the supply cord is damaged, it must only be replaced by a qualified service Supplier, with a suitably approved part.
- This appliance must be positioned so that the plug is accessible and the plug socket is within easy reach of the power cord.
- The hot air styler becomes HOT in use. Take care to avoid contact between the hot surfaces and the skin, particularly around the ears, face and neck.
- Do not rest the hot air styler on non-heat resistant surfaces or near flammable materials whilst it is in use or cooling down.
- The hot air styler should NEVER be stored whilst hot or whilst still connected to the mains. Always switch off appliance, unplug from the mains before storing.
- Do not wind the cable tightly around the appliance when storing. Do not hang up by the power cord.
- Keep your hair away from the immediate vicinity of the air inlet opening.
- Do not obstruct the air inlet or outlet. In the event that the air inlet is blocked, the appliance will cut off when the heating elements become too hot – if this happens, switch off, unplug and allow the hot air styler to cool. Ensure obstruction is removed before trying hot air styler again.
- Do not use the hot air styler on artificial hair or wigs.
- Do not spray aerosol products when the hot air styler is operation.
- Do not use other attachments than which supplied.
- Trip hazard beware of trailing cables when in use and while in storage.
- Cord entanglement hazard. The cable of the appliance can give rise to risks of entanglement, strangulation or tripping if not correctly placed. You must make sure that the electric cable is positioned safely.
- Do not touch the air inlet to prevent the air speed decreasing when the hot air
- styler is operation.

PARTS

1. Concentrator Nozzle
2. Left Roller Brush
3. Right Roller Brush
4. Straight Hair Comb
5. Round Volumizing Brush
6. Ellipse Bristle Brush
7. Air Outlet
8. Cool shot Button
9. Air Temperature Button
10. Air Speed Button
11. ON/OFF / Power switch
12. Toggle Button/Push button
13. Fold/Straight selector Button / Folding Press Button
14. Mains body
15. Air inlet
16. Cord

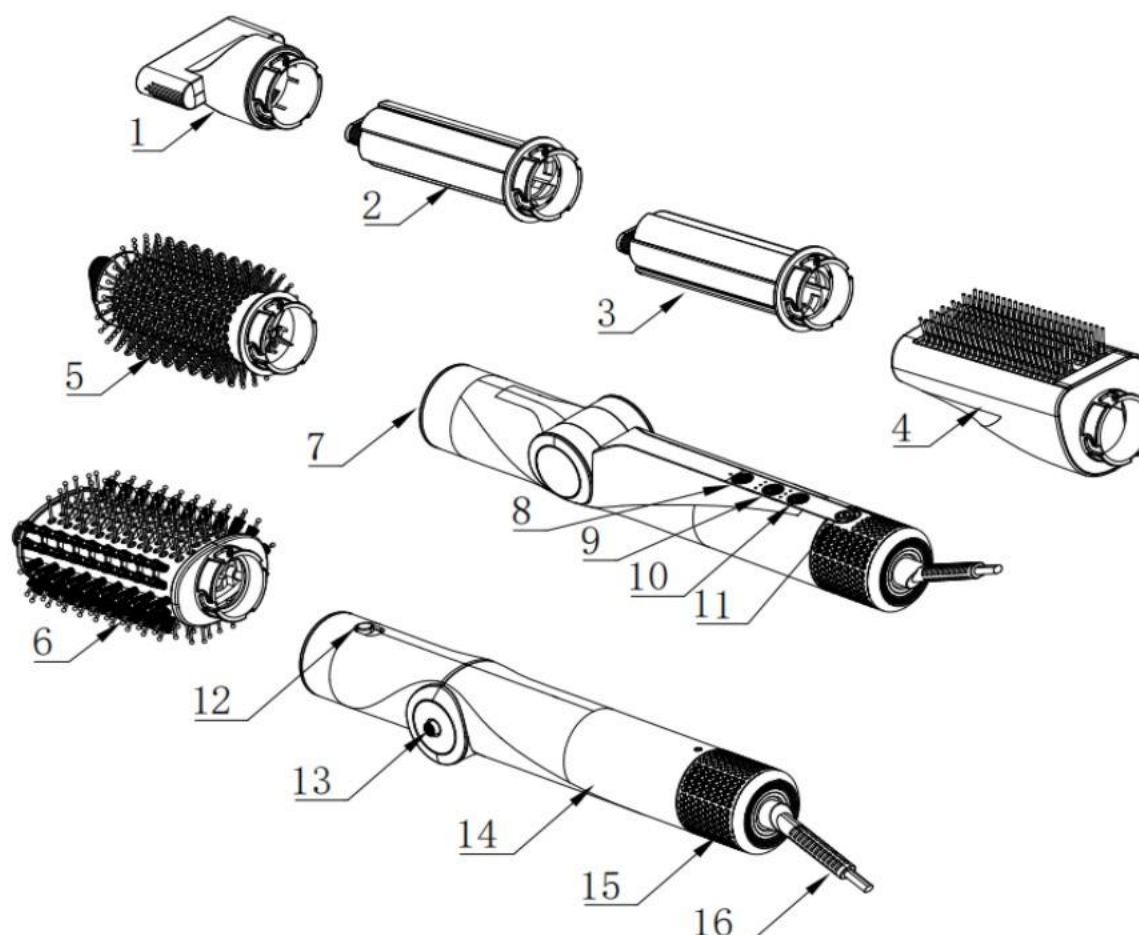

Hot Air Styler USE

The hot air styler is suitable to dry damp and wet hair. For best results wash and towel-dry and then comb or brush the hair to untangle. To minimise heat damage to the hair, try the lowest temperature setting first. Do not try to dry too much hair at any one time. The thinner the lock of hair that is dried, the quicker it will dry.

1. Fully unwind the mains cable.
2. With dry hands, ensure that the power switch is set to the off position (OFF), then plug the hot air styler into the mains supply and switch on at the socket.
3. Select the required airflow and heat setting power switch and the Corresponding Indicator Light is Working:

“”: Air Temperature; Setting 1-2-3 Temperature

“”: Air speed; Setting 1-2-3 Speed

“”: ON/Off.

Off mode: 0.27 W

Standby mode: N/A


This equipment power management function is inappropriate as for the intended use.

4. “” Cool-shot button – Press this button at any time to start the cool air function and lock in the style, no need to be pressed for a long time. Press the cool shot button or the air temperature button if need to cancel the cool air function.
5. “Push Button” and Rotating accessories - for unlocking the accessories from the

latch.

6.To attach the accessories to your styler, place the attachment over the body and slide it down into position. Lock the attachment by twisting the attachment clockwise until it clicks

7.To remove the attachment,press the 'Toggle Button' and twist the attachment anti-clockwise. And then you can slide up the attachment easily.

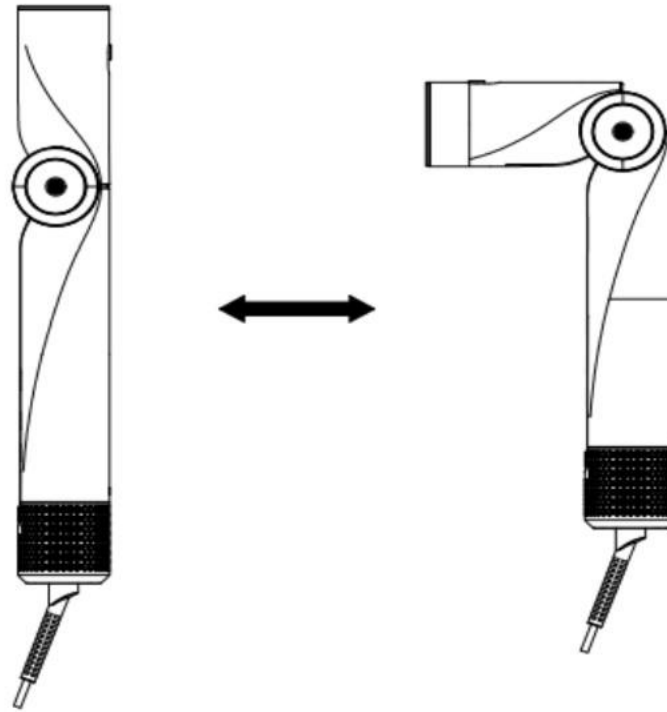

8.Press“Fold/Straight selector Button”and Rotating Grasp the Upper Body - for unlocking the Upper Body from the latch.

9.Lock the Body by twisting the Upper Body 90° until it clicks.

10.“Push Button”and Rotating accessories - for unlocking the accessories from the latch.

11.To attach the accessories to your styler, place the attachment over the body and slide it down into position. Lock the attachment by twisting the attachment clockwise until it clicks.

12. After use, switch off and unplug the styler.

13. Allow to cool before storage.

CLEANING & MAINTENANCE

Keep the hot air styler clean and free of styling products.

1. Switch off, unplug and always allow the hot air styler to cool before storing or cleaning.
2. Do not wrap the mains cable around the appliance when storing as this may damage the cable in the long term. The hot air styler may be hung from the hanging loop when not in use.
3. Wipe the outside of the hot air styler body and cable with a damp cloth and then wipe dry.Do not use detergent or abrasives as this may scratch the surface. Never immerse the hot air styler, cable or plug in water or in any other liquids.
4. The attachments can be cleaned with a moist cloth or rinsed under a running tap.
 - a. Remove the attachments from the appliance before cleaning them. Make sure the attachments are dry before using or storing them.
 - b. Never rinse the appliance with water.
5. Clear the air inlets and outlets to prevent blockages, that will cause overheating.
6. The hot air styler should be cleaned at lease once a month.

- 7. To clean the styler, turn the power off and unplug the unit.
- 8. Use a soft brush to clean the air inlet, remove dust and hair.
- 9. Regularly check the mains cable for wear or damage, particularly where it enters the product and plug. Do not use if damaged.
- 10. Do not touch the air inlet to prevent the air speed decreasing when the hot air styler is operation.

The list of the marking symbol

V	Volt	Hz	Hertz
W	Watt	~	Alternating current
	Class II appliance symbol		Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
	Community European		
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.		

The device complies with the European Directives

2014/35/EU and 2014/30/EU

Importer: Medek France

ADD:94700 maisons ALFORT France

MADE IN CHINA