

Contents

Intended use.....	2
Safety instructions.....	3
Parts review.....	5
Packing List.....	5
Before initial use.....	6
Operating instruction.....	6
How to assemble.....	7
Tips for use.....	9
Cleaning and storage.....	9
Technical data.....	10
Disposal.....	10
Troubleshooting.....	11

Dear Customer,

We are delighted that you have chosen this clothes iron dryer . Before using the device for the first time, please read the instructions carefully and keep them for future reference. If the device is given to someone else, these instructions should also be handed over with it. The manufacturer and importer do not accept any liability if the information in these instructions is not complied with.

Explanation of symbols



Safety instructions



Warning electric shock



Keep away from fire



Beware of hot surfaces!



Protection class II



Supplementary information



Read operating instructions before use!

Intended use

- This device is intended to be used to dry and iron textiles, for example blouses and shirts. Delicate textiles such as wool or similar fabrics must not be ironed with this machine. Always follow the care labels for the textiles!
- The device is for household use only and is not intended for commercial applications.
- The device should only be used as described in these instructions. Any other use is deemed to be improper.
- The following are excluded from the warranty: all defects caused by improper handling, damage or unauthorized attempts at repair. This also applies to normal wear and tear.
- After plug in and no further operate, the appliance goes into off mode immediately. Power consumption in off mode does not exceed 0.3 W.

Safety instructions

- This device may be used by children aged 8 and over and by people with reduced physical, sensory or mental abilities or a lack of experience and / or knowledge if they are supervised or have received instruction on how to use the device safely and have understood the dangers resulting from failure to comply with the relevant safety precautions.
- Children must not play with the device.
- Cleaning and user maintenance may not be carried out by children without supervision.



CAUTION: hot surfaces!

The motor unit / telescopic rod will become hot during use. You should therefore not touch it during or shortly after use.

- The device must always be switched off and disconnected from the mains power when it is not being used and before assembling, disassembling or cleaning the device.
- Do not make any modifications to the device. If the mains cable of this device is damaged, it must be replaced by the manufacturer, its customer service department or a similarly qualified person (e.g. specialist workshop) in order to avoid any hazards.
- Allow the device to cool down completely before it is cleaned and stored away.



Danger of injury

- **Danger of suffocation from plastic films and bags!**

Keep children and animals away from the packaging material.

- Always lay the mains cable in such a way that it does not present a trip hazard.
- The device must not be moved during use.



Danger of electric shock

- The device should only be connected to a properly installed socket with safety contacts. The socket must also be readily accessible after connection so that the connection to the mains can quickly be isolated. The mains voltage must match the technical data of the device. Do not use any extension cables.

Safety instructions

- Never immerse the device, mains cable or mains plug in water or other liquids and ensure that they cannot fall into water or become wet.
- Should the device fall into water or liquid get inside it, switch off the power supply immediately. Never attempt to pull the device out of the water while it is still connected to the mains power! Have the device checked in a specialist workshop before using it again.
- Never touch the device, mains cable or mains plug with wet hands when these components are connected to the mains power.
- Switch off the device and pull the mains plug out of the plug socket
 - if a fault occurs during operation,
 - before it is cleaned or
 - before a thunderstorm.
- Use the device only in closed rooms.
- Do not operate the device in a very damp environment.



Danger of fire

 
- Do not use the device in rooms containing easily ignitable dust or poisonous and explosive fumes.
- Do not operate the device in the vicinity of combustible material.
- Do not connect the device along with other consumers (with a high wattage) to a multiple socket in order to prevent overloading and a possible short circuit (fire).

Avoiding damage to material, property and the device


- Always place the device with clear space above it and on all sides on a dry, flat, solid and heat-resistant surface.
- Do not place the device under other electronic devices.
- The device must be switched off when inserting or removing the mains plug. Always pull the mains plug and never the mains cable to disconnect the device from the mains power.
- Never cover up the ventilation slots and do not insert any objects into them.
- Make sure that the mains cable is not squashed, bent or laid over sharp edges and does not come into contact with hot surfaces.
- Protect the device from heat, naked flames, extreme temperatures, persistent moisture, wet conditions and collisions.
- Do not use any corrosive or abrasive cleaning agents to clean the device. These can damage the surface.

WARNING: This appliance is intended only for drying textiles washed in water.


Parts Review

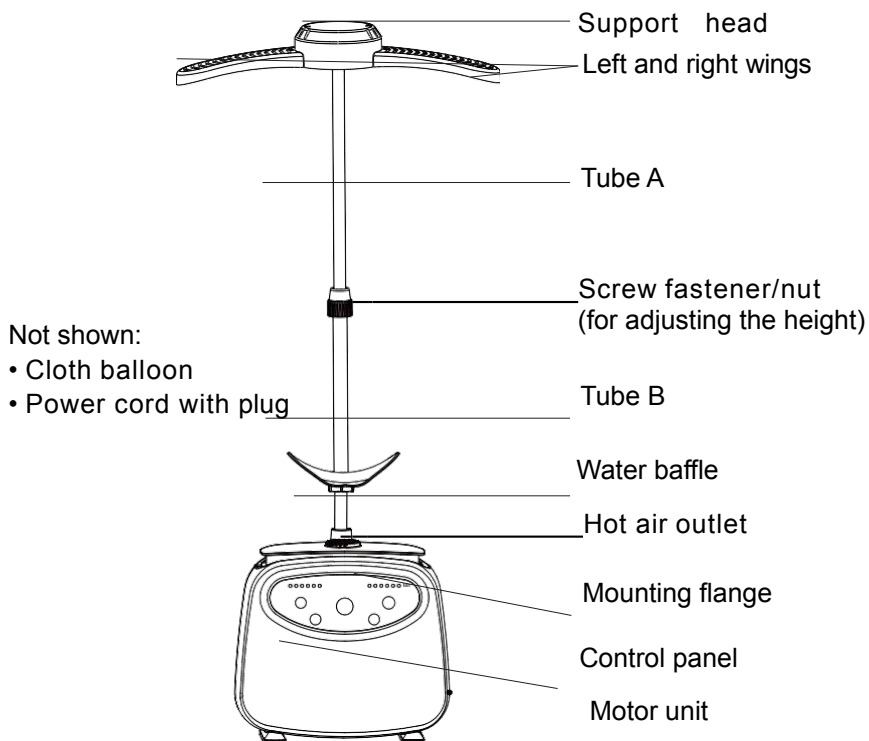

Packing List

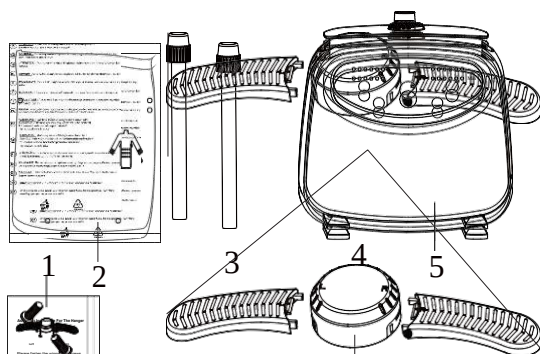 

 - Screw kit
-
- Cloth balloon
-
- Tube
- Left and right wings
- Motor unit
- User Manual
- Water baffle
- Support head

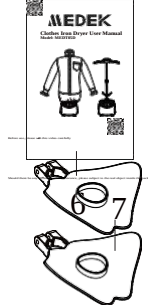

Before initial use



CAUTION!

- **Danger of suffocation from plastic films and bags!**

Keep children and animals away from the packaging material.

- **U**npack the items supplied and check them for completeness (see the "Items supplied and device overview" chapter) and possible transport damage. If the device, the mains plug or the mains cable does have damage, do not use the device(!), but contact our customer service department.

- **B**efore using the device, remove all packaging materials and any labels that may be on the device and are used for protection during transportation or for advertising.

 
- **O**nly place the device on a stable, flat, moisture-resistant and heat-resistant surface.

- **C**autions! Hot surface! The motor unit / telescopic rod will become hot during use. You should therefore not touch it during or shortly after use.

- **I**t is essential that you follow the care labels for the textiles to be dried!

- **N**ever cover up the ventilation slots and do not insert any objects into them.

Operating Instruction

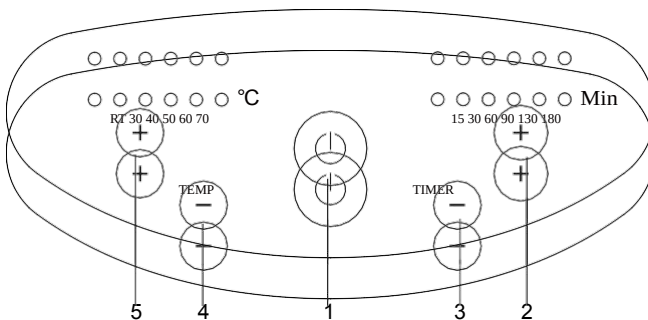

1: Power Switch: Machine On/Off.

2: Plus Icon: Adjustment for Timer Increase. 3:

Minus Icon: Adjustment for Timer Decrease. 4:

Minus Icon: Adjustment for Temperature.

5: Plus Icon: Adjustment for Temperature.

- **Temperature Indicator Light:**

- RT means room temperature.

 
 
- Other temperatures could be set as 30, 40, 50, 60 or 70 centigrade degree.

- **Timer Indicator Light:** You could set the operating time as 15, 30, 60, 90, 130 or 180 minutes. It will be automatically count down based on your set time.



How to assemble

How to assemble for shirt function.

1. Fasten the left and right wings onto the support head with screws (as shown in Fig.1).
2. Unscrew the nut of the aluminum tube B, pull out tube A to adjust the height (as shown in Fig.2). Screw the nut tightly after adjusting the height.

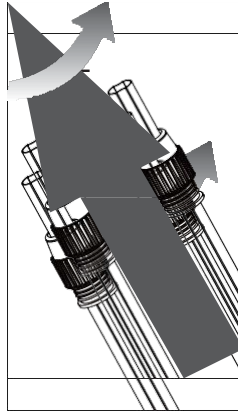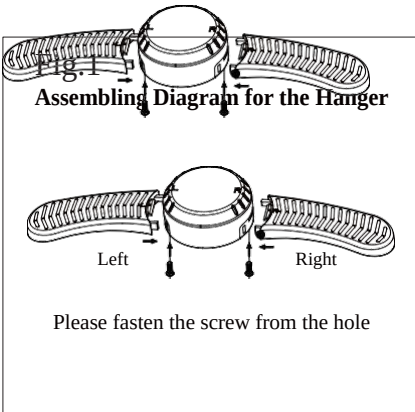

  
3. Insert tube A into the middle hole of the support head (as shown in Fig.3).
- 4.
5. Install the baffle plate from the bottom of tube B to the designated position (as shown in Fig.4)

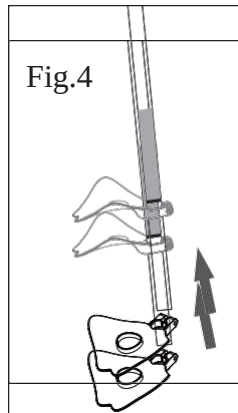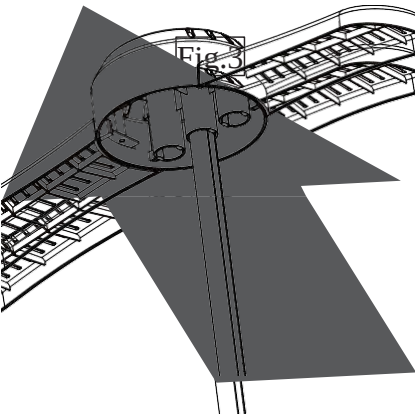

How to assemble

6. Assemble the hanger and tube module into the motor unit (as shown in Fig.5).

 
7. Cover the cloth balloon on the mounting flange, make sure no air leakage at the bottom (as shown in Fig.6/7). The sewing thread on the side of the cloth balloon should align to the middle of the side of the motor unit as far as possible.

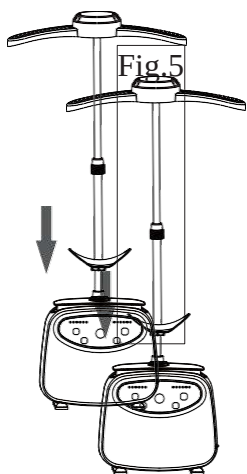

TIP:



 
Make sure the cloth balloon has

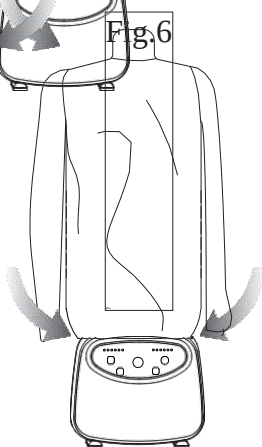

been mounted on the flange perfectly, and no air leakage.

8. Cover the garment over the cloth balloon (as shown in Fig.8), make sure that

 - the collar is fitted over the collar section of support head on the hanger.
- if there is any button strip, it should over the middle of front side of the cloth balloon.
- the arms of the cloth balloon should fit properly in the sleeves of the garment, and make sure not twisted or scrunched up.
- all buttons on the garment (including on the sleeves) should done up.

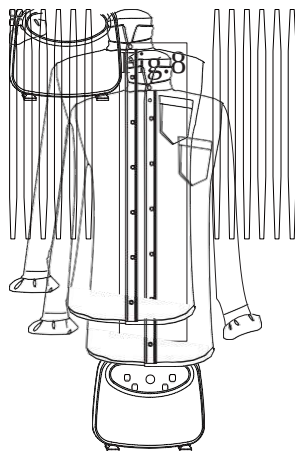

Tips for use

- The drying / ironing process takes around 10 minutes for a spun-dried shirt. However, the length of time can vary depending on the material and thickness of the material. We recommend that you start with a shorter time and extend it if necessary.
- The cloth balloon can be enlarged or reduced in size with the aid of the zip fasteners. For smaller sizes, the zip fasteners should be closed. For larger sizes, the zip fasteners should be opened on both sides.
- Wide-apart buttons may result in the button strip crimping slightly during ironing. Here it is advisable to smooth down the button strip again by hand immediately after the ironing process.

Cleaning and storage



CAUTION!

- Pull out plug from socket and allow the device to cool down completely before doing any cleaning!
- Never immerse the device, the mains cable or the plug in water or other liquids.
- Do not use any corrosive or abrasive cleaning agents or cleaning pads to clean the device. These can damage the surface.
- Clean the device and the cloth balloon if necessary with a slightly damp cloth and a little mild detergent if required. Then wipe down fully with a dry cloth.
- Allow all parts to dry completely before you put them away.
- Store the device in a clean, dry place that is protected from sunlight and is not accessible to children and animals.

Technical data

Model : MEDT05D
Voltage supply : 220-240 V~ 50/60 Hz
Power : 1200-1400 W
Protection class : II



This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption.

Power consumption in off mode	0.22W
Power consumption in standby mode	NA
Maximum time required to automatically reach shutdown mode	Less than 20 min

Disposal



The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and take it to a recycling centre.



Dispose of the device in an environmentally friendly manner. It should not be disposed of in the normal domestic waste. Dispose of the device at a recycling centre for used electrical and electronic devices. More information is available from your local authorities.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Troubleshooting

If the device does not work properly, check whether you are able to rectify the problem yourself.



Do not attempt to repair a defective electrical device yourself!

The device does not work. The LED do not light up.	• Is the mains plug inserted in the plug socket correctly? Correct the fit of the mains plug. • Is the plug socket defective? Try another plug socket. • Check the fuse of the mains connection. • Is the device switched on? Set the timer dial knob to a time.
Unusual noises	1. Are the ventilation slots hot air outlet covered up or blocked? Free up the ventilation slots hot air outlet.
The device switch off suddenly.	• Are the ventilation slots hot air outlet covered up or blocked? Free up the ventilation slots hot air outlet. • The device has an automatic safety switch-off function. It switches off automatically if it overheats. Allow the device to cool down and switch it on again. • Has the device fallen over? The device has a protective switch that is activated if the device falls over. Set the device up again and switch it back on. • Has the set time elapsed? Set the timer dial knob to the time you want again.
Odour produced	• You might notice a slight odor caused by production residues the first time you use the device. However, this is harmless and will cease as you use the device.

Medek France
94700 Maisons ALFORT France
MADE IN CHINA
<http://www.medekfrance.com>