



40cm STAND MIST FAN

INSTRUCTION MANUAL



Before use, please watch
this video carefully

PLEASE READ AND RETAIN THESE INSTRUCTIONS FOR

THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY.

The illustrations used in the manual are to illustrate the operation method and structure of the product. Where there is a small

difference between the physical item and the illustrations, please take the physical as the standard.

Read these instructions carefully before attempting to assemble, install, operate, or maintain the product. Protect yourself and others by observing all safety information. Failure to comply with instructions could result in personal injury and / or property damage.

ABOUT THE DEVICE:

In addition to the modern design, the mist fan also has a range of technical features that transform this pedestal fan into something truly versatile:

- Latest ultrasonic mist evaporation
- Oscillates automatically
- Automatic off timer setting: 0.5-7.5 hours
- Different wind modes: Natural/Normal/Sleeping
- Remote control: Up to 5m operating range
- Big water tank, 3.2 Liters: Up to 8 hours mist on a full tank
- Adjustable mist Volume

SAFETY PRECAUTIONS:

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read** instructions carefully before use.
2. **Remove** and safely discard any packaging material and labels before using this product for the first time. Ensure children and babies do not play with plastic bags or any packaging materials.
3. **Before** use, check that your local voltage corresponds with the specifications shown on the appliance nameplate located under the appliance.
4. **Always** operate the appliance on a horizontal surface which is level and stable. Do not operate the appliance on or near combustible materials such as tablecloths or curtains.
5. **Do not** place the appliance on or near a hot gas or electric burner, or a heated oven.
6. **Never** connect this appliance to an external timer or separate remote-control system.
7. **Never** use this appliance with an extension cord or power board. Ensure it is plugged into a dedicated power point and without any other appliances on the same outlet.
8. **Do not** turn on the power until the appliance and parts are in place

as required.

9. **To protect against electric shock, do not immerse the cord, plug, or appliance in water or any other liquid. Do not expose the appliance to dripping or splashing and ensure that no objects filled with liquids such as vases are placed on the appliance. Do not put any water or other liquid into the main housing of the appliance through the vents. Do not rinse it under the tap.**

10. **Do not touch the appliance, power cord, or power plug with wet hands.**

11. **Unplug from the outlet when not in use, before putting on or taking off the parts, and before cleaning.**

12. **The appliance does not contain any serviceable parts inside. Do not attempt to open and repair the unit yourself. All components should only be serviced by a qualified technician.**

13. **Do not use the appliance if the plug, power cable, or unit itself are damaged. If the power cord is damaged, you must have it replaced at a service center with qualified persons in order to avoid a hazard.**

14. **Do not use the appliance for anything other than the intended use. It is for household use only. It is not to be used outdoors or for commercial purposes.**

15. **Close supervision is necessary when any appliance is used near children. Keep the appliance and power cord out of reach of children when it is in operation.**

16. **This appliance is intended to be used in household and similar applications such as:**

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments

17. **This misting fan should be operated on a separate electrical power point from other operating appliances. If the power point is overloaded with other appliances, this misting fan may not work properly.**

18. **Leave enough open space from other objects while in use. Do not block air intakes or exhausts.**

19. **Do not place the appliance against a wall or against other appliances. Leave at least 13cm of free space on the back and sides and above the appliance. Do not place anything on top of the appliance.**

20. **Do not cover the misting fan while in use.**

21. **Do not let the cord hang over the edge of the table or counter.**

22. **Do not unplug the misting fan by pulling on the cord.**
23. **This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.**
24. **Children shall not play with the appliance.**
25. **Cleaning and user maintenance shall not be made by children without supervision.**
26. **Do not leave the appliance operating while unattended.**
27. **Never put fingers or any other objects through the grilles (fan guards) while the fan is running.**
28. **Long hair can be caught in the fan owing to the air turbulence. Hair, jewelry, and loose clothing must be kept away from the fan.**
29. **The misting fan is not an aromitizer or vaporizer. Do not add any liquid into it such as essential oils, fragrances, or vaporizing fluid. Only add clean water.**
30. **After assembly, do not remove the guards during use or cleaning.**
31. **Be aware that high humidity levels may encourage the growth of biological organisms in the environment.**
32. **Do not permit the area around the humidifier to become damp or wet. If dampness occurs, turn the output of the humidifier down. If the humidifier output volume cannot be turned down, use the humidifier intermittently. Do not allow absorbent materials, such as carpeting, curtains, drapes, or tablecloths, to become damp.**
33. **Unplug the appliance during filling and cleaning.**
34. **Never leave water in the reservoir when the appliance is not in use.**
35. **Empty and clean the humidifier before storage. Clean the humidifier before next use.**

Warning!

Regarding the instruction regarding filling, cleaning and descaling, thanks to refer to the following section.

- **Micro-organisms that may be present in the water or in the environment where the appliance is used or stored, can grow in the water reservoir and be blown in the air causing very serious health risks when the water is not renewed and the tank is not cleaned properly every 3 days.**

Regarding the types of batteries that may be used, and how to remove and insert the batteries thanks to refer to the following section.

- This product contains a remote control. Two 1.5V AAA batteries (not included) must be installed.
- Non-rechargeable batteries are not to be recharged;
- Rechargeable batteries are to be removed from the appliance before being charged;
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the appliance and safely disposed of;
- If the appliance is to be stored unused for a long period, the batteries should be removed;
- The supply terminals are not to be short-circuited.

SHORT CORD INSTRUCTIONS:

- Do not use with an extension cord. A short power-supply cord is provided to reduce the risks resulting from being entangled in or tripping over a long cord.

 
PREPARATION FOR USE:

Before using the misting fan for the first time:

- Carefully unpack the misting fan and remove all the packing materials.
- Place the misting fan on a flat and stable surface.
- Use a soft cloth to remove any dust on the surface that may happen during packing and transport.

BASE ASSEMBLY:

1. Put the plastic cover on the weighted base.
2. Remove the screws from the ends. Insert the two supporting tube ends into the plate holes.
3. Fit the washers and replace the two screws to fix the supporting tubes.

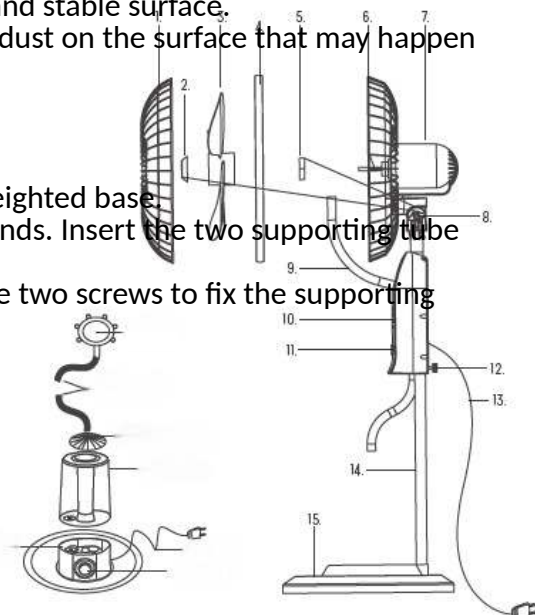

ASSEMBLY INFORMATION:

COMPONENTS:

- 1.Front grid
- 2.Blade spinner
- 3.Blades
- 4.Net frame
- 5.Plastic nut
- 6.Rear grid
- 7.Motor
- 8.Head angle knob
- 9.Flexible hose
- 10.Indicator
- 11.Control buttons
- 12.Thumbscrews
- 13.Power cord
- 14.Supporting tubes
- 15.Base+base cover

Mist ventvent
Flexible
hose Water tank
cover Water tank
Mist generator Power cord
Mist controller

FAN HEAD/CONTROLLER ASSEMBLY:

1.Loose the two thumbscrews located at the back of the fan head/controller.

•Do not fully unscrew- the two nuts will fall off.

2.Locate the two holes underneath the fan head /controller. Assemble the two tubes and push down until it stops.

3.Tighten the two Thumb Screws.

FAN BLADE AND SAFETY GRID ASSEMBLY:

1.Place the rear grid on the fan head, ensuring the wire handle on the back of the grid is at the top.

2.Screw the plastic nut to secure the grid.

3.Place the fan blade onto the motor spindle.

4.Fix the blade into place by gently tightening the spinner anticlockwise onto the end of the motor spindle. The spinner nut is self-tightening when the motor starts - so do not force it.

5.Place the front grid into position and secure it by closing the secure clips. The screw and nut at the bottom of the grille must be fitted.

 
ATTENTION!

•Do not operate the fan until the safe grills and blade properly installed.

MIST GENERATOR AND WATER TANK

1.Place the misting generator onto the base, ensuring it is seated properly in its recess.

2. Place the water tank on top of the misting generator. Fit the cover to the top of the water tank.
3. Push the end of the flexible hose into the hole at the top of the water tank cover and push in as far as you can. (•Do not kink the hose).
4. Push the other end of the hose into the mist vent, that is located at the front of the fan grid (•Do not kink the hose).

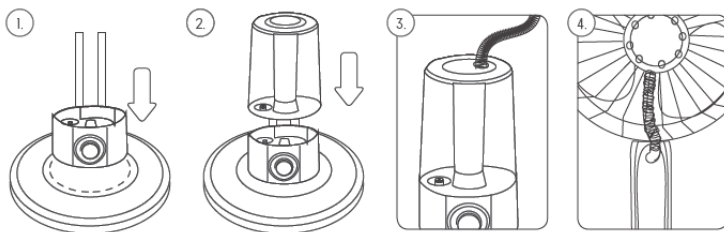


FILLING THE WATER TANK

Unplug the appliance before filling and cleaning the water tank.

1. Take off the water tank and turn it upside down.
2. Twist the cap anticlockwise to unlock it.
3. Fill the tank with cold and clean water, making sure not to overfill it.
4. Refit the cap and turn clockwise to lock in place.
5. Turn the tank over and place it back on the misting generator.


ATTENTION!

 - Ensure the product is unplugged from the mains before filling or refilling the water tank.
- Only use water in the water tank. Do not add any chemicals, oils, or other additives.
- Only use cold or warm water in the water tank. The water must not be warmer than 40°C.

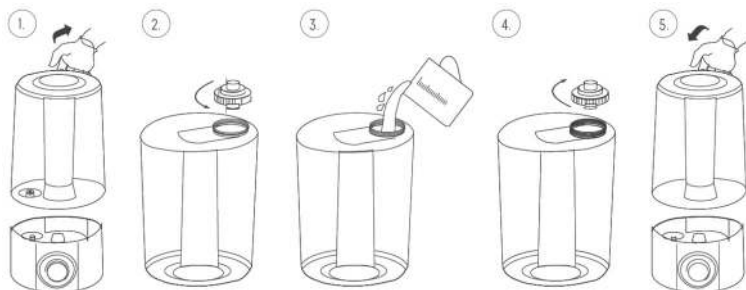


REMOTE CONTROL

 The remote control requires two 1.5V AAA batteries (not included). Open the battery compartment by sliding the cover down and insert the batteries noting the polarity indicated in the battery compartment.

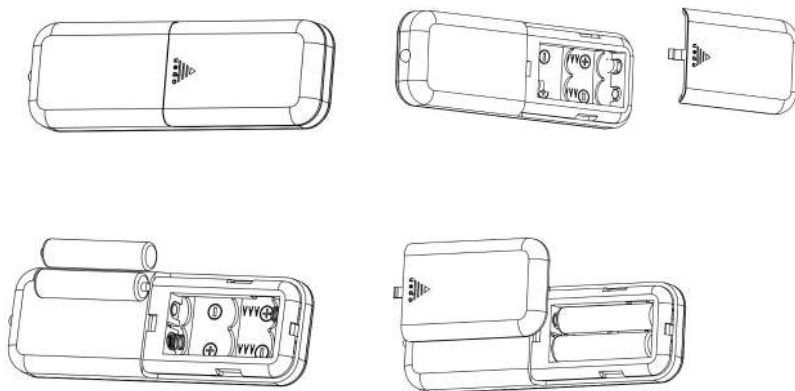

 Mist
humidification
ON/OFF
Timer OFF, 0.5-
7.5 hours
Fan ON & set wind
settings

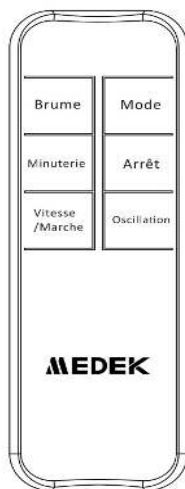


Setting the wind
modes
Fan and device
OFF
Oscillation ON/OFF

CONTROLS:

CONTROL PANEL:

Indicator lights:

 1. Mode:
- Normal/Natural/Sleeping
2. Timer indicator
3. Speed: high-medium-low
4. Power on indicator
5. Oscillation
6. Mist indicator

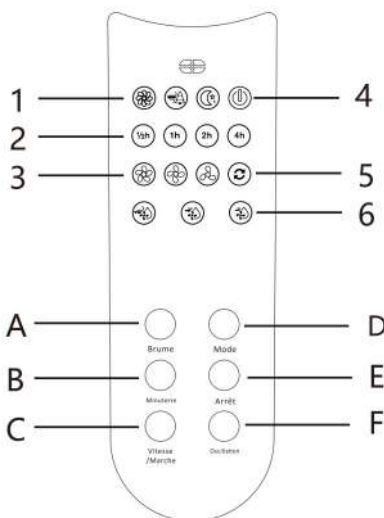

Buttons:

- A. MIST
- B. TIMER
- C. SPEED/ON
- D. MODE
- E. OFF
- F. SWING

OPERATION ON THE FAN

When connected to the power supply, the indicator will illuminate. The fan is under standby mode. You can control the fan with the control buttons or the remote control.

Operation using the button on the fan

1.Fan function:

- Use the “Vitesse/Marche” button to switch the fan ON
- Set the wind speeds (high-medium-low) by pressing the “Vitesse/Marche” button several times.
- Press the “Arrêt” button to switch the fan off.

2.Oscillation function:

- First, switch the fan on. Then press the “Oscillation” button. The mist fan head moves continuously from side to side. Pressing the button again stops the oscillation of the mist fan.

3.Manual tilt:

- Hold the fan head securely. Then undo the wing screw on the right-hand side of the fan head. You can now tilt the head upwards and downwards to adjust the angle. After adjusting the angle, tighten the wing screw again.

4.Cooling using ultrasonic mist

- Press the “Brume” button to switch the ultrasonic mist on / off, or adjust the mist volume(Max-medium-Minimum) by pressing the “Brume” button several times.
- The same mist function also can be controlled by the remote.
- When the mist function is selected the water indicator light will be illuminated green.
- If the water tank is empty (Short of water), the water indicator light will be illuminated red.
- The mist function and fan function can be worked independently, or together.

5Automatic off timer

- If you press the “Minuterie” button when the fan is on, the indicator will then show the time remaining until the fan is due to switch off. You can select between 0.5 and 7.5 hours.

• 30 min	• 2 hr	• 3.5 hr	• 5 hr	• 6.5 hr
• 1 hr	• 2.5 hr	• 4 hr	• 5.5 hr	• 7 hr
• 1.5 hr	• 3 hr	• 4.5 hr	• 6 hr	• 7.5 hr

6.Different wind settings

The wind mode can be adjusted by pressing the “Mode” button on the control panel or the remote.

- Press “Mode” to set the wind mode (normal, sleep, natural).

7.Switching off

- The fan is switched off by pressing the “Arrêt” button.

CLEANING, MAINTENANCE, SERVICE, AND DISPOSAL

Cleaning

- Always unplug the fan before cleaning it.
- Clean the water tank and the water unit every three days to prevent the formation of scale, algae, or bacteria.
- If the fan will not be used for a longer period of time, empty the water tank and dry the water unit with a microfiber cloth.
- If the fan will be placed in storage for a longer period of time (over winter, etc.), always cover it with a suitable cover to prevent dust from entering the device in key places.
- To avoid damaging the plastic and indicators, do not use any abrasive cleaning agents or chemicals.

Maintenance

In general, the mist fan does not require any maintenance. The fan

must not be opened by unauthorized persons. If there seems to be a problem, contact your dealer.

Service and repair

If you notice any damage or a fault with your mist fan, it must be checked and repaired by a specialist. This may be a qualified electrician or your dealer. Damage or faults arising from unauthorized repairs, as well as modifications to the fan, misuse, negligence, and improper or inadequate maintenance void the warranty. Dealers and the manufacturer shall not be liable.

Disposal

The mist fan must not be disposed of together with your normal household waste. Please take the fan to your local recycling centre to dispose of it.

FAULTS & TROUBLESHOOTING

Fault	Possible cause	Solution
The Off button does not light up, the fan does not start, there is no mist	The fan is not plugged in. The fuse has tripped.	Plug the fan in. Reset the fuse.
There is no mist	No water in the tank. The valve in the tank opening is trapped.	Fill with water. Gently move the valve with your finger.
The mist smells funny	The water tank is not clean.	Clean the water unit & tank. Fill with clean water.
The tank display lights up, but there is no wind or mist	The water level is too high.	Remove some water.
Too little mist	The valve may be dirty.	Clean the water unit.


SPECIFICATIONS:

Model: MEDP40	Weight: 7,2 kg
Voltage: 220 -240V ~ 50 Hz	Fan diameter: 40 cm
Power: 75 W	Range remote control: 5 m
Water Tank: 3.2 Litre capacity	Dimensions (HxWxD): 125 x 40 x 43 cm
Remote control: yes	Mist production: by Ultrasonic technology
Fan oscillation: yes	Batteries for the remote: 2x AAA 1,5V
Water consumption : 180 ml per hour (mist production)  Class II	


This device complies with the requirements of European Commission Regulation (EU)No 206/2012+(EU)No 2016/2282 on standby energy consumption.

Description	Symbole	Value	Unit
Maximum fan airflow rate	F	40.2	m ³ /min
Fan power input	P	42.5	W
Service value	SV	0.9	(m ³ /min) / W
Standby power consumption	P _{SB}	0.2	W
Seasonal electricity consumption	Q	13.8	kWh/a
Fan sound power level	L _{WA}	57.0	dB(A)
Maximum air velocity	C	2.8	meters/sec
Maximum time required to automatically reach shutdown mode	N/A	N/A	N/A
Service value test standard	EN IEC 60879:2019		
Source of detailed information	Medek France 94700 MAISONS ALFORT France		

 A guide for assembling the mist fan

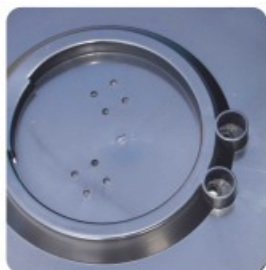


1

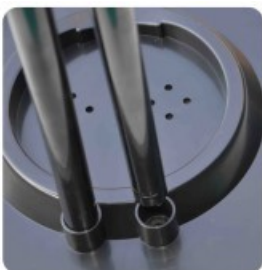 

2

 3

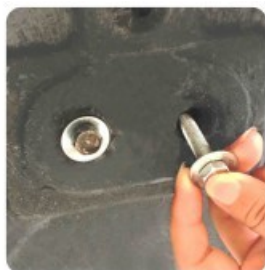

4

5



6



7

8



9



10

11



12



13



DISCARDING WORN HOUSEHOLD DEVICES



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.



Clean the water tank every three days.

Medek France
94700 MAISONS ALFORT France
MADE IN CHINA
<http://www.medekfrance.com>