


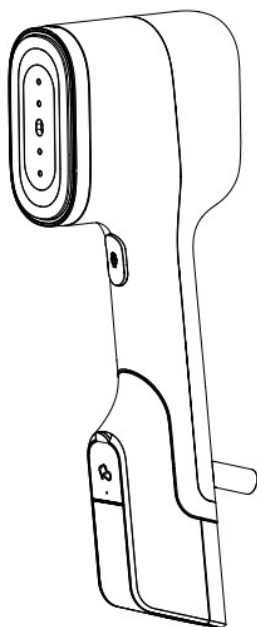

Handheld Steamer
INSTRUCTION MANUAL

Model : MD8006

220-240V~50/60Hz 1200-1400W;



Before use, please watch this video carefully

IMPORTANT SAFETY INSTRUCTIONS

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
Children should be supervised to ensure that they do not play with the appliance.
2. The plug must be removed from the socket-outlet before the water reservoir is filled with water. Place the unit on its back on a flat and stable surface. While holding the water tank with one hand, push the release button into the handle body. Pull the tank out, away from the handle body. Holding the tank, revealing the rubber inlet cover. Open the inlet cover and fill the tank with distilled water (which can be found in grocery stores). We recommend that you use distilled water only as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system. Close the inlet cover and return the tank to its place, make sure that it is secure.
3. Care should be taken when using the appliance due to the emission of steam;
unplug the appliance during filling and cleaning.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
6. keep the fabric steamer and its cord out of reach of children less than 8 years of age when it is energized or cooling down

7. The temperature of water should not be more than 35 °C
8. The steamer must not be left unattended while it is connected to the supply mains
9. The steamer is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking



CAUTION: Hot surface.

READ ALL INSTRUCTIONS BEFORE USING

DANGER- Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in ,or drop into water or other liquids.
4. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING- To reduce the risk of burns, electrocution, fire, or injury to person:

1. the appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance.

Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.

4. Keep the cord away from heated surfaces. Do not allow cord to contact heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.

5. Never drop or insert any object into any opening.

6. Do not use outdoors or operate where aerosol (spray)products are being used or where oxygen is being administered.

7. Do not use an extension cord to operate appliance.

8. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.

9. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.

10. Unplug this appliance before filling or emptying.

11. Do not operate steamer without properly filling the water container with distilled water.

12. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.

13. Burns could occur from touching hot parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down –there may be hot water in tank.

14. Always position steamer with head away from you and any other person when turning on.

15. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.
16. When installing or removing attachments, to avoid contact with hot water, please be sure the unit is off, has cooled, and no steam is being released.
17. Use caution when installing or removing an attachment as it may contain hot water from condensation. Ensure that the attachment is dry or cooled off to avoid contact with hot water.
18. Never steam clothes you, or someone else, are wearing.
19. Do not hold hand in front of steamer.
20. the iron must be used and rested on a flat, stable surface

IMPORTANT-FOR HOUSEHOLD USE ONLY

GETTING TO KNOW YOUR HANDHELD GARMENT STEAMER



1. Fleece fabric
2. Brush base
3. Steam aluminum panel
4. Steam button
5. Water tank

6. Water filling cap
7. Decorative cover
8. Display panel
9. Power switch
10. Panel support frame
11. Front cover
12. Rear cover
13. Power cord
14. Water tank cover

OPERATING INSTRUCTIONS

1. Fill the water reservoir to the max line – we recommend using distilled water.
2. Plug the unit into the electrical mains outlet.
3. Press the power switch for 1 second. The product will start up and enter the preheating state. At this time, the indicator light will flash for 30 seconds.
4. When the heating indicator is steady on, the product enters the heating state
5. Allow the handheld garment steamer to warm up. This can take up to 30 seconds. Note: You may hear a tapping noise during the heat-up cycle. This is normal.
6. When the lights stop flashing, the product can be used.
7. After the product has completed its preheating process, press the steam button quickly and briefly twice. The product will then enter the explosion steam mode. At this time, do not point the steam holes towards the human body as there is a risk of burns.
8. Position the steam nozzle away from you and others. Press the steam button once to release continuous vertical and horizontal steam. Note: Once the steam button is pressed this will lock into steam mode.
9. The product is equipped with a hand-detachment sensing function. When normal steam release occurs, if the hand holding the product moves away from the handle, the product will automatically cut off the steam to ensure personal safety.
10. Keep the power switch pressed for 3 seconds continuously. The product will shut down and the indicator lights will go off.

11. This product has a calcium removal function: During normal operation, if the indicator light flashes rapidly, it indicates that the product needs cleaning. Please simultaneously press the power switch and the steam button for 3 seconds to enter the cleaning mode. Note that the product should be placed horizontally. At this time, a large amount of hot water will come out from the panel. Do not direct the air outlet holes on the panel towards the human body to prevent burns. The cleaning mode will end in 1 minute and 30 seconds, and the indicator light will return to its normal state.

STEAMING TIPS

1. To prepare your fabric for steaming, brush it with the soft cushion brush attachment. This will loosen the fibers and allow better steam penetration.
2. Hang your garment or fabric. Note: Avoid using metal clothes hangers, if possible.
3. Pass the steam jets just above the fabric where the wrinkles are .It may take a few passes to remove the wrinkles completely.
4. After use, unplug steamer and empty any remaining water from the tank to avoid leakage.
5. CAUTION: When hanging garment on a door while steaming, be careful not to damage the door with steam.
6. First test unit on an inconspicuous area of the item to be steamed using the LOW setting to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.
7. When steaming, always keep the unit in motion and about one inch from the surface of the item being steamed to avoid potential damage. Do not continuously hold steamer over an area or touch steamer jets directly to fabric as this can cause damage including shrinkage, melting, or color shift to certain types of material. In the case of heavier, durable fabrics such as wool coats or bedding, slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed using the LOW setting to ensure fabric can tolerate the effects of steam and adjust your technique as needed to obtain the results desired.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption

Power consumption in off mode	0,2W
Power consumption in standby mode	N/A
Maximum time required to automatically reach shutdown mode	N/A

HOW TO CLEAN AND STORE

1. After use, hold the appliance with the filling hole facing down to empty any remaining water from the water tank.
2. Allow the appliance to cool down completely before storing.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Medek France

94700 maisons ALFORT France

MADE IN CHINA

The device complies with the European Directives
2014/35/EU and 2014/30/EU.