

MEDEK

Instruction Manual

LINT REMOVER
MODEL NO.: MDKRA018



Before use, please watch
this video carefully



3W/3V 

Battery warnings

- **Caution!** There is danger of explosion from improper replacement of the battery. Replace battery only with the same or equivalent type of battery.
- Make sure the batteries are correctly inserted. Observe the polarity (+)plus/(-)negative on the battery and housing. Improperly inserted battery can lead to leakage or, in extreme cases, a fire or an explosion.
- Never expose batteries to excessive heat (e/g/ bright sun, fire), and never throw them into fire. The batteries could explode.
- Remove used batteries. Remove the batteries if you know that the product will not be used for a longer period of time. otherwise, the batteries could leak and cause damage.
- Keep batteries out of the reach of small children. If a battery is swallowed, seek immediate medical attention.
- Non-rechargeable batteries must not be recharged.
- If battery leakage occurs, remove the batteries with a dry cloth and dispose of them properly. Avoid contact between battery acid and skin or eyes. If battery acid gets into your eyes, flush them thoroughly with plenty of water and consult a physician immediately. If battery acid comes into contact with your skin, wash the affected area thoroughly with plenty of water and soap.

- Batteries exposed to extremely low air pressure may explode or leak flammable liquid or gas.
- Always change the entire battery pack. Do not mix old and new batteries, or batteries with different charge state.
- The connections must not be short-circuited .

Warnings

- Do not swallow the battery risk of burns!
- keep new and used batteries away from children.
- If the battery compartment is not secure to close, stop using the product and keep it away from children.
- If you think that batteries have been swallowed or are in a part of the body seek medical attentions immediately.

INTENDED USE

This lint remover is intended to remove lint on cloths. Do not use on other material .

BEFORE THE FIRST USE

1. Remove all packaging material and check appliance is complete and undamaged.
2. Make sure that your hands and cloths are completely dry before operation.



A protective cover, which you should put on when processing delicate or long-fibre textiles to prevent damage, is supplied with the components included. We recommend using the appliance without the protective cover on regular, short-fibre textiles.

HOW TO USE & CLEAN AND STORAG

1. Pull down the batteries compartment.
2. Insert 2AA batteries taking care in correct polarity.
3. Remove the protective cover.
4. Turn on the switch.
5. Shave the cloth by moving across the fabric.
6. Switch off when finish.
7. Remove the batteries.

8. Turn the lint container anticlockwise. Empty the lint container.
9. Turn the mesh anticlockwise. Remove the mesh.
10. Pull out the blade assemble by the plastic part.




Warning! Be careful on the sharp part. It can hurt you.

11. Use the brush in the package to clean the blade and mesh carefully.
12. Use the brush to clean the internal part.
13. Put the blade back to the machine.

Warning! Be careful on the sharp part. It can hurt you.

14. Put the mesh back by turning it clockwise.
15. Put the lint container back .
16. Put the clothes on plane surface. Otherwise, the clothes might be damaged if it is folded .
17. Do not press the machine firmly in use to prevent damage the clothes.
18. Do not use the machine when you wear the clothes.
19. Do not use it to shave hair, beard lint on socks silk and so on .
20. This appliance may be used by children age of 8 years or older and by persons with reduced physical, sensory or mental capacities, or lacking experience and /or knowledge, so long as they are supervised or instructed in the safe use of the appliance and understand the associated risks. Children should not be allowed to play with the appliance. Cleaning and user maintenance should not be performed by children without supervision.

21. Regarding the types of batteries that may be used and how to remove and insert the batteries, thanks to refer to the following section. Exhausted batteries are to be removed from the appliance and safely disposed of.

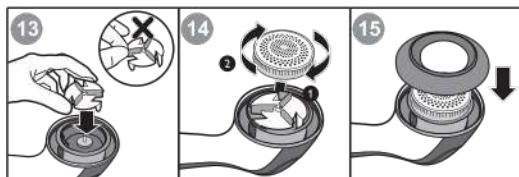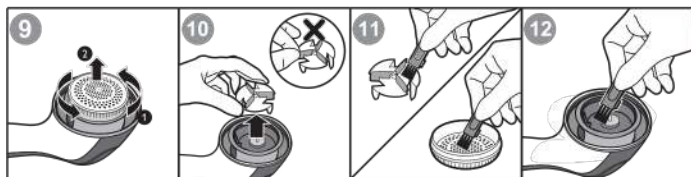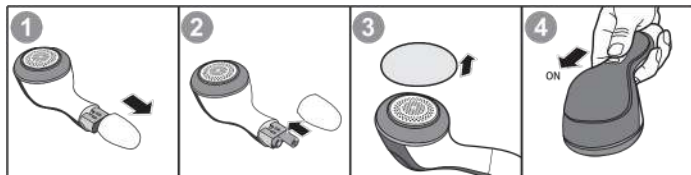

CORRECT DISPOSAL OF THIS PRODUCT



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Medek France

94700 Maisons Alfort France

MADE IN CHINA

<http://www.medekfrance.com>