 


MEDEK

INSTRUCTION MANUAL

Cordless Electric Mop

Model: MEDYM003

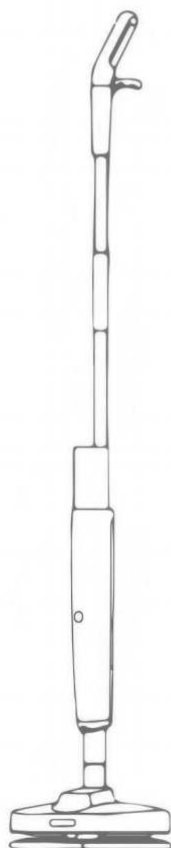 


8



Before use, please watch this video carefully.

PARTS DESCRIPTION

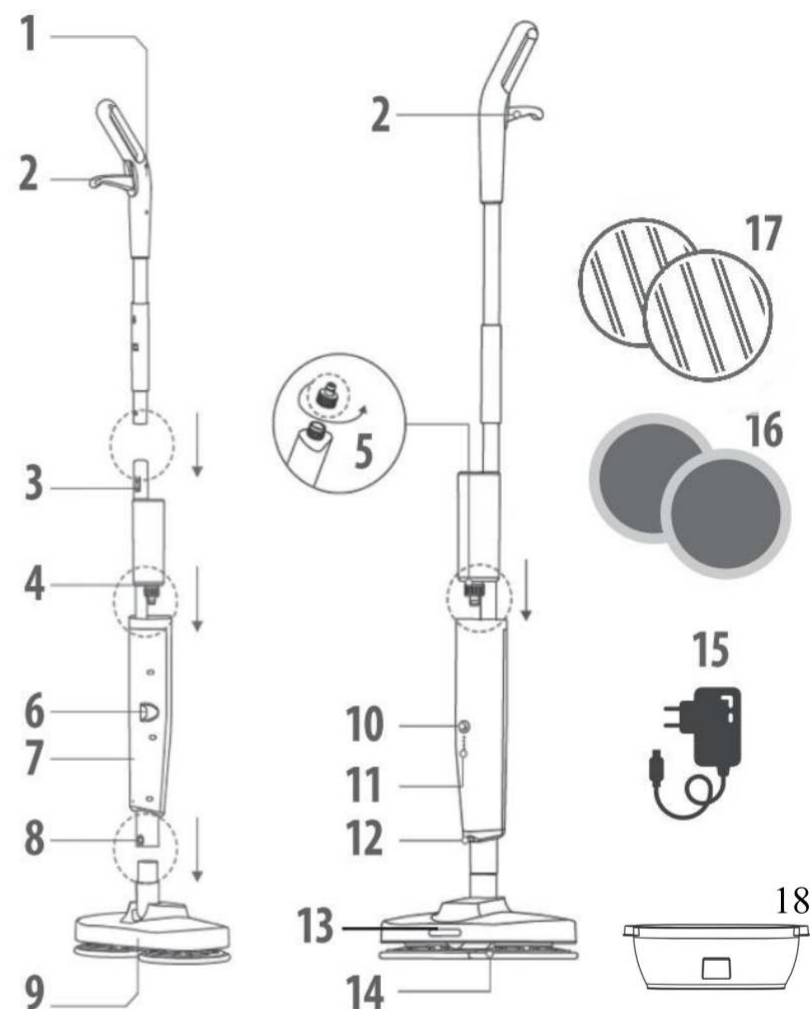

- | | | | |
|----------------------|-----------------------|-------------------------|------------------------|
| 1. Handle | 2. Water spray button | 3. Stick release button | 4. Water tank |
| 5. Water tank cover | 6. Charge input | 7. Device body | 8. Body release button |
| 9. Motor unit | 10. On/off button | 11. Charge indicator | 12. Spray water outlet |
| 13. LED light | 14. Wheel disc | 15. Charge adaptor | 16. Cleaning cloths |
| 17. Polishing cloths | 18. clean base | | |

9

SAFETY

IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE!

- By ignoring the safety instructions the manufacturer can not be hold responsible for the damage.
- Never move the appliance by pulling the cord and make sure the cord can not become entangled.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Make sure the voltage indicated on the appliance corresponds to the local mains voltage before plugging in.

CHILD SAFETY:

This appliance should not be used by children under 8 years of age. This appliance can only be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or understand the hazards and instructions concerning use of the appliance in a safe way. Children should not play with the device. Keep the device and cord out of the reach of children under 8 years old. Cleaning and maintenance should not be done by children unless they are over 8 years old and under supervision.

DEVICE SAFETY

- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from attachments and mixing container during operation to reduce risk of injury to persons, and/or damage to the appliance.
- The power cable should be plugged into an electrical outlet away from sink or hot surface.
- Do not operate a damaged power cable. Replace damaged power cable immediately.

BEFORE THE FIRST USE

- Take the appliance and accessories out the box. Remove the stickers, protective foil or plastic from the device.
- Before using your appliance for the first time, wipe off all removable parts with a damp cloth. Never use abrasive products.
- Put the power adaptor cable into the socket (Note: Make sure the voltage which is indicated on the device matches the local voltage before connecting the device Voltage 100V-240V 50/60Hz)

CHARGING INSTRUCTIONS

- The lights will be flashing indicate the unit is charging. When fully charged, all lights turns off. Do not use the device during charging.
- The device is fully charged after 3-5hours and can then be used effectively.
- During charging, it is normal for the body of the device to heat up.
- When the last light flashing means low power.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. The supply cord cannot be replaced. If the cord is damaged the appliance should be scrapped.
- Warning: Do not charge non-rechargeable batteries.

Rechargeable Li-ion Battery

Model: 2S1P

Spec: 21NR19/66

Spec: 7.4V/2000mAh/14.8Wh

USE

For turning device press On/Off button. Device start working. Pre-moisten the area to be cleaned using the water spray button. After cleaning turn off device press to On/Off button.

CLEANING AND MAINTENANCE

- Always remove the plug from the socket when the device will be cleaned.
- Clean the appliance with a damp cloth. Never use harsh and abrasive cleaners, scouring pad or steel wool, which damages the device.
- Never immerse the electrical device in water or any other liquid.
- Cleaning and polishing cloths are suitable for washing in the washing machine.

Technical Data

Rated voltage: 7,4 Vd.c. (battery: 2 x 18650 Li-ion 3,7 Vd.c. 2000 mAh)

Rated power: 25W

Water Capacity: 270ml

Adapter input: 100-240V~50/60Hz 0.2A MAX

Adapter output: 9V= 0.5A 4.5W

Working time: 60mins

If using with water, working time will be shorter.

Liquid to be used in the reservoir: max 4.5L, clear water

Caution: Please add the water no more than Max water line or will cause spinning failure and damage the machine

The instructions for appliances with a liquid dispensing system shall specify the amount and type of the liquid to be used.

WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.

The appliance is only to be used with the unit < CZH008N090050EUWP > provided .

A hazard may occur if the appliance runs over the supply cord.

This appliance contains batteries that are non-replaceable.

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption.

Power consumption in off mode	NA
Power consumption in standby mode	0,10W
Maximum time required to automatically reach shutdown mode	NA

This equipment power management function is inappropriate as for the intended use.



 
Crossed out dust bin. Batteries and battery packs should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or local store for recycling advice.



 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

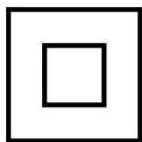

symbol IEC 60417-5172(2003-02)]

class II equipment



symbol IEC 60417-5957 (2004-12)

for indoor use only

IP20

No-protected for water

Medek France

94700 maisons ALFORT France

MADE IN CHINA

 
<http://www.medekfrance.com>

MEDEK

GEBRUIKSAANWIJZING

Elektrische mop

Model: MEDYM003

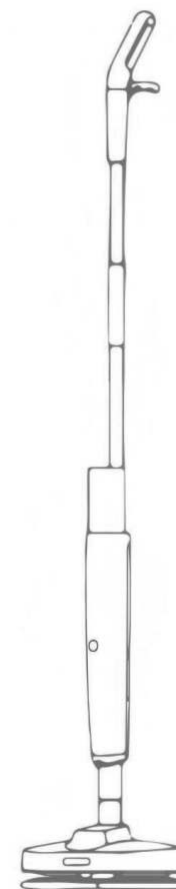

Bekijk deze video
zorgvuldig voor gebruik.