


MEDEK

Wireless Handheld Vacuum Cleaner

Model:MD109E

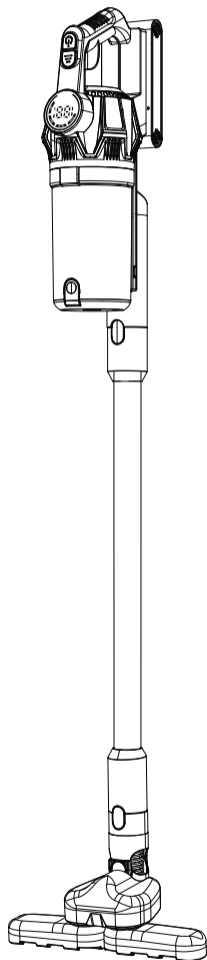

Before use, please watch this video carefully

SAFETY WARNINGS AND GUIDELINES

Please read this entire manual before using this device, paying extra attention to these safety warnings and guidelines. Please keep this manual in a safe place for future reference.

1. **T**his device is intended for indoor use only. It should be stored in a cool, dry place.
2. **D**o not expose this device to water or moisture of any kind.
3. This appliance is intended for domestic, dry vacuum cleaning only. Do not use it to pick up liquids or on wet surfaces.
4. **D**o not use on concrete, asphalt, or other rough surfaces
5. **D**o not touch the appliance, charger, or the charger cord with wet hands.
6. **T**his device ventilates excessive heat through the slots and openings in the case. Do not block or cover these openings.
7. **T**his appliance is not intended for use by children aged 10 years and younger. Older children should be closely supervised during use.
8. **U**se only the accessories and attachments that are included with this appliance. Use of other accessories or attachments may present a risk of personal injury.
9. **K**eeep the appliance and accessories away from hot surfaces.
10. **T**ake care to prevent damage to the charger cord. Inspect the charger, cord, and appliance for damage before use. Do not use if damaged.
11. **T**his device contains a Lithium-polymer battery. Dispose of this device only in accordance with local, state, or federal regulations for electronic waste.
12. **C**harge the battery before first use and at least once every three months to keep it fresh and capable of holding a full charge. Do not allow the battery to become fully discharged.
13. **D**o not vacuum up anything which has been burning or smoking, e.g., cigarettes, ashes or hot ash, whether glowing or apparently extinguished.
14. **D**o not vacuum up liquid. Allow steam-cleaned or shampooed carpets and rugs to dry out completely before vacuuming.
15. **D**o not use the vacuum cleaner to vacuum toner dust, toner, such as that used in printers and photocopiers, can conduct electricity.

 
16. **C**lean using a soft, dry cloth only. Do not use chemical cleaners, solvents, or detergents. For stubborn deposits, moisten the cloth with warm water.

17. **T**his device has no user serviceable parts. Do not attempt to open, service, or modify this device, the battery, or the charger.

18. **T**his appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

19. **T**he appliance is only to be used with the power supply unit provided with the appliance.

20. **T**his appliance contains batteries that are only replaceable by skilled persons.

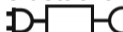21. **W**ARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.  Removable power unit.

22. **T**he battery must be removed from the appliance before it is scrapped.

23. **T**he appliance must be disconnected from the supply mains when removing the battery.

24. **T**he battery is to be disposed of safely.

25. **E**xhausted batteries are to be removed from the appliance and safely disposed of.

26. **I**f the appliance is to be stored unused for a long period, the batteries should be removed.

27. **T**he supply terminals are not to be short-circuited.

Standby mode power: 0.48W

Off mode power: N/A

Time to enter standby mode: 2min

28. **C**harge the battery immediately after it is fully discharged. If the battery fails to charge, this is a normal phenomenon. Charging will resume automatically once the internal temperature of the battery pack cools down. If the battery still does not charge for an extended period, please contact after-sales service for repair or replace the battery pack.

Wall bracket installation instructions

1. Drill holes at appropriate positions on the wall, then fix the wall bracket to the wall with expansion screws.
2. Next, install the DC connector of the adapter onto the wall bracket.

3. Alternatively, attach the wall bracket to the wall using the self-adhesive 3M sticker included with the bracket.

Please use the dedicated adapter for charging.

Charger Model: CZH013265050EUWP.

This product adopts a lithium-ion battery for power supply.

Battery Model: INR18650-2000.

How to deal with leaking batteries

1. **I**n case of leakage from the lithium battery pack, immediately remove the battery pack from the device and place it separately.

2. **P**lace the leaking battery into a corrosion-resistant sealed container and mark it as hazardous waste.

3. **T**he leaking battery must be scrapped entirely and handed over to a professional institution for disassembly and recycling.


4. **X**It is strictly prohibited to disassemble or repair the battery pack privately.

XIt is strictly prohibited to directly flush the inside of the battery pack with water.


XIt is strictly prohibited to continue using, charging or transporting a leaking battery.

XIt is strictly prohibited to arbitrarily dump leaked substances or contaminated materials.

PRODUCT OVERVIEW

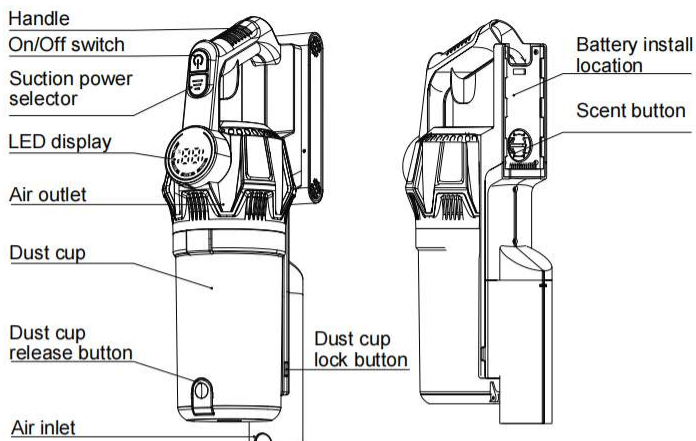


Crevice brush

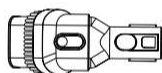


2 in 1 brush





Basic electric aluminum tube

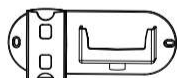

Wall mounting bracket

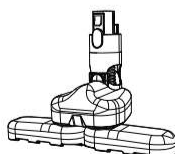


Flex brush

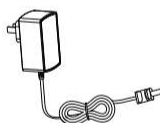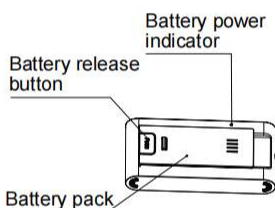

Adapter



Bracket screws

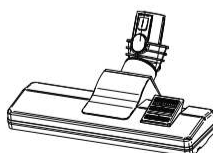


Floor brush

Operation Instruction


1.Product Assembly

- 1)Connect the main unit with aluminum tube.
 - 2)Insert the motorized floor brush into the end of aluminum tube.
 - 3)Insert the battery pack into the battery install location.
- Make sure there is no looseness at the connections before finish assembling.

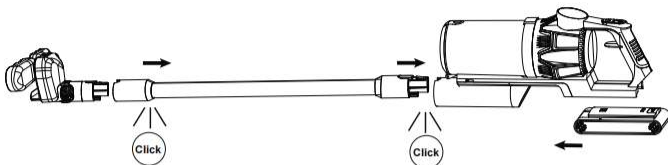


2.Disassembly of battery pack

Press the battery release button and pull the battery pack according to the direction on the picture below.

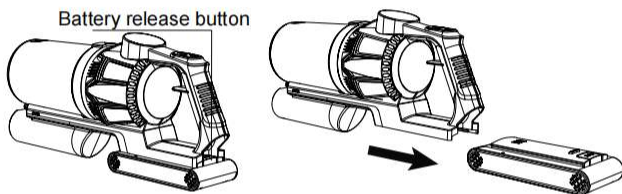


3.Accessories assembly

Insert the accessory into the main unit, you will hear the "click" when the accessory is assembled rightly.

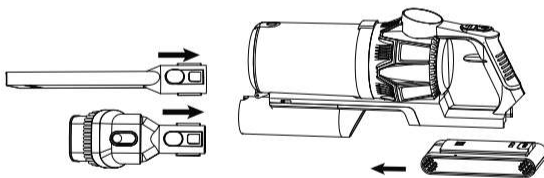


- 4.Open the fragrance release cap as indicated by the arrow. Drop perfume onto the sponge, with less than 5 drops to avoid overflow from excessive perfume. Then screw the fragrance release cap back on. Scent will be naturally released during main unit operation.

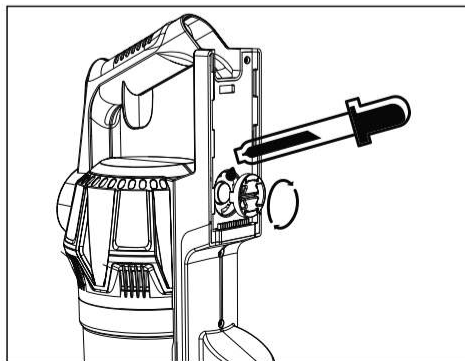

4.Operation and function of the digital display

Digital Display Instruction

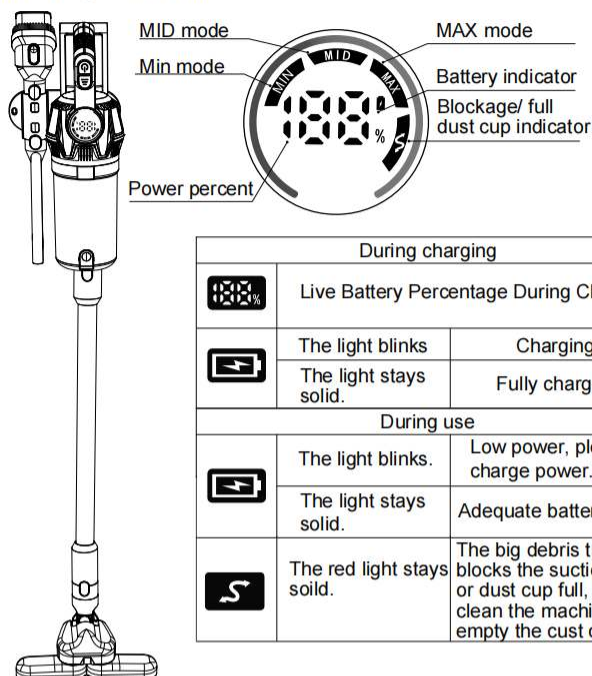

Operating

Step 1. Preparation

Please make sure the battery power is sufficient before using it.

It's recommended to charge for 6 hours before first use.

Step 2. Operate

Choose the right accessory for a specific task.

Press the on/off switch to turn on the vacuum cleaner.

It starts in MIN mode by default, **MIN** will light up.

If large debris is sucked in, the RGB light gradually shifting to red.


Stop and clean the machine. After clearance, it will continue to stay lit for an additional 5 seconds. (timer resets if dust is detected). Finally, the lights will turn off one by one from right to left.

Press the suction **MID** power selector button on the handle, the MID model is selected and LED will light up. Press the suction power selector button on the handle, the MAX model is selected and **MAX** LED will light up.

Press the button again to return to the **MIN** mode.



Press the on/off switch to turn off the vacuum cleaner.

On/off switch

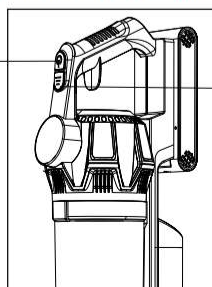

Suction selector button

Step 3. Empty the dust cup and clean the filter.
It's recommended to empty the dust cup after every use.

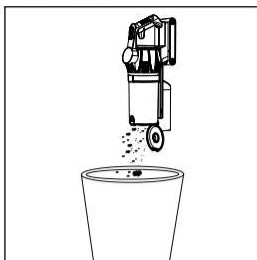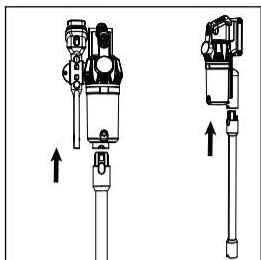

Product Maintenance



To keep the best performance of the appliance, we recommend cleaning the filter kit after each use. Follow the steps to clean the filter kit.

Main unit maintenance (handheld part)


1. Please stop the appliance and remove the battery pack before cleaning it.
2. Scrub the appliance with water or neutral detergent. Make sure the cloth is wrung before the scrubbing and prevent the water from flowing into the inner machine.
3. Do not place the appliance in sunlight or wet places after cleaning.

Dust Cup & Filter



1. Press the dust cup lock button on the two sides and rotate to take out the dust cup.

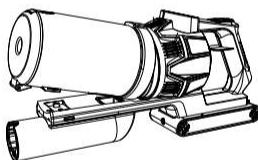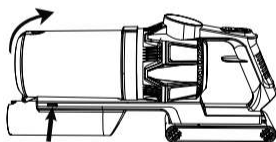


2. After removing the dust cup, take out the filter cotton from the dust cup.
Grab the handle and take the filter component out of the dust cup.

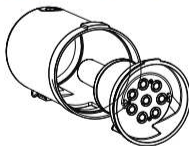

3. Empty the dust into the trash bin, and then wash the filter cotton and filter component under the faucet. Air dry the filter kit.

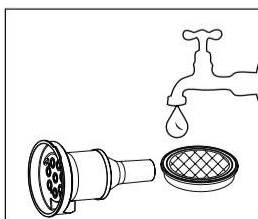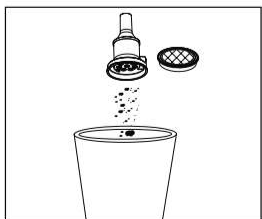

4. Rotate the lid in the direction of the unlocking mark to the position shown in the figure, and then remove the lid in the direction of the arrow shown in the figure.

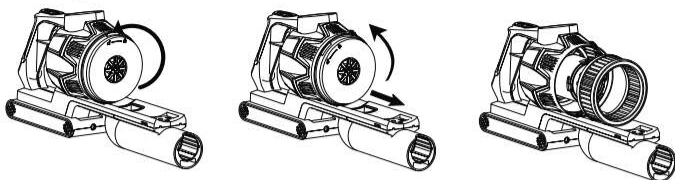


5. Then remove the internal filtering HEPA filter in the direction indicated by the arrow, and wash HEPA with clean water.

Warning: After cleaning the filter kit, make sure they are air dried before putting them back. Otherwise, it will damage the main unit. Change the HEPA filter every 3 to 6 months for best results. Always use official replacement filters to keep your vacuum working perfectly.


Storage

1. Screw or stick the wall bracket to the wall as the direction shown in the figure. Ensure that the height is sufficient to keep the appliance off the floor.


Warning: You will need a suitable location near a free power socket for mounting the appliance on the wall. Be careful not to damage any electrical wiring in the wall.

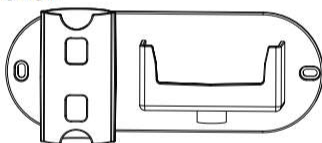

2. Insert the DC head of the charging cable into the wall bracket, and then rotate it 90 degrees in the direction shown in the diagram to clamp the DC charging head.

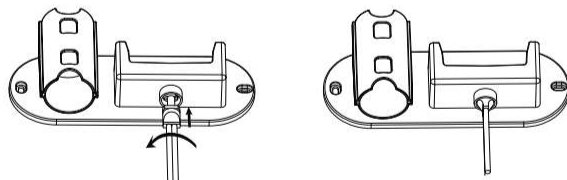


3. Press and hold the button on the aluminum tube, then push the aluminum tube in the direction of the dust cup to minimize its length.

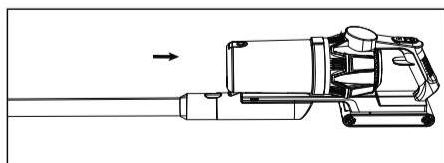

4. Hang the vacuum cleaner on the wall bracket and plug it in. The DC charger at the bottom can be connected to the main unit for charging. Insert the long crevice nozzle and the 2-in-1 brush into the wall bracket.

Reminder: For long-term storage, recharge for 3 hours every 3 months (no need to fully charge) to maintain battery health.

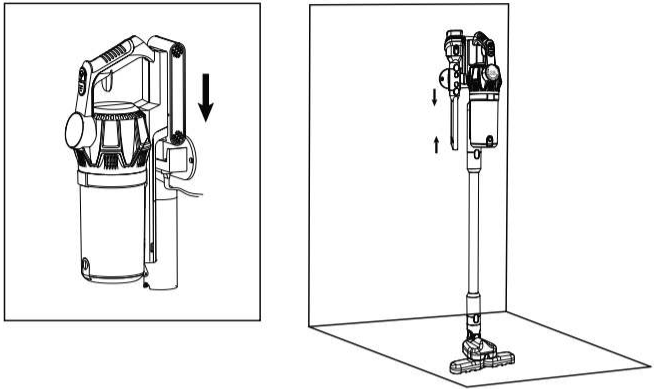

Error code displayed

Error code displayed	Possible cause
E0	Overvoltage of the charger
E1	Short-circuit protection
E2	Main motor overcurrent
E3	Load protection
E4	Temperature protection
	Pipe blockage

Product parameters

Description	Wireless Handheld Vacuum Cleaner
Model No.	MD109E
Rate voltage	DC22.2V
Power	200W
Adapter output	DC26.5V, 0.5A
Battery	6x2000mAh
Battery capacity	44.4Wh
Charging time	5~6 Hours
Dust cup capacity	1200ML
Main unit size	409*108*172MM
Adapter input	100-240V 50/60Hz
Standby mode power	0.48W
Off mode power	N/A
Time to enter standby mode	2min

Disposal information



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Worn out and dead batteries must be discarded in specially marked containers, delivered to special waste collection points or to electronic equipment vendors.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Medek France
94700 maisons ALFORT France
MADE IN CHINA
<http://www.medekfrance.com>