



Electric Pressure Cooker

User Manual

Model: MEDLB60



Before use, please watch
this video carefully

FOREWORD

About this document

This user manual contains all the information for correct, safe, and efficient use of the appliance.

Ensure you have fully read and understood the instructions in this user manual before you use the appliance.

Always store this user manual in a safe place near the appliance for future reference.

This manual is originally written in English. All other languages are translated documents.

APPLIANCE DESCRIPTION

Intended use

This appliance is intended for indoor use only.

This appliance is intended exclusively for domestic, non-commercial use.

This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels, and other residential type environments;
- bed and breakfast type environments.

Any use of the appliance other than described in this user manual is regarded as misuse and may cause injury or damage to the appliance and void the warranty.

SAFETY INSTRUCTIONS

Safety precautions

Important precautions:

- Read all the instructions.
- Do not let children near the pressure cooker when in use.
- Do not put the pressure cooker into a heated oven.
- Move the pressure cooker under pressure with the greatest care. Do not touch hot surfaces. Use the handles and knobs. If necessary, use protection.
- Do not use the pressure cooker for a purpose other than the one for which it is intended.
- This appliance cooks under pressure. Scalds may result from inappropriate use of the pressure cooker. Make sure that the cooker is properly closed before applying heat. See "instructions for use".
- Never force open the pressure cooker. Do not open before making sure that its

internal pressure has completely dropped. See "instructions for use".

- **N**ever use your pressure cooker without adding water, this would seriously damage it.
- **D**o not fill the cooker beyond 4/5 MAX mark of its capacity. When cooking foodstuffs which expand during cooking, such as rice or dehydrated vegetables, do not fill the cooker to more than half of its capacity.
- **U**se the appropriate heat source(s) according to the instructions for use.
- **A**fter cooking meat with a skin (e.g. ox tongue) which may swell under the effect of pressure, do not prick the meat while the skin is swollen; you might be scalded.
- **W**hen cooking doughy food, gently shake the cooker before opening the lid to avoid food ejection.
- **B**efore each use, check that the valves are not obstructed. See "instructions for use".
- **N**ever use the pressure cooker in its pressurized mode for a deep or shallow frying of food.
- **D**o not tamper with any of the safety systems beyond the maintenance instructions specified in the instructions for use.
- **O**nly use manufacturer's spare model. In particular, use a body and a lid from the same manufacturer indicated as being compatible.
- **KEEP THESE INSTRUCTIONS.**
- **Warning:** Avoid spillage on the connector.



WARNING

- **B**y ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- **I**f the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **N**ever move the appliance by pulling the cord and make sure the cord cannot become entangled.
- **T**his appliance is only to be used for household purposes and only for the purpose it is made for.
- **T**his appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Cleaning and user maintenance shall not be made by children. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- **T**o protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.

- Children shall not play with the appliance.
- The appliance inlet must be dried before the appliance is used again.
- For the first operation, it is advisable to read the manual carefully beforehand and keep it properly for future use.
- If abnormal noise, smell, smoke or any other failure or breakage is found during the operation, you should turn off the switch and unplug it. Then contact with your service center for repair. Do not repair by yourself.
- Never leave the appliance unattended during operation.



WARNING

- Position the lid so that steam is directed away from the handle.
- The heating element surface is subject to residual heat after use.
- **Warning:** Risk of injury in case of misuse.
- Never use the appliance if there are visible signs of damage or defects. Always replace a damaged or defective appliance immediately.
- Always check the valves, allowing the escape of steam, to ensure that they are not blocked.
- Do not cover the valves, lid and/or air vent of the appliance. Do not place any object over the top opening.
- During use, when releasing pressure and when opening the lid, hot steam is released. Do not stand in the path of the steam, as it can cause burns or other serious injuries. Make sure the appliance is properly closed.
- Never use the appliance for deep frying or pressure frying with oil. It may cause fire or serious damage.
- This appliance cooks under pressure. Improper use may result in burns and injury. For detailed information read the "Use" section in this manual.
- Do not open the pressure cooker until the appliance has cooled and all internal pressure has been released. If the lid is difficult to open, this indicates that the cooker is still pressurized. Never force to open the appliance. Any pressure in the cooker can cause injury. For detailed information read the "Use" section in this manual.
- Do not fill the inner pot higher than the "4/5 MAX" line. For food that expand during cooking, such as rice and dried vegetables, do not fill the inner pot over 2/5.
- **Warning:** Spilled food can cause serious burns.
- Do not use the lid handle to move the product, but use the appliance handles.
- To prevent risk of explosion and injury, never replace the seal ring yourself. Always let the manufacturer, its service agent or a similarly qualified person replace it.

- This product has an 10s automatic start function, please do not use the product with the pot empty to avoid burns and scald risk.

Electric shock hazard due to short-circuiting:

- Always avoid spillage on the power cable.
- Never open the appliance. The appliance may only be opened for maintenance by an authorized technician.
- Never replace the power cable yourself. Always let the manufacturer, its service agent or a similarly qualified person replace the power cable.
- Always unplug the power cable when the appliance is not in use or unattended, and before cleaning.
- Always check if the voltage stated on the type plate of your appliance matches your mains voltage before use.
- For detailed information on how to clean surfaces that come into contact with food, refer to the "Cleaning and maintenance" section in this manual.
- The container must not be opened until the pressure has dropped sufficiently. For details on how to open the container safely, please refer to the following section of the instructions.

TECHNICAL SPECIFICATIONS

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption.

Appliance name	Electric Pressure Cooker
Article number	MEDLB60
Capacity	5.8L
Power supply	220-240V ~ 50/60Hz
Power consumption in use	1000 W
Power consumption in Off-mode	0,4 W
Power consumption in Standby mode	0,8 W
Time needed to reach Off-mode	1 MIN
Time needed to reach Standby mode	0 MIN

Main parts



- ① Lid
- ② Float Valve
- ③ Exhaust valve
- ④ Pressure release switch
- ⑤ Quick release
- ⑥ Natural release
- ⑦ Inner pot
- ⑧ Main unit
- ⑨ Control panel

- ⑩ Keep warm button
- ⑪ Delay start button
- ⑫ - Button
- ⑬ + Button
- ⑭ Cancel button
- ⑮ Start button
- ⑯ Rice scoop
- ⑰ Measuring cup
- ⑱ Cooking stand

BEFORE FIRST USE

1. Take the appliance and all accessories out of the box. Remove any stickers, plastic, or protective film from the appliance.
2. Wash the lid, inner pot and accessories with warm soapy water and dry thoroughly.
3. Place the appliance on a flat, stable surface that can handle heat and moisture. Leave at least 10 cm of space around it.
4. This appliance is not suitable for installation in a cabinet or for outside use.
5. Plug the power cable into a socket.
6. Run the cooker with 2 cups of water, no lid, and no food for 10 minutes to remove any smell or smoke from the factory. When you turn on the appliance for the first time, it may give off a slight odor. This is normal. Make sure the room is well ventilated. This smell is only temporary and will disappear soon.
7. Always put the inner pot inside the main unit before switching on the appliance.
8. Make sure the inner pot contains liquid, or be ready to immediately add oil, butter or margarine to the inner pot before switching on the device.
9. Always dry the outer surface of the inner pot before placing it inside the main unit. Any moisture remaining on the inner pot surface may cause a cracking noise while the unit is heating up.

USE

1. Open the lid①
 - Turn the lid to the left (counterclockwise) until it unlocks, then lift it up.
2. Check the lid parts
 - Make sure the float valve②, exhaust valve③, and seal ring (it goes inside the lid) are clean and in the right place.
 - The float valve② must move up and down easily.
3. Add food and liquid to the inner pot⑦
 - Do not go over the PC 4/5 MAX line inside the pot.
 - For foods that expand, like rice or beans, use only enough liquid to fill the container halfway.
4. Put the inner pot⑦ into the main unit⑧
 - Dry the outside of the pot before placing it inside. Turn it a little to make sure it touches the heating plate well.
5. Close the lid①
 - Match the marks on the lid① and main unit⑧, then turn the lid to the right (clockwise) until it locks.
6. Set the pressure release switch④ to vent or seal:
 - For most cooking: set it to seal (Natural release⑥).
 - For slow cook only put the pressure release switch④ on vent (quick release⑤).
 - For slow cook or keep warm: you can use it with or without the lid.
 - The "saute" function must be used without the lid.
7. Plug in and start cooking. CAUTION: Power should be 220-240V, 50/60Hz.
 - Plug in the cooker.
 - Press START⑮.
 - The START⑮ button lights up, and the appliance beeps one time.
 - Choose a cooking program (like rice, soup, poultry). The selected program flashes and the default cooking time is shown.
 - Hold the + ⑬/- ⑭ button to increase or decrease with 10 minutes. Press to change by 1 min.
 - Press START⑮ again or wait 10 seconds to begin. The safety cooking indicator will light up during cooking.
 - The time required for pressure built up depends on the type and quantity of food and liquids. The cooking time countdown starts once the pressure level reaches suitable levels.
8. After cooking
 - The cooker will go to keep warm⑩ mode automatically.
 - You can press CANCEL⑬ to stop it.
9. Open the lid① safely
 - Let the appliance cool down. Do not open the lid① immediately or with force.
 - Wait until the float valve ② (It is next to the exhaust valve) goes down.
 - Always wear oven mitts and keep your face and hands away from steam.
 - Use quick release⑤ or natural release⑥ to let out pressure.
10. Quick release⑤:
 - Push the pressure release switch④ forward to let out steam.
 - Wait until the float valve② goes down.
 - Do not open the lid while the float valve② is still up.
 - Let the appliance cool before opening.
 - Use oven mitts—hot steam can burn your hands.
11. Natural release⑥:
 - Let the cooker cool down on its own.
 - Wait until the float valve ② goes down.

- This can take 15–20 minutes while in keep-warm mode.
- You can put a wet towel on the lid① to cool it faster.
- To open the lid②: Hold the lid handle. Turn the lid counterclockwise to open. Lift the lid up.
- If the lid is hard to open, push the pressure release switch④ to vent (quick release⑤) to let air in.

Control Panel

BOUTON	FONCTION	SETTING
START ^⑮	Switch on the appliance or start cooking process	Lights up during Standby and working mode. Also lights up during off mode, touch to go into standby mode.
CANCE ^⑭	Cancel cooking process and switch off the appliance	Lights off when plugin, lights up when press "Start", go into standby mode, and through cooking process.
KEEP WARM ^⑯	Keep warming	Lights up when appliance keeps warming. Flashing when press "KEEP WARM" button.
DELAY START ^⑩	Set the auto cook. For delayed start of selected program(range: 1min-24 hours). Press the desired program and press within 10sec the delay start button. Adjust time using the +/- buttons. Press the start button or wait for 10 seconds to begin the delay start function. When set time has elapsed operation will begin according to the selected program.	Flashing when press" DELAY START" button, stays on, after 10 seconds or press" START" button to start delay cook program.
+ BUTTON ^⑰	Increase cooking time.	Press to add more cooking time. Hold the button to change the numbers faster.
- BUTTON ^⑱	Decrease cooking time.	Press to lower the cooking time. Hold the button to change the numbers faster.

TROUBLE SHOOTING

Problem	Explanation
The appliance is not working properly.	Check if it's plugged in. Check your wall socket or fuse. Let it cool down if overheated.
No pressure.	If the Float Valve is stuck up, clean it. If there is not enough liquid, add more liquid.
Steam keeps coming out.	Exhaust valve is not set right, push it down with oven mitts. If valve is damaged, please contact support.
Steam leaks from lid.	Make sure the lid is closed properly. Turn it to the locked position. Seal ring is missing or dirty, clean it or install it.
Lid can not be opened.	Float valve is still up, wait or use quick release.
Bad smell or smoke.	If you are using the appliance for the first time, let it run with water for 10 minutes. If the problem continues, stop using it and contact support.

If there is any damage or unusual operation please contact the manufacturer or its service agent to check and repair the appliance.

CLEANING AND MAINTENANCE

1. Clean the appliance after every use.
2. Always unplug the appliance and let it cool down before cleaning.
3. Do not use strong or harsh cleaning products. They can damage the appliance.
4. Do not use sharp or metal tools to clean the appliance.
5. Never immerse the electrical appliance in water or any other liquid. The appliance is not dishwasher proof.
6. The inner pot, rice scoop, measuring cup, and cooking stand are dishwasher safe.
7. The lid is not dishwasher safe. Wash it by hand with warm soapy water.
8. Wash the Seal Ring, Exhaust Valve, Exhaust Valve Protector, Float Valve and Float Valve silicon cap with hot soapy water. Rinse and dry carefully. Clean the Exhaust Valve and Exhaust valve protector only if a build up of residue is noticeable. Make sure all is dry and connected properly again before using the appliance again.
9. Dry all parts completely before using or storing the appliance.

STORAGE

Store the cooker in a dry place.

Keep it out of reach of children and pets.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.