 


MEDEK

USER MANUAL

HEATING & COOLING BLADELESS FAN
MODEL NO.: MEDCF007NR

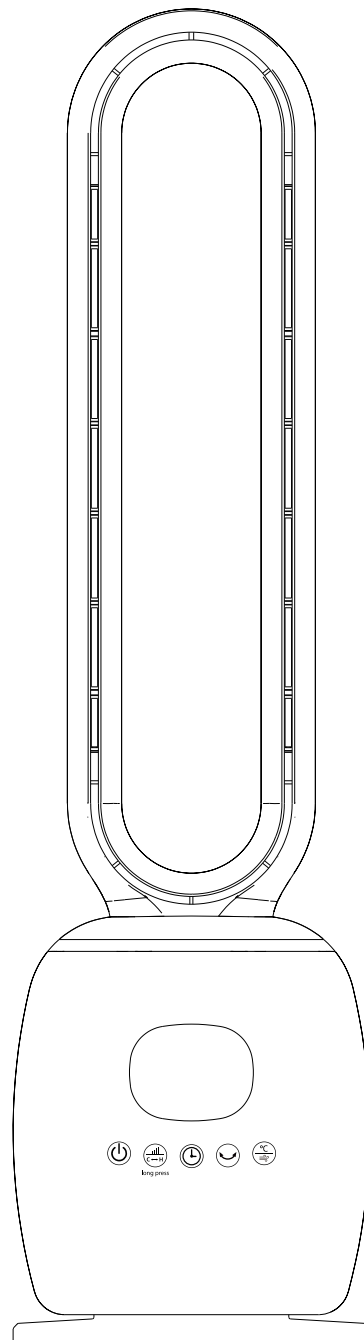

Before use, please watch
this video carefully.

This product may only be used in well insulated premises or for occasional use.
Please read the user manual before using this appliance and keep it safe for future reference.

Contents

SAFETY INSTRUCTIONS	3
KNOWING YOUR APPLIANCE	6
USING YOUR APPLIANCE	7
Control Panel and Settings	8
LED Display	8
Remote Control	9
Battery Replacement	9
CLEANING AND MAINTENANCE	10
TROUBLESHOOTING	11
TECHNICAL DATA	11

SAFETY INSTRUCTIONS

Important!

- Read the safety instructions carefully before operating the appliance.
- This appliance is for indoor use only.
- Rating: This appliance must only be connected to a 220-240 V ~ 50-60 Hz outlet.
- Installation must be in accordance with the local regulations where the appliance is used.
- If you are in any doubt about the suitability of your electrical supply, have it checked by a qualified electrician and, if necessary, modified.
- This appliance has been tested and is safe to use. However, as with any electrical appliance — use it with care.
- Disconnect the power from the appliance before moving or cleaning it.
- Avoid touching any moving parts of the appliance.
- **NEVER** insert fingers or any other objects through the grille.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children must not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
- **CAUTION** - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- **DO NOT** clean the appliance by spraying it or immersing it in water.
- **NEVER** connect the appliance to an electrical outlet using an extension cord. If an outlet is not available, one must be installed by a qualified electrician.
- **NEVER** operate this appliance if the power cord or plug is damaged. Ensure the power cord is not stretched, exposed to sharp objects and edges, or placed underneath the appliance.
- Any service other than regular cleaning should be performed by an authorised service representative. Failure to comply could result in injury or a voided warranty.
- **DO NOT** use the appliance for any purpose other than its intended use.
- **NEVER** use the plug as a switch to turn the appliance on or off. Use the power button on the control panel or the remote control.
- Always place the appliance on a dry and stable surface.
- **DO NOT** move or tilt the appliance while in use.
- This appliance is a high velocity fan designed to create rapid air movement. Therefore keep it away from curtains or any object that may block the air inlet.
- This appliance should not be installed in laundry or wet rooms.
- **DO NOT** use this appliance in environments with inflammable or explosive gases.
- **DO NOT** cover the air outlet or restrict the airflow while in use.
- **DO NOT** use in a dusty environment.
- For best performance, keep at least 50 cm clear of walls and objects.

- **DO NOT** expose the appliance to direct sunlight for extended periods.
- The remote control contains a lithium battery - keep it out of reach of small children. Seek immediate medical advice if the battery is swallowed.
- Exhausted batteries are to be removed from the appliance and safely disposed of.
- If the appliance is to be stored unused for a long period, the batteries are removed.
- The supply terminals are not to be short-circuited.



WARNING: Do not cover.

- **WARNING:** In order to avoid overheating, do not cover the heater.
- The heater must not be located immediately below a socket outlet.
- **DO NOT** use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- **DO NOT** use this heater if it has been dropped.
- **DO NOT** use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface, or fix it to the wall, as applicable.
- **WARNING:** Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- **WARNING:** To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 m from the air outlet.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



 
WARNING: To reduce the risk of fire or electric shock, DO NOT use this appliance with any other controller than the remote control supplied.

- To avoid excessive room temperatures which can cause hyperthermia. DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.
- Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater fan and seek medical attention.



WARNING - Risk of Heat Stroke (Hyperthermia)

Hyperthermia can result in death in infants or others.
Use caution to avoid overheating individuals.
Read and follow all instructions before use.

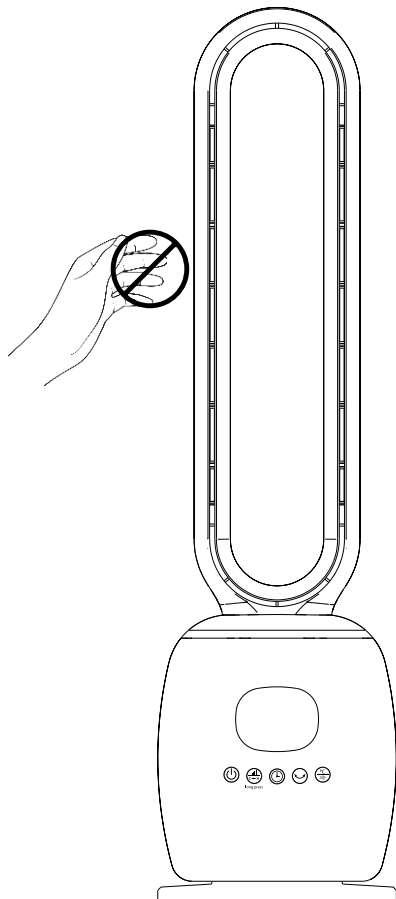

CAUTION: HOT SURFACE AND HIGH TEMPERATURE

THE FRONT SURFACE AND
AIR OUTLET CAN BE VERY
HOT DURING USE IN HEAT
MODE.
DO NOT TOUCH WHEN IN USE
AND ALLOW TO COOL FULLY
AFTER USE.

CAUTION:

Use this appliance only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.

CAUTION: High Temperature

Keep electrical cords, drapery, and other furnishings at least 1 meter from the front of this appliance and away from the side and rear.

KNOWING YOUR APPLIANCE

Features

- Space-Saving Design
- High Speed Motor
- Fan Speeds: Low / Medium / High
- Wind Modes: Normal / Natural / Sleep
- Heating Modes: Low / High
- Heating Temperature: 15-40°C
- Swing Function (55°)
- Timer Function (1-12hrs)
- Remote Control
- Tip-Over Protection
- Overheat Protection

Tip-Over Protection

 
If the appliance is tipped over, it will shut off automatically, and the symbol “” will show on the display.

Overheat Protection

If the appliance overheats, it will shut off automatically.






NOTE:

Your heating and cooling bladeless fan can be operated by pressing the buttons on the control panel or the remote control.

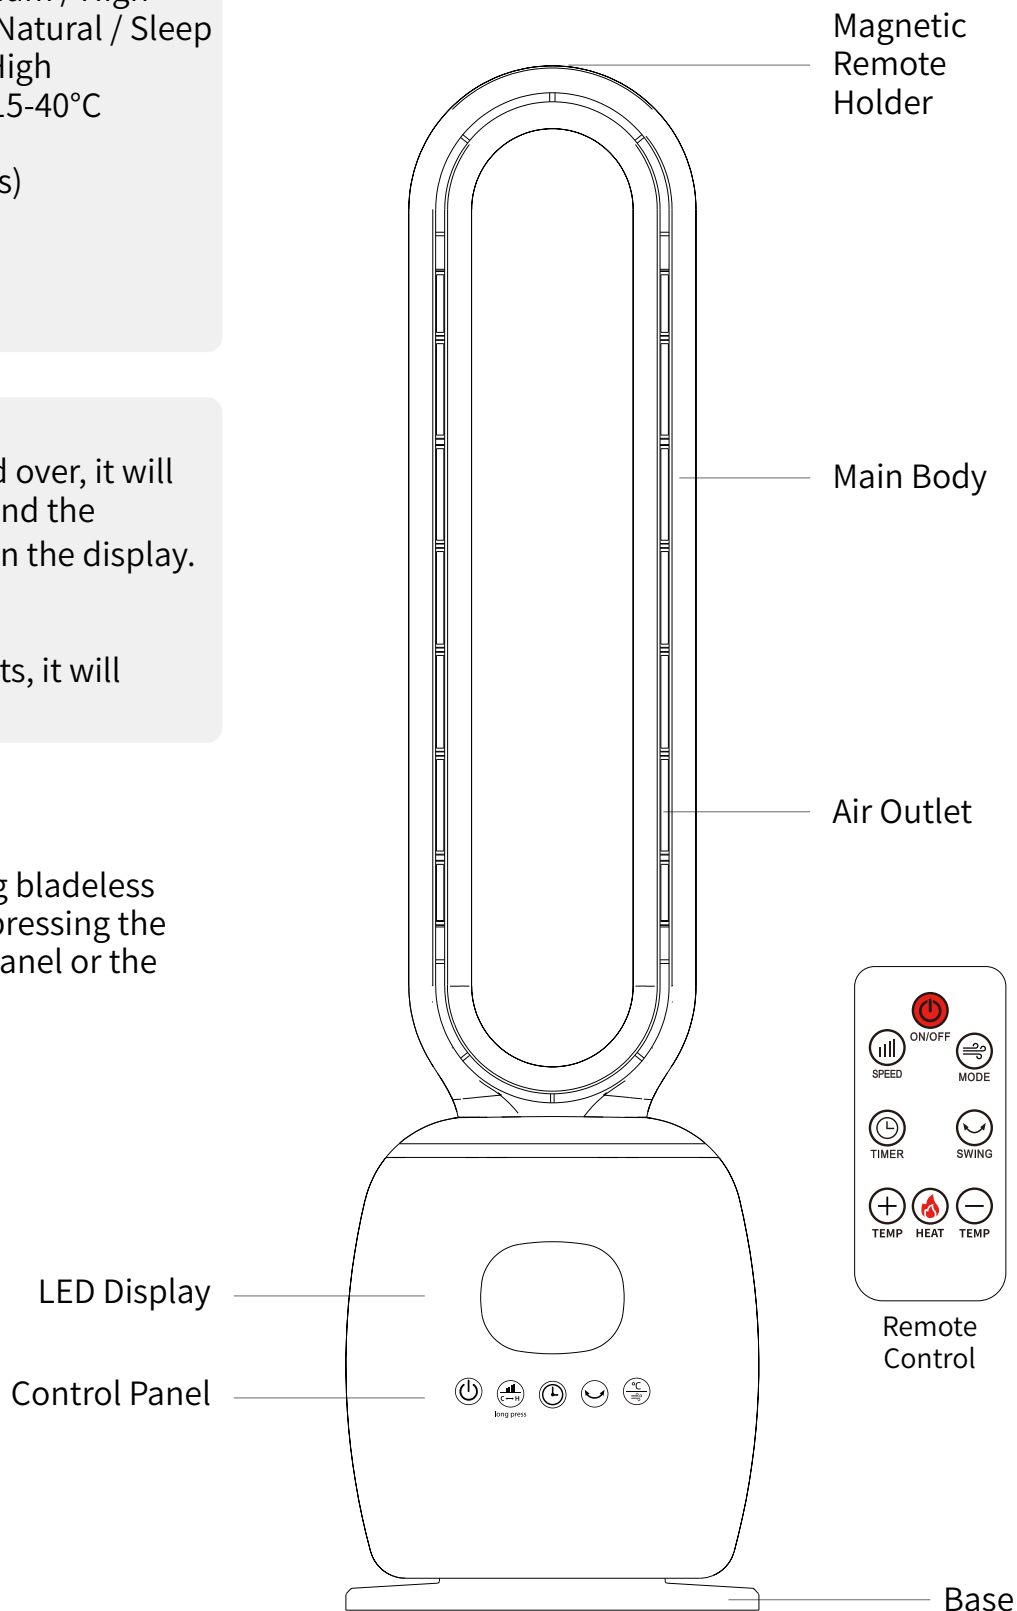

USING YOUR APPLIANCE

     Control Panel and Settings

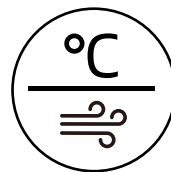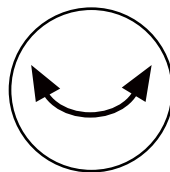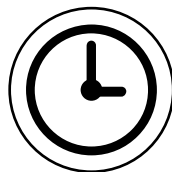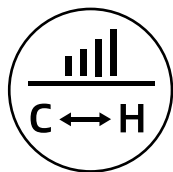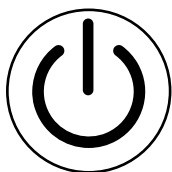

long press



POWER ON/OFF

Press to turn the appliance on or off.

NOTE: When the appliance is plugged into the electrical outlet, it enters **STANDBY** mode and the display will indicate “□□” as the default setting.

In **HEAT** mode, once turned off, the symbol “□□” will be displayed, and the appliance will continue to run for 30 seconds to blow out the remaining heat.



long press

FAN/HEAT SWITCH

Long press and hold for 3 seconds to switch between **FAN** mode and **HEAT** mode.

NOTE :

In **FAN** mode, the display will indicate "F1" as the default speed setting. Quick press to cycle through the available fan speeds (**F1** → **F2** → **F3**).

In **HEAT** mode, the display will indicate “L” as the default heating level. Quick press to toggle the heating level between **Low Heat** and **High Heat** (**L** ↔ **H**). The symbol “L” or “H” flashes 5 times and the preset temperature will be displayed.

Low Heat (L): gentle airflow, slow temperature increase, low power;

High Heat (H): strong airflow, rapid temperature increase, high power.



TIMER

Press repeatedly to set timer in 1-hour increments (max 12hrs).

Note: In **FAN** mode, after the timer ends, the appliance will turn off automatically. In **HEAT** mode, when the timer ends, the appliance will continue to run for 30 seconds to blow out the remaining heat before shutting down.



SWING

Press the button to toggle the swing function.



WIND MODE/HEAT TEMPERATURE SWITCH

 
In **FAN** mode, press to switch wind mode between Normal/Natural/Sleep.

In **HEAT** mode, press to adjust the temperature (15-40°C). Each press increases the setting by 1°C. After reaching 40°C, the next press will reset the temperature to 15°C and the cycle continues.

IMPORTANT NOTE: This control panel button can **ONLY** cycle upward to increase the temperature. It **CANNOT** decrease the temperature.

To adjust the temperature in **BOTH** directions (increase and decrease), please use the **INCREASE** (+) and **DECREASE** (−) buttons on the remote control.

LED Display

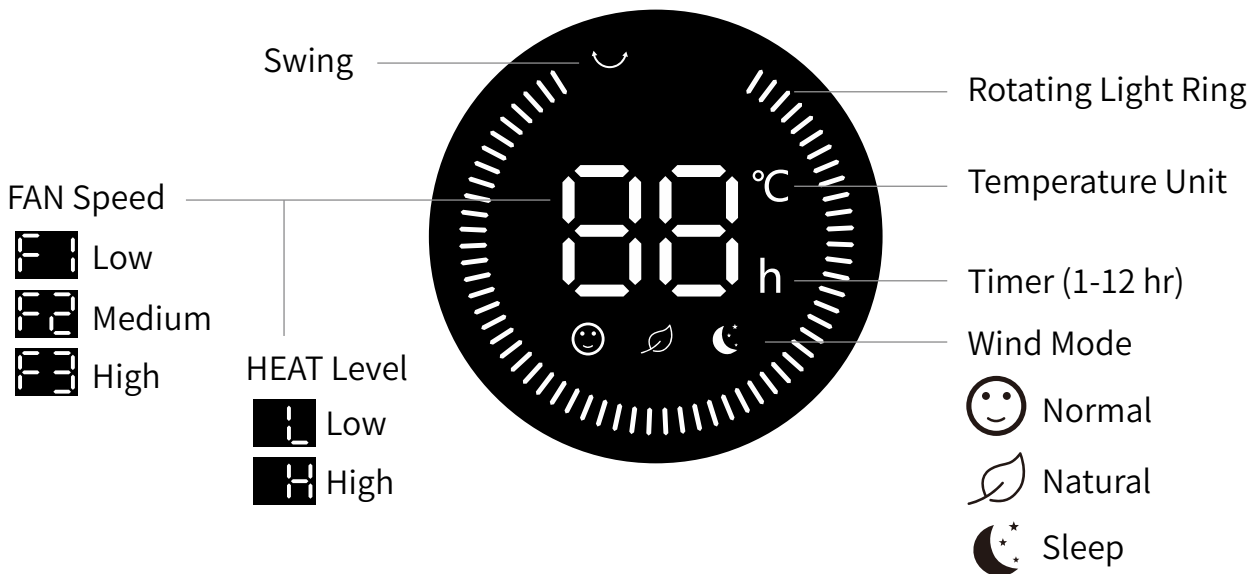

FAN MODE

Fan Speed

- F1: Low Speed**
The low fan speed for gentle wind.
- F2: Medium Speed**
The medium fan speed.
- F3: High Speed**
Max speed for fast cooling.

HEAT MODE

Heat Level

- L: Low Heating**
Reach the preset temperature slowly with lower power consumption.
- H: High Heating**
Reach the preset temperature quickly with increased power consumption.
- 25 °C Temperature + and -**
Temperature range: 15-40°C.

Wind Mode

- Normal Mode**
Runs at fixed fan speed.
- Natural Mode**
Fan speed goes up and down to replicate the natural breeze.
- Sleep Mode**
Reduces the fan speed and noise.

MORE FUNCTIONS

- Swing**
Press the button  to toggle the swing function.
- Timer**
Press the button  to start timer function.
Press repeatedly to set timer in 1-hour increments (max 12hrs).

The symbol "00" will be displayed when:

 
1. the appliance is first connected to the power supply.
2. the appliance tilts beyond 60° or it is overturned.
3. the **FAN** mode and **HEAT** mode are turned off.

NOTE: Both **SWING** and **TIMER** can work in **FAN** mode and **HEAT** mode.

Remote Control

This appliance is equipped with a remote control (CR2025 battery included), which allows full control of all functions.

The buttons on the remote have a similar effect to the buttons on the main control panel.

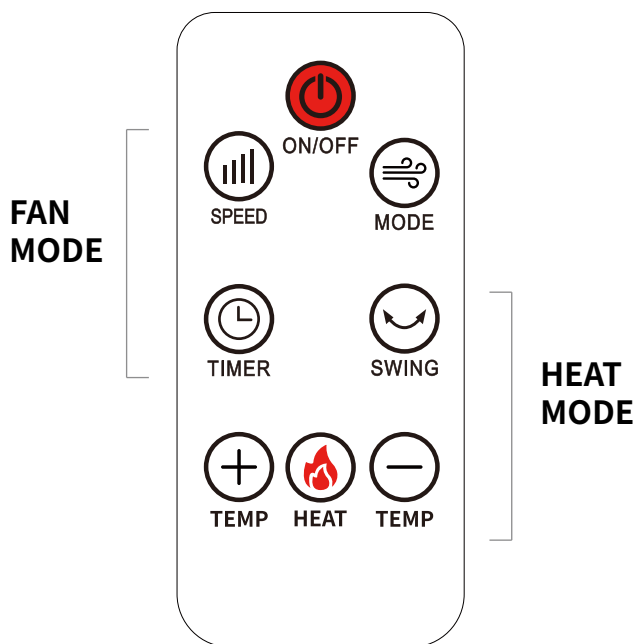

ON/OFF

POWER Button

Turn power on/off.



SPEED

SPEED Button

Press to cycle through the fan speeds: **F1** (Low) → **F2** (Medium) → **F3** (High).



MODE

MODE Button

Switch wind mode between Normal/Natural/Sleep.



TIMER

TIMER Button

Select to set a timer (1-12 hours).



SWING

SWING Button

Adjust airflow direction.



HEAT

HEAT Button

Press this button once to change from **FAN MODE** into **HEAT MODE**.

The symbol “L” shows low heat mode. Press button again to change to “H” (high heat mode) (L ↔ H).

To return back to **FAN MODE**, press the **SPEED** button. 



TEMP

INCREASE Button

Increase heat temperature (15-40°C).



TEMP

 
DECREASE Button

Decrease heat temperature (15-40°C).

Battery Replacement

The remote control is powered by a lithium Button Cell Battery (CR2025). If the remote becomes unresponsive, replace the battery by following the instructions below:

1. Turn the remote over and press **Tab A** toward the right.
2. Slide out the **Battery Tray B**.
3. Replace the battery with the same type, ensuring the positive side (+) faces upward.

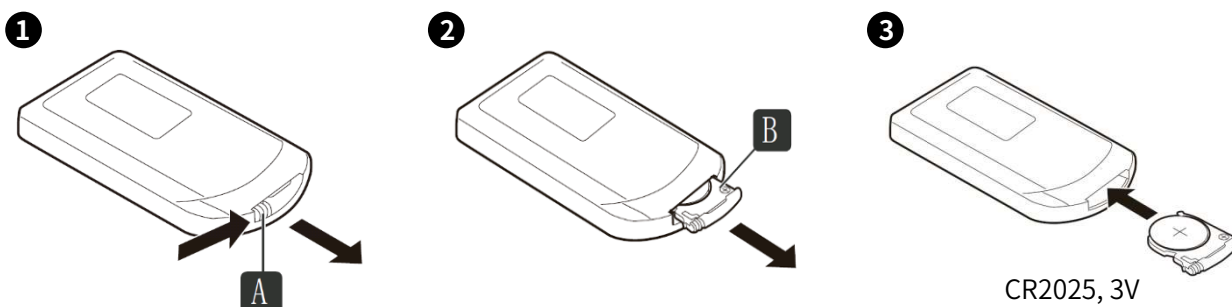



WARNING

Chemical Burn Hazard. Keep batteries away from children.

This product contains a lithium button cell battery. If a new or used lithium button cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the battery, and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

The batteries must be disposed of properly, including keeping them away from children. Even used cells may cause injury.

CLEANING AND MAINTENANCE



WARNING: Before cleaning or maintenance:

1. Power off the appliance using the main switch.
2. Disconnect from mains power by switching off at the outlet and then unplugging the power cord.

Failure to do so may result in electric shock or equipment damage.

Cleaning and Storage

Cleaning the surface

- Clean the appliance with a duster or a soft, slightly damp cloth.
- Do not use chemical solvents (such as benzene, alcohol, or petroleum) as they may cause irreversible damage. Make sure no water enters the control panel or fan motor.
- Do not run the appliance until completely dry.

Storage

- When not in use, store the appliance in its original box or cover it to protect against dust.
- Store it in a cool, dry place.

Maintenance

1. Inspect the power cord for damage before use. Discontinue use if defects are found.
2. Do not disassemble. Internal maintenance or repairs should be performed by professionals.
3. Adjust maintenance frequency based on usage. Dusty environments require more frequent cleaning.

TROUBLESHOOTING



WARNING:

Do not attempt to repair or disassemble the appliance. Unauthorised repairs will void the warranty and may result in electric shock or other injuries.

Issue	Possible Reason	Solution
No Power	1. The power cord is disconnected. 2. There is no power from the socket. 3. The power switch is off.	1. Connect the power cord. 2. Check socket is turned on. 3. Turn the appliance on.
Odour emission from the appliance	This is a new appliance. When it is used for the first time, the fan motor may produce an odour that will dissipate within a week of use.	No action required.
Strong vibrations and noise	1. The appliance is not placed on a flat surface. 2. The appliance may be damaged.	1. Place on a flat surface. You may put an anti-vibration mat underneath. 2. If the appliance is damaged, discontinue use and contact an authorised service centre.

If the above solutions do not resolve the problem, please contact the supplier.

TECHNICAL DATA

Model No.	MEDCF007NR
Fan Speed	Low / Medium / High
Heat Level	Low / High
Cable Length	1.5 m
Voltage/Frequency	220-240V~ 50-60Hz
Power	2000W
Dimension	230 x 230 x 860 mm

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption.

Power consumption in off mode: N/A

Power consumption in standby mode: 0.5 W

The appliance has no automatic standby to off function; it will shut down only upon expiry of the set timer.

FOR HOUSEHOLD USE ONLY.

READ AND SAVE ALL THE INSTRUCTIONS.

Read and understand all the instructions before attempting to assemble, install, operate or maintain this product. Protect yourself and others by observing all safety information. Failure to comply may result in serious personal injury and property damage! This appliance is for household use only. It is not intended for commercial, industrial or agricultural applications.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Medek France
94700 Maisons ALFORT France
MADE IN CHINA