


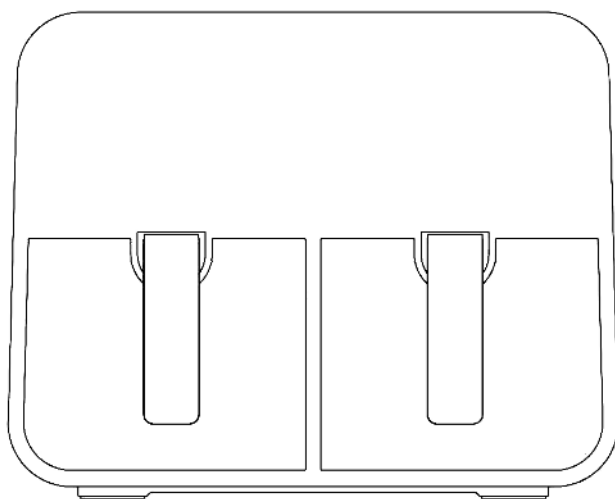

# **DUAL BASKET DIGITAL AIR FRYER INSTRUCTION MANUAL**

**RA910D**



When using electrical appliances, basic safety precautions should always be followed.  
Do not use the unit until you have read this manual thoroughly.

# IMPORTANT SAFEGUARDS

HOUSEHOLD USE ONLY. READ ALL INSTRUCTIONS.

When using electrical appliance, basic safety precautions should always be followed, including the following:

## **WARNINGS**

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Keep the appliance and its cord out of reach of children less than 8 years. Close supervision is necessary when used near children.
3. Take care of the children, do not let them play the product as toy.
4. NEVER use electrical socket below counter.
5. NEVER connect this appliance to an external timer switch or separate remote-control system.
6. When using this appliance, provide at least 6 inches (15.25 cm) of space above and on all sides for air circulation.
7. To protect against electrical shock. DO NOT immerse cord, plugs, or main unit housing in water or other liquid. Cook only in the basket provided.
8. Regularly inspect the appliance and power cord. DO NOT use the appliance if there is damage to the power cord or plug. If the appliance malfunctions or has been damaged in any way, immediately stop use and call Customer Service.
9. DO NOT use an extension cord. A short power-supply cord is used to reduce the risk of children grabbing the cord or

becoming entangled and to reduce the risk of people tripping over a longer cord.

10 . ALWAYS ensure the appliance is properly assembled before use.

11. DO NOT cover the air intake vent or air outlet while unit is operating. Doing so will prevent even cooking and may damage the unit or cause it to overheat.

12. Before placing removable basket into the main unit, ensure basket and unit are clean and dry by wiping with a soft cloth.

13. This appliance is for household use only. DO NOT use this appliance for anything other than its intended use. DO NOT use in moving vehicles or boats. DO NOT use outdoors. Misuse may cause injury.

14. Intended for worktop use only. Ensure the surface is level, clean and dry. DO NOT move the appliance when in use.

15. DO NOT place the appliance near the edge of a worktop during operation.

16. DO NOT use accessory attachments not recommended or sold by the manufacturer. Do not place accessories in a microwave, toaster oven, convection oven, or conventional oven or on a ceramic cooktop, electric coil, gas burner range or outdoor grill. The use of accessory attachments not recommended by the manufacturer may cause fire, electric shock or injuries.

17. ALWAYS ensure basket is properly closed before operating.

18. DO NOT use the appliance without the removable basket installed.

19. DO NOT use this appliance for deep-frying.

20. DO NOT place appliance on hot surfaces or near a hot gas or electric burner or in a heated oven.

21. Prevent food contact with heating elements. DO NOT

overfill when cooking. Overfilling may cause personal injury or property damage or affect the safe use of the appliance.

22. DO NOT place items on top of unit at any time.

23. Socket voltages can vary, affecting the performance of your product. To prevent possible illness, use a thermometer to check that your food is cooked to the temperatures recommended.

24. Should the unit emit black smoke, unplug immediately. Wait for smoking to stop before removing any cooking accessories.

25. DO NOT touch hot surfaces. Appliance surfaces are hot during and after operation. To prevent burns or personal injury, ALWAYS use protective hot pads or insulated oven mitts and use available handles.

26. Extreme caution must be used when the appliance contains hot food. Improper use may result in personal injury.

27. The appliance must be connected with a grounded socket, and one must make sure that it is inserted correctly.

28. Spilled food can cause serious burns. Keep appliance and cord away from children. DO NOT let cord hang over edges of tables or counters or touch hot surfaces.

29. The basket and crisper plate become extremely hot during the cooking process. Avoid physical contact while removing the basket or plate from the appliance. ALWAYS place basket or plate on a heat-resistant surface after removing. DO NOT touch accessories during or immediately after cooking.

30. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

31. To disconnect, press the power button to turn off the unit, then unplug from socket when not in use and before cleaning. Allow to cool before cleaning, disassembly, putting in or taking

off parts and storage.


32. DO NOT clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, creating the risk of electric shock.

33. The unit may smoke the first time it is used. It is not defective and the smoke will burn off within a few minutes.

34. Please refer to the Cleaning & Maintenance section for regular maintenance of the appliance.

35. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

## PARTS

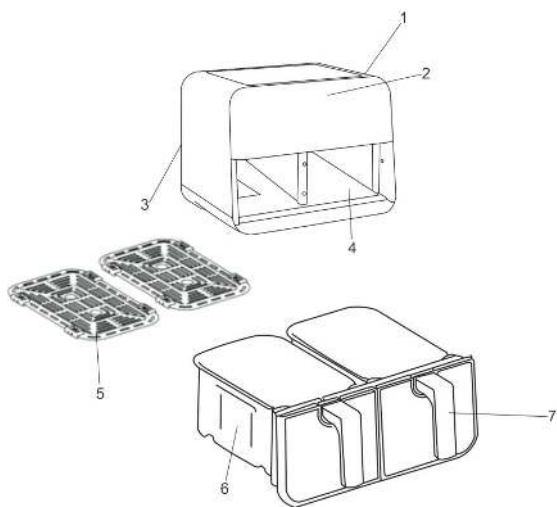


1. Air Intake Vent
2. Control Panel
3. Air Outlet (Located on back)
4. Main Unit
5. Crisper Plate(One for each zone)
6. Baskets (One for each basket)
7. Basket Handle

# GETTING TO KNOW YOUR DUAL BASKET AIR FRYER BEFORE FIRST USE

1. Remove and discard any packaging material, promotional labels, and tape from the unit.
2. Remove all accessories from the package and read this manual carefully. Please pay particular attention to operational instructions, warnings, and important safeguards to avoid any injury or property damage.
3. Wash the baskets and crisper tray in hot, soapy water, then rinse and dry thoroughly.
4. Clean the inside and outside of the product with warm wet cloth, then dry thoroughly.
5. The dual basket air fryer uses the technology of hot air heating. Filling the basket with oil or fat may cause a fire hazard!

## FUNCTION BUTTONS

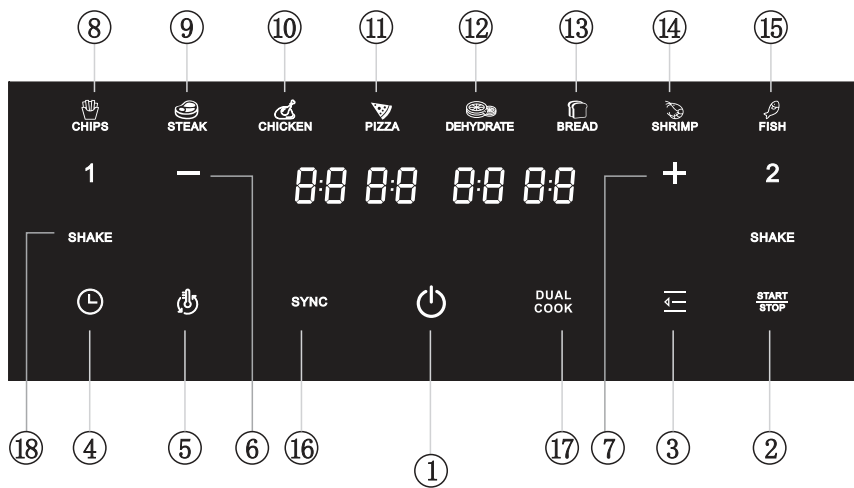

1. **POWER BUTTON:** The  button turns the unit on and off and stops all cooking functions. Once the Unit is plugged in, the Power Button will light up. Selecting the Power Button once(Press 1 second) will cause the full panel to be illuminated . Press 1 second the Power Button will shut down the Unit.

2. **START/STOP:** After selecting temperature and time, start cooking by pressing the **START/STOP** button. To pause cooking, first select the zone you would like to pause, then press the **START/STOP** button.
3. **Menu:** Select the preset programs
4. **Time Control Button:** Press this button, then press the + button or - button enable you to select exact cooking time to the minute.
5. **Temperature Control Button:** Press this button, then press + button or - button enable you to raise or lower cooking temperature by 5°C.
6. **Time/Temperature Reduce:** Use this button to reduce the cook time/temperature before or during cooking.
7. **Time/Temperature Add:** Use this button to add the cook time/temperature before or during cooking.
8. **French Fries:** Use this function to cook French Fries.
9. **Steaks/Chops:** Use this function to cook Steaks/Chops.
10. **Chicken:** Use this function to cook Chicken.
11. **Pizza:** Use this function to cook Pizza.
12. **Dehydrate:** Dehydrate meats, fruits, and vegetables for healthy snacks.
13. **Bake:** Create decadent baked treats and desserts.
14. **Shrimp:** Use this function to cook Shrimp.
15. **Fish:** Use this function to cook Fish.
16. **SMART FINISH(SYNC):** Automatically syncs the cook times to ensure both zones finish at the same time, even if there are different cook times.
17. **DUAL COOK:** Automatically matches zone 2 settings to those of zone 1 to cook a larger amount of the same food, or cook different foods using the same function, temperature, and time.  
You can also choose 1 pot or 2 pots to work separately, Long press 1 or 2 pots for 4 seconds to stop working.
18. **SHAKE:** Some food need shake during the cooking, this function will reminder you shake the food during the cooking.
- Standby Mode:** After 5 minutes of no interaction with the control panel, the unit will enter standby mode, only the Power Button is light up.

- 1 Controls the output for the basket on the left.  
2 Controls the output for the basket on the right.  
“+” and “-” button: Use the Time/Temperature Add button and  
Timer/Temperature Reduce button to adjust the cook time/  
temperature before or during cooking.

**COOKING PRESETS**  
**Preset Button Cooking Chart**

| Menu         | Default TEMP | Default TIME (One Basket / Two Basket) |
|--------------|--------------|----------------------------------------|
| French Fries | 200 °C       | 18mins                                 |
| Steaks/Chops | 200 °C       | 25 mins                                |
| Chicken      | 190°C        | 30 mins                                |
| Pizza        | 185°C        | 40 mins                                |
| Dehydrate    | 60°C         | 8hrs (1-24hrs)                         |
| Bake         | 180°C        | 12 mins                                |
| Shrimp       | 160°C        | 12 mins                                |
| Fish         | 180°C        | 10 mins                                |

NOTICE: Please remember that these Default Settings offer only a reference. For food ingredients differ in source, size, shape and brand, we can not guarantee to provide the best Settings for your food ingredients. As the fast air change technology can give renewed heating to the air inside the product immediately, so, to pull the basket out of the unit during the operation will hardly affect the process of cooking.

NOTE: If the dual basket air fryer starts with cold boot, the cooking time should be 3 minutes longer.

**COOKING IN YOUR DUAL BASKET AIR FRYER**  
**SMART FINISH(SYNC)**

To finish cooking at the same time when  
foods have different cook times, temps, or even functions:

1. Place ingredients in the baskets, then insert baskets in unit.
2. Press SYNC button, zone 1 will remain illuminated, then press the Menu button for select the desired cooking function.
3. Select zone 2, then press the Menu button for select the desired cooking function.

NOTE: You can select a different function for zone 2.

4. Then press the START/STOP button to begin cooking in the zone with the longest time. The other zone will display **HOLD**. The unit will activate the second zone when both zones have the same time remaining.

NOTE: Some food ingredients require overturning during the middle term of cooking. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)

**NOTICE: When use for the first time, please adjust the temperature to 200°C, and let the unit working 30 minutes without food.**

5. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
  6. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.
- DO NOT place drawer on top of unit.

## DUAL COOK

To cook a larger amount of the same food,  
or cook different foods using the same function, temperature,  
and time:

1. Place ingredients in the baskets, then insert baskets in unit.
2. Press the DUAL COOK button, then press the Menu button for select the desired cooking function.
3. Then Press START/STOP to begin cooking in both zones.

NOTE: Some food ingredients require overturning during the middle term of cooking. To overturn the food ingredients, hold the handle

and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the two screens will show "OPEN".)

4. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

5. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

**Starting both zones at the same time,**The one with the longest time works first,Wait until the same time,Will work and end at the same time;

1.1 Select zone 1, then press the Menu button for select the desired cooking function. 1.2 Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.

1.3 Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.

2.1 Select zone 2, then press the Menu button for select the desired cooking function. 2.2 Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.

2.3 Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.

3. Press the START/STOP button to begin cooking in both zones.

NOTE: Some food ingredients require overturning during the middle term of cooking. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the two screens will show "OPEN".)

4. When cooking is complete in one zone, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

5. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils, then wait for the ingredients in another basket to finish cooking.

## **PAUSING BOTH ZONES AT THE SAME TIME**

1. To pause time in the SMART FINISH(SYNC) mode, or to pause both zones in dual zone cooking, press the START/STOP button.
2. To resume cooking, press the START/STOP button again.

## **PAUSING A SINGLE ZONE DURING DUAL ZONE COOKING**

1. To pause time in a single zone while both zones are running, select the zone you want to pause, then press the START/STOP button.
2. To resume cooking, press the START/STOP button again.

## **CANCEL OPERATION**

In any mode, you want to cancel the program which you selected, press the START/STOP button, then press the power button and "End" will appear on the display, the motor will stop working after 20 seconds.

## **COOKING IN A SINGLE ZONE**

To turn on the unit, plug the power cord into a wall outlet, then press the power  button.

## **French Fries**

1. Install crisper plate in the basket, then place ingredients in the basket, and insert basket in unit.
2. If you select Zone 1 or Zone 2, press the Menu button for select the French Fries function. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.

3. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.

4. Press the START/STOP button to begin cooking.

NOTE: During cooking, you can remove the basket and shake or toss ingredients for even crisping. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)

5. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

6. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## **Steaks/Chops**

1. Install crisper plate in the basket, then place ingredients in the basket, and insert basket in unit.

2. If you select Zone 1 or Zone 2, press the Menu button for select the Steaks/Chops function.

3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.

4. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.

5. Press the START/STOP button to begin cooking.

NOTE: During cooking, you can remove the basket and shake or toss ingredients for even crisping. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)

6. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

7. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## Chicken

1. Install crisper plate in the basket, then place ingredients in the basket, and insert basket in unit.
2. If you select Zone 1 or Zone 2, press the Menu button for select the Chicken function.
3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.
4. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.
5. Press the START/STOP button to begin cooking.

NOTE: During cooking, you can remove the basket and shake or toss ingredients for even crisping. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)

6. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
7. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## Pizza

1. Install crisper plate in the basket, then place ingredients in the basket, and insert basket in unit.
2. If you select Zone 1 or Zone 2, press the Menu button for select the Pizza function.
3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.
4. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.
5. Press the START/STOP button to begin cooking.

NOTE: During cooking, you can remove the basket and shake or toss ingredients for even crisping. To overturn the food ingredients, hold

the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OEPN".)

6. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

7. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## Dehydrate

1. Place a single layer of ingredients in the basket, then install the crisper plate in the basket on top of the ingredients and place another layer of ingredients on the crisper plate.

2. If you select Zone 1 or Zone 2, press the Menu button for select the Dehydrate function. The default temperature will appear on the display.

3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the hour ( (1-24hrs)).

4. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature(30-60°C).

5. Press the START/STOP button to begin dehydrating.

6. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.

7. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## Bake

1. Install crisper plate in the basket (optional), then place ingredients in the basket, and insert basket in unit.

2. If you select Zone 1 or Zone 2, press the Menu button for select the Bake function. The default temperature will appear on the display.

NOTE: To convert recipes from a traditional oven, reduce the temperature by 5°C.

3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.
4. Press the START/STOP button to begin cooking.
5. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
6. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## Shrimp

1. Install crisper plate in the basket, then place ingredients in the basket, and insert basket in unit.
2. If you select Zone 1 or Zone 2, press the Menu button for select the Shrimp function.
3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.
4. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.
5. Press the START/STOP button to begin cooking.

NOTE: During cooking, you can remove the basket and shake or toss ingredients for even crisping. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)

6. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
7. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## Fish

1. Install crisper plate in the basket, then place ingredients in the basket, and insert basket in unit.
2. If you select Zone 1 or Zone 2, press the Menu button for select the Fish function.
3. Press the Time Control Button, then press the + button or - button enable you to select exact cooking time to the minute.
4. Press the Temperature Control Button, then press + button or - button enable you to raise or lower cooking temperature.
5. Press the START/STOP button to begin cooking.

NOTE: During cooking, you can remove the basket and shake or toss ingredients for even crisping. To overturn the food ingredients, hold the handle and pull out the basket from the product, and then make the turning. After that, slip the basket back to the unit. (When you pull out the basket from the product, the screen will show "OPEN".)

6. When cooking is complete, the unit will beep 5 times and "End" will appear on the display, the motor will stop working after 20 seconds.
7. Remove ingredients by dumping them out or using silicone-tipped tongs/utensils.

## CLEANING YOUR DUAL BASKET AIR FRYER

The unit should be cleaned thoroughly after every use.

The inside of the baskets, crisper plates and the product are all covered with non-sticking painted coat. Do not use metal kitchen wares or abrasive cleaning material to do the cleaning, for this will damage the non-sticking painted coat.

1. Pull out the plug from the power socket, let the product cool down. (Note: Take out the baskets, thus to make the fat-free fryer cool down more quickly.)
2. Use wet cloth to scrub the outside part of the product.
3. Clean the baskets or the bottom of the baskets with hot water, detergent and non-abrasive sponge, please add hot water into the baskets together with some detergent. Put crisper plates into the

baskets, and then soak the baskets and the crisper plates for 10 minutes.

4. Clean the inside of the product with hot water and non-abrasive sponge.

5. Use cleaning brush to clean the heating components, swept away remaining food residual.

6. A timely manner with a clean brush to clean the air inlet opening and the air outlet opening, so as not to affect the air inlet and the outlet air flow.

**Note:**

If food residue is stuck on the crisper plates or baskets, place them in a sink filled with warm, soapy water and allow to soak.

## **STORAGE YOUR DUAL BASKET AIR FRYER**

1. Make sure the Dual Basket Air Fryer is unplugged and all parts are clean and dry before storing.

2. Never store the Dual Basket Air Fryer while it is hot or wet.

3. Put each clean Crisper Plates into each fryer basket, and insert the each fryer basket into the Dual Basket Air Fryer body.

4. Store Dual Basket Air Fryer in its box or in a clean, dry place.

## **HELPFUL TIPS**

1. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. If ingredients are overlapping, make sure to shake them halfway through cooking.

2. Cook temperature and time can be adjusted during cooking. Press START/STOP button, select the zone you want to adjust, press the Time/Temperature control button, after that use the Time/Temperature Add button and Time/Temperature Reduce button to adjust the cook time/temperature, then press the START/STOP button start the unit.

3. To convert recipes from a traditional oven, reduce the temperature by 5°C. Check food frequently to avoid overcooking.

4. Occasionally, the fan from the air fryer will blow lightweight foods around. To alleviate this, secure foods (like the top slice of bread on a sandwich) with wooden toothpicks.
5. The crisper plates elevate ingredients in the baskets so air can circulate under and around ingredients for even, crisp results.
6. After selecting a cooking function, you can press the START/STOP button to begin cooking immediately. The unit will run at the default temperature and time.
7. For best results with fresh vegetables and potatoes, use at least 1 tablespoon of oil. Add more oil as desired to achieve the preferred level of crispiness.
8. For best results, check progress throughout cooking and remove food when desired level of brownness has been achieved. We recommend using an instant-read thermometer to monitor the internal temperature of proteins.
9. For best results, remove food directly after the cook time is complete to avoid overcooking.

## REPLACEMENT PARTS

To order additional parts and accessories, you can communicate with the local Customer Center or communicate with your local dealer.

## TROUBLESHOOTING GUIDE

### **How do I adjust the temperature or time while using a single zone?**

When a single zone is running, press START/STOP button, then press the Time/Temperature control button, after that use the Time/Temperature Add button and Time/Temperature Reduce button to adjust the cook time/temperature, then press the START/STOP button start the unit.

### **How do I adjust the temperature or time while using both zones?**

Press START/STOP button, select the desired zone, then press the Time/Temperature control button, after that use the Time/Temperature Add button and Time/Temperature Reduce button to

adjust the cook time/temperature, then press the START/STOP button start the unit.

**Can I cook different foods in each zone and not worry about cross contamination?**

Yes, both zones are self-contained with separate heating elements and fans.

**How do I pause or stop one zone when using both zones?**

Select the zone you want to pause or stop, then press the START/STOP button.

**Are the baskets safe to put on my countertop?**

The baskets will heat up during cooking. Use caution when handling, and place them on heat-safe surfaces only. DO NOT place the baskets on the top of the unit.

**When should I use the crisper plate?**

Use the crisper plate when you want food to come out crispy. The plate elevates the food in the basket so that air can flow under and around it to cook ingredients evenly.

**Why didn't my food cook fully?**

Make sure the basket is fully inserted during cooking. For consistent browning, make sure ingredients are arranged in an even layer on the bottom of the basket with no overlapping. Shake basket to toss ingredients for even crispiness.

**Why is my food burned?**

For best results, check progress throughout cooking and remove food when desired level of brownness has been achieved. Remove food immediately after the cook time is complete to avoid overcooking.

**Why do some ingredients blow around when air frying?**

Occasionally, the fan from the air fryer will blow lightweight foods around. Use wooden toothpicks to secure loose lightweight food, like the top slice of bread on a sandwich.

### **Can I air fry wet, battered ingredients?**

Yes, but use the proper breading technique. It is important to coat foods first with flour, then with egg, and then with bread crumbs. Press breading firmly onto the battered ingredients, so crumbs won't be blown off by the fan.

### **Why did the display screen go black?**

The unit is in standby mode. Press the power  button to turn it back on.

### **Why is the unit beeping?**

The food is done cooking.

### **Why is there an “E” message on the display screen?**

The unit is not functioning properly. Please contact your local Customer Service.

## **Guarantee and Services**

If you require services or repairing, or have any doubt, you can communicate with the local Customer Center.

If there is no Customer Center near your location, you can communicate with your local dealer.



 Recycling: This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Importer :MEDEK FRANCE ,

ADD :05 rue de Rouen 94700 maisons ALFORT France

**MADE IN CHINA**