


MEDEK

VACUUM CLEANER

INSTRUCTION MANUAL

MD555

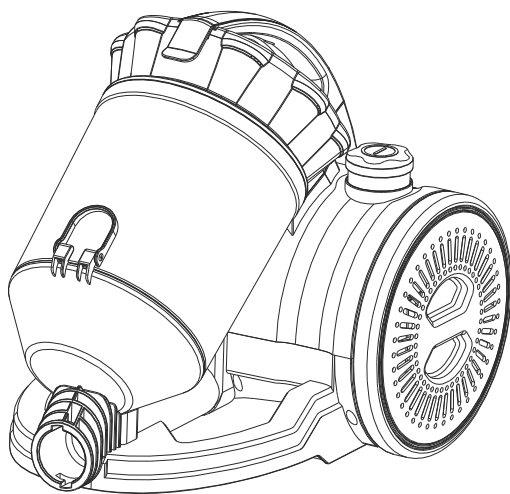

Rated voltage: 220-240V ~
Rated frequency: 50/60Hz
Rated power: 700W


Please read all instructions carefully before using!

SAVE THESE INSTRUCTIONS



Before use, Please watch this video carefully

DESCRIPTION

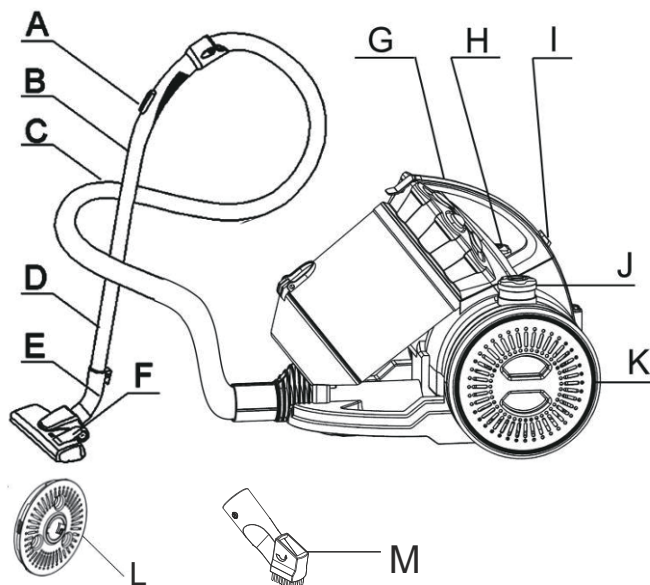

- A. Wind-force adjuster
- B. Tube Handle
- C. Hose
- D. Tube
- E. Floor brush
- F. Floor brush button
- G. Dust cup handle
- H. Cord crewing button
- I. Dust cup release button
- J. ON/OFF button (speed control button)
- K. Wind out board
- L. Blowing plate
- M. Small Brush

Important safety instructions

Please read all instructions carefully before using

Check that the mains power voltage corresponds to the voltage shown on the rating plate

Do not use outdoors or on wet surfaces

Do not touch the power cord or plug with wet hand

Do not use the appliance to vacuum inflammable substances, like cigarettes and hot ashes

Keep the openings free to avoid blockage, like hair and loose clothing that may reduce air flow

Turn off the control before unplugging

Always turn off the appliance after using

Never allow children to use this appliance

If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.



If the cleaner is damaged, do not use it any more, it must be repaired by the service agent authorized by the factory.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

This equipment power management function is inappropriate as for the intended use

This device complies with the requirements of European Commission Regulation (EU) 2023/826 on standby energy consumption

Power consumption in off mode	0,0W
Power consumption in standby mode	N/A
Maximum time required to automatically reach shutdown mode	N/A

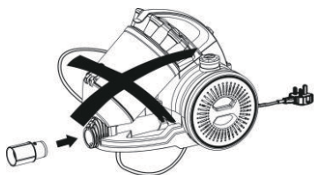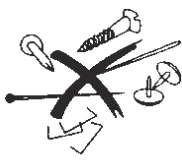Do not remove the plug from the socket by pulling the cable or the appliance itself. 	Do not run the appliance over the power cable. 	Do not use the appliance to vacuum lighted matches, cigarette ends or hot ash. 
Do not use the appliance on wet surfaces. 	Do not place it near a heat source 	Do not use the appliance to vacuum needles, drawing-pins or sharp items. 


ASSEMBLING THE VACUUM CLEANER

Always remove the plug from the power socket before fitting or removing accessories!

Fitting the flexible tube


Insert the flexible tube into the air intake duct on the appliance. To do this, slide the intake duct cover insert the tube and press until it clicks into position.

Removing the flexible tube

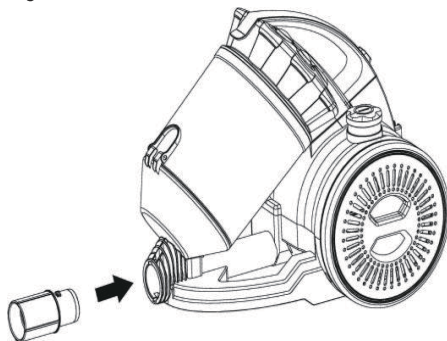

Remove the plug from the power socket. To release the flexible tube, press the button on the end of the tube firmly the air intake duct.

Fitting the extension tubes and accessories

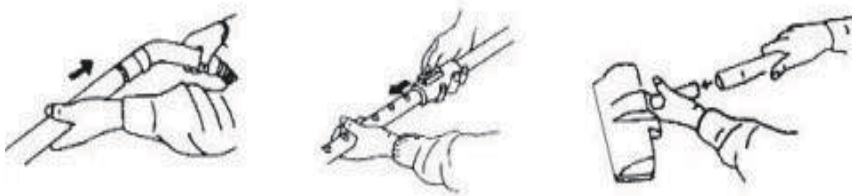


Removing the extension tubes and accessories


To remove the accessories, pull firmly apart.

INSTRUCTION FOR USE

1. Before using the appliance, unwind length of cable and insert the plug into the power socket, A YELLOW mark on the power cable shows the ideal cable length, Do not extend the cable beyond the Red mark, To rewind the power cable, press the rewind button witch on hand, and guide the other hand to ensure that it does not whip causing damage, If the power cable can't rewind completely. Please pull out the power cable slightly and press the rewinder button again. You can repeat the rewinding steps until the cable is rewind completely.

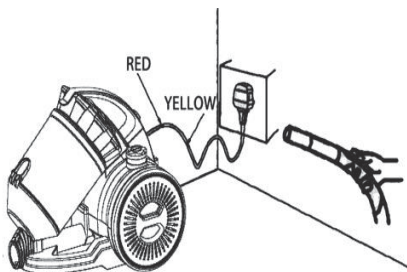


2. Press the ON/OFF button to switch the appliance on. It is advisable to set electronic power regulator to “MIN” before switching in the appliance on.
3. By turning the speed control knob the absorption power can be adjusted.






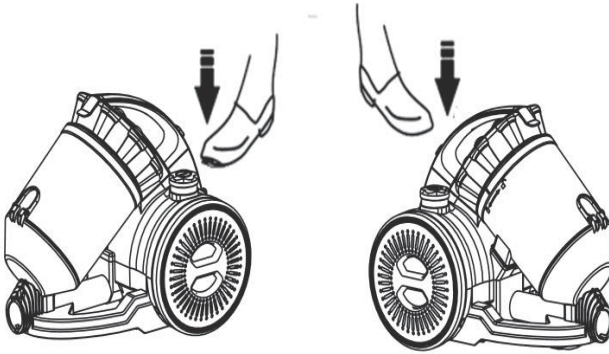


HOW TO CLEAN THE DUST CABIN

1. After removing the flexible tube, Push on the dust cup release button,

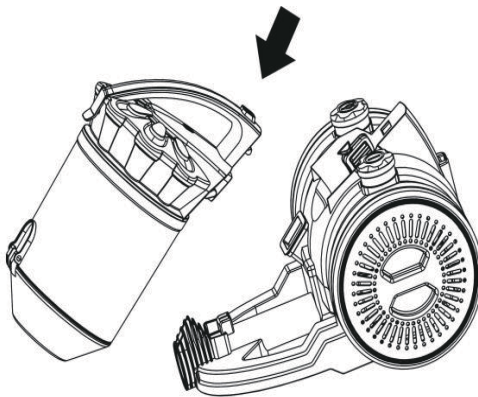

2. The dust is dropped out when the dust cabin lock button is pressed;
3. Push the cabin button to throw away the dust.
4. To turn the cover of dust cabin, take out HEPA, to clean up HEPA;
5. To take out and clean the cyclone segregator when the dust is filled in the cup; it's assembled in turn after cleaned.

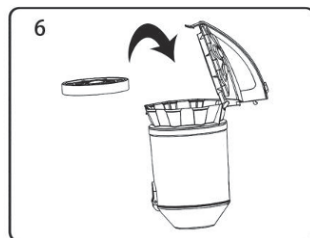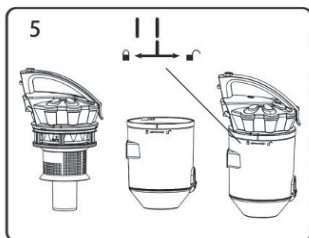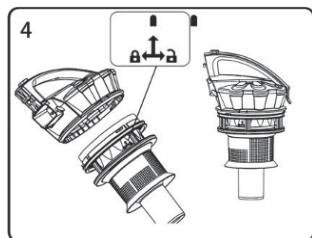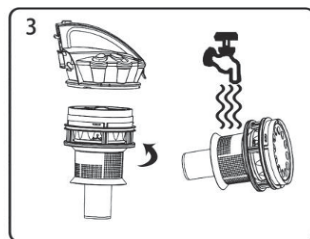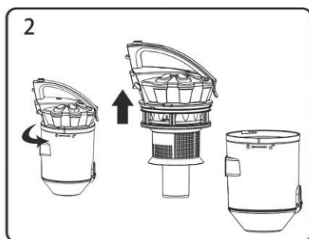
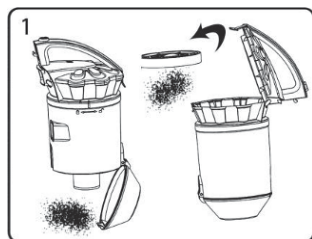


USING THE CLEANING ACCESSORIES

Dual-position carpet/floor brush

Pos.1:bristles extended,for hard floors

Pos.2:bristles retracted,for carpets

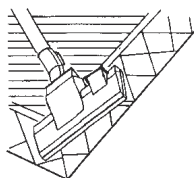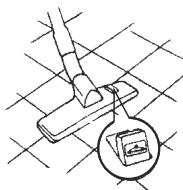


Narrow nozzle

For cleaning radiators, comers, edges
Drawers etc,




Small brush

For cleaning curtains, shelves, books,
lamps and other delicate objects.

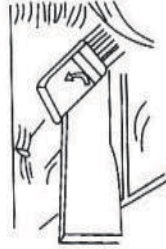

ATTENTION


In order to reach high-level efficiency ashier cleaning, please clean the floor
brush regularly.

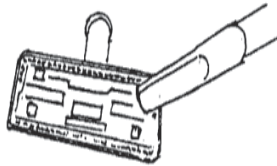

Air-Blow Function (additional function.)


- You may convert your machine to blow air out by attaching the Flexible Hose to the machine's air outlet socket (remove the Air Outlet Grill.).
- The Blower Function is recommended for use to gather scattered dry waste such as leaves and confetti.

CAUTION: This Blowing function is just an additional, substandard, unofficial function of this cleaner. So we recommend you to use this function quick and in a short time for each use. The flexible hose and handle may become very hot after a long time use, at that time, you should stop to use this function, after several minutes, when it becomes cool, then use again.

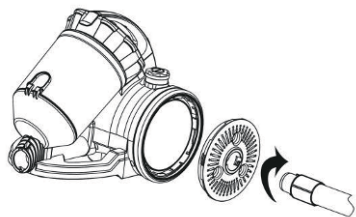

AFTER USING

You may fix the stand for floor brush onto the vacuum cleaner.

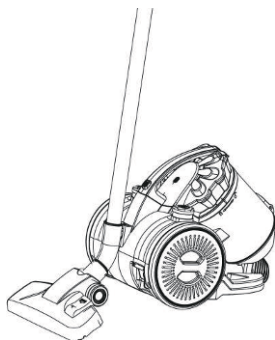

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



The device complies with the European
Directives 2014/35/EU and 2014/30/EU

Medek France

94700 Maisons-Alfort France

MADE IN CHINA

<http://www.medekfrance.com>