




INSTRUCTION MANUAL




Smart Sensor Trash

MODEL:MDKPBLINOX-50(INOX)

MDKPBL-50(BLACK)

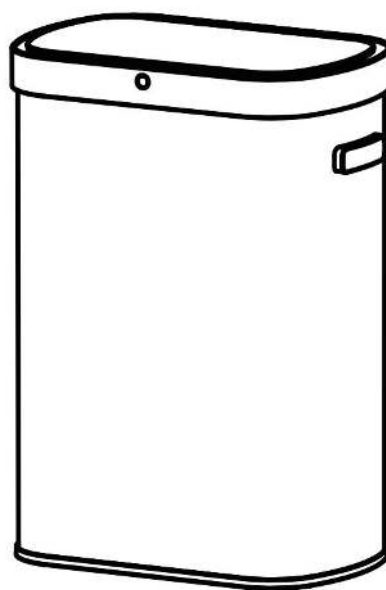

Product Introduction

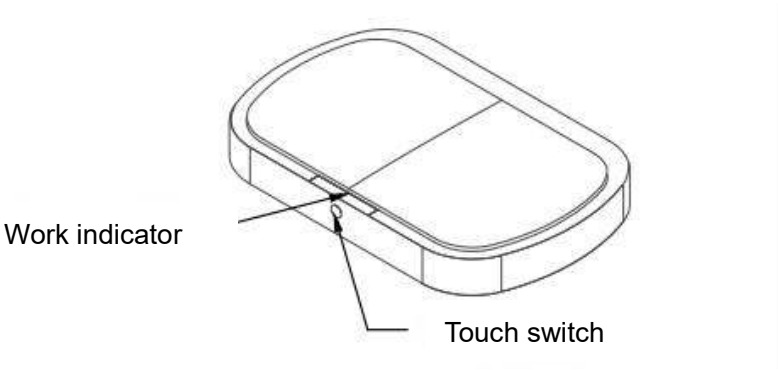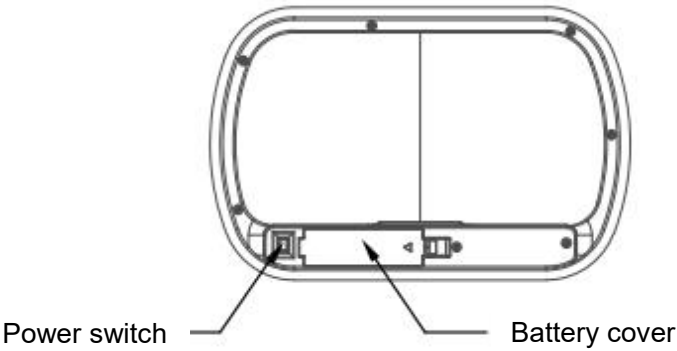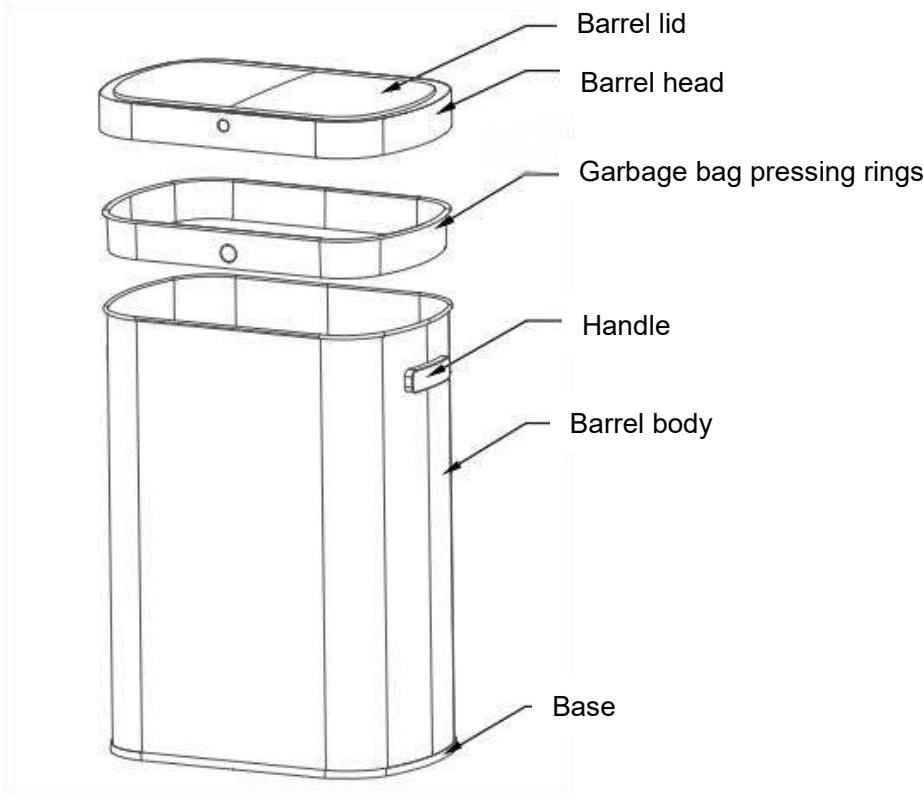

Basic Parameters

Product Name: Smart Sensor Trash

Model:MDKPBLINOX-50(inox)

MDKPBL-50(black)

Rated voltage: 6 V d.c.

Rated power: 2.2W

Battery parameters: 4 x AA 1,5 V alkaline batteries

Product size: 417mm x 270mm x 587mm

Standard:IEC60335-1:2010

Caution!

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

- The device must be powered with AA 1.5 V batteries.
- The device does not come with batteries.
- Observe the polarity (+/-) when inserting new batteries.
- Use the type of batteries recommended for this device: AA 1.5 V .
- Do not put used batteries in a rubbish bin, but in special containers for spent batteries.

- Do not try to charge non-rechargeable batteries.
- Do not short-circuit the battery terminals.
- Never directly expose batteries to heat sources such as excessive sunlight, heaters or open fire. Risk of explosion! Never disassemble, short-circuit or throw batteries into the fire. Remove the batteries if the device is not going to be used for any length of time. Doing so will prevent damage to the device resulting from an electrolyte leak.
- Remove dead batteries from the device immediately. Electrolyte may leak out of spent batteries causing damage to the device. If any acid from the battery comes into contact with your hands, rinse them under running water. If any acid gets into your eyes, contact a doctor. The acid contained in the battery may cause irritation or burns.
- Swallowing a battery can be fatal! Keep batteries away from children and pets. If a battery is swallowed, seek medical assistance immediately.

Precautions:

Please use genuine high-performance alkaline batteries. Regarding the types of batteries that may be used and how to remove and insert the batteries; thanks to refer to the following section.

- Non-rechargeable batteries are not to be recharged;
- Different types of batteries or new and used batteries are not to be mixed;
- Batteries are to be inserted with the correct polarity;
- Exhausted batteries are to be removed from the appliance and safely disposed of;
- If the appliance is to be stored unused for a long period, the batteries should be removed;
- The supply terminals are not to be short-circuited.

3. Install the battery

This product needs to use 4 AA alkaline batteries, remove the barrel head, open the battery cover at the bottom of the barrel head, put the 4 AA alkaline batteries into the battery compartment according to the positive and negative electrodes, and finally cover the battery cover.

4. Power on and off

Toggle the power switch, when the "I" sign is pressed, the working indicator will be on for 3 seconds and then off, the machine will be turned on. Toggle the power switch, when the "O" sign is pressed, the machine will be turned off.

5. Infrared induction to open the cover

(1) When the human hand or other object is close to the range of about 30cm above the front sensing area of the barrel lid (the specific range will change due to the use environment of the product), the barrel lid will be automatically opened, and the indicator light will flash; When a human hand or other object leaves the sensing area of the barrel lid, the barrel lid will automatically close after 5 seconds.

(2) After the induction opens the cover, if the human hand or object still stays in the induction area, the lid will remain open.

6. Manually open and close the lid

(1) When the lid is closed, touch the button on the sensing area to open the lid and open the cover, and the working indicator light is each.

Flashes red light once every 3 seconds.

(2) Touch the button when the lid is open, and the lid will be closed, and the lid also could be closed after 15 minutes without operation.

The cover is automatically closed, and the circuit program enters the automatic sensing state after the cover is closed.

7. The battery is insufficient

(3)When the battery is low, the work indicator light is red.

(4)After the red light is turned on to indicate that the battery is insufficient, the remaining power can be used for less than a week.



Precautions

- 1.Please pay attention to the product fireproof, moisture-proof and foreign matter ingress.
2. Do not directly rinse the trash can with water or use it in a wet situation, as it may cause the electronic components inside to be exposed to moisture.
6. If water enters accidentally, please take out the battery immediately and put it in a ventilated place to dry before use.
7. When installing the battery, please pay attention to the positive and negative poles of the battery, and use genuine high-performance alkaline batteries.If the battery is exhausted or not used for a long time, it should be replaced or removed in time to prevent the battery from leaking and damaging the components.
8. The battery version should use high-performance alkaline batteries.
- 6.When the automatic shutdown phenomenon occurs during normal use, please replace the battery in time in order to enter the low battery prompt mode.
- 7.The performance of the battery will be reduced when used in a low temperature environment, if the ambient temperature is too low, please use low temperature Battery.
- 8.The product should avoid falling, otherwise it may cause damage to the product.
9. The product cannot be forced on the upper cover by external force (or shake the lid back and forth quickly) during operation.otherwise it may be causes

irreversible damage to the product.

10.The product should not be too close to high-frequency electromagnetic radiation products, such as micro-refrigerators,induction cookers, etc.,otherwise it may be Interfere with the use of the product.

11.Please avoid direct exposure to strong light in the sensing area,which will lead to abnormal sensing sensitivity.

12.The sensitivity of the sensing area to the black surface is low, if the volatile body is a black surface, the cover may be abnormal

13.To prevent the product from accidentally triggering the opening and closing, please keep the vertical distance above the sensor head free of obstructions.



 This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.



Worn out and dead batteries must be discarded in specially marked containers, delivered to special waste collection points or to electronic equipment vendors.

Medek France
05 rue de Rouen 94700 maisons ALFORT France

MADE IN CHINA