



WIRELESS HANDHELD VACUUM CLEANER

INSTRUCTION MANUAL

MODEL: MD2308NR(BLACK COLOR)

MD2308BC(WHITE COLOR)




Before use, please watch this video carefully


This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.

Warning: Risk of entrapment in the hand-held accessory with rotating parts.
The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
This appliance contains batteries that are non-replaceable.


+ Component description

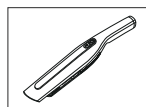


1.Host
(including a HEPA)

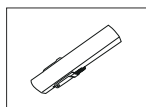


2.Combined
flat brush

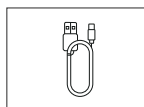


3.USB type-C
charging cable

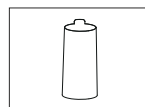


4.Non-woven fabric
(assembled inside HEPA)

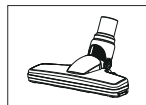

5.Floor brush

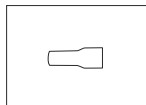

6. Adapter

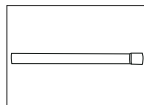


7.Extended
straight pipe

+ Instructions


1.Vacuum cleaner instructions

■ Floor brush

Use floor brush to clean floors and carpets strongly

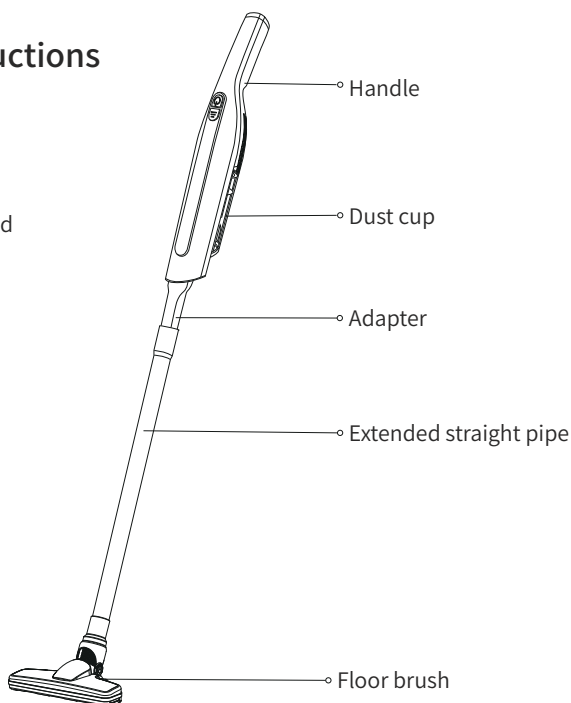

Installation drawing of vacuum cleaner floor brush

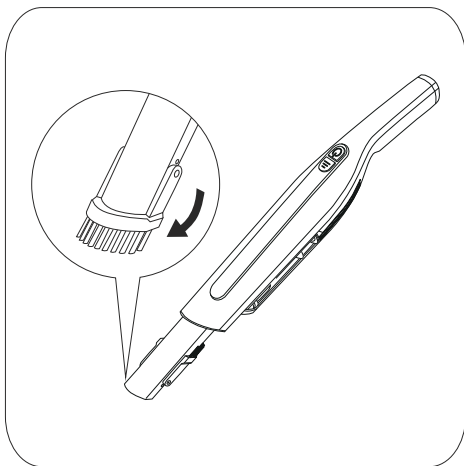


■ Combined flat brush

Use a combined flat brush to suck away garbage in narrow corners.

2. Press "⏻" to start working.


- Press the mode button to switch large /small mode
- LED digital screen display Current Power Percentage

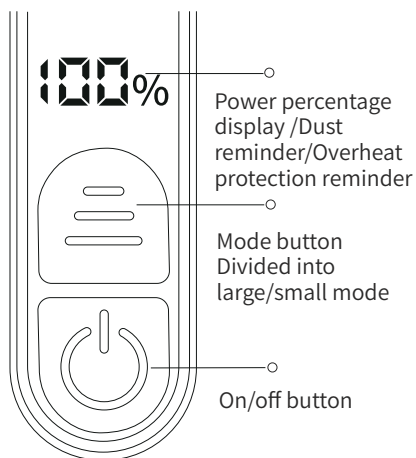

LED digital screen instructions

- The current remaining capacity will be expressed in the form of ' % ', showing ' 100 % ' at full power, when less than ' 10 % ', it needs to be charged immediately, and do not wait until the electricity is exhausted.
- When it shows 'FU', it means dust cup is full, the garbage in the dust cup need to be dumped.
- When 'bh' appears on the digital screen, it means that the battery temperature is over high, and it needs to stop working for a while.

■ USB Charging

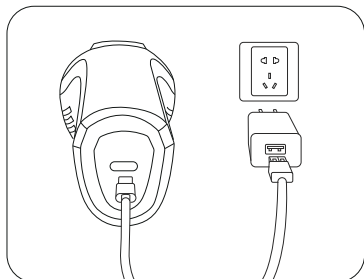



Install the charging base, plug in the adapter then supply power, and place the product on the charging pad to charge.

Warm tips: In order to meet the safety requirements of transportation, the vacuum cleaner is not fully charged, it is recommended to charge for more than 4 hours for the first time to improve the battery endurance.

If there's no response or it shows E6 after inserting the adapter, please check whether the adapter voltage is DC 5V.

Only 5V/2A adapters can be used for charging, other adapters will damage the machine.

⊕ Garbage cleaning

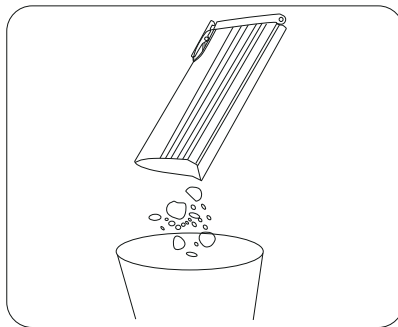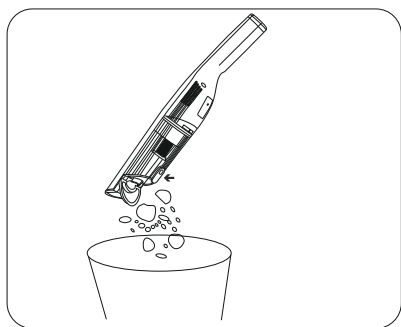

■ Light cleaning


1. Hold the host upside down, press the dust pour button, and the dust cup lid opens automatically.

2. Complete the dust pouring, cover the dust cup lid.

■ Deep cleaning


Firstly, remove the dust cup from the host. Then pour the dust into the trash bin through the other side of the dust cup.

⊕ Cleaning and maintenance

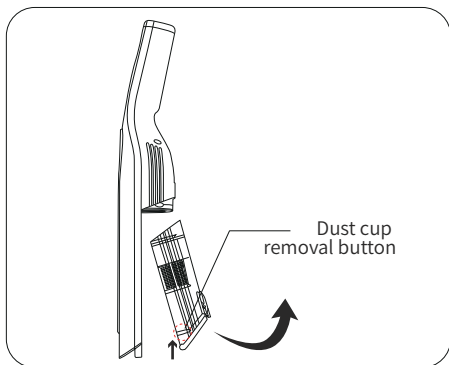


1. Remove the dust cup from the body

- Press the dust cup removal button to remove the dust cup.

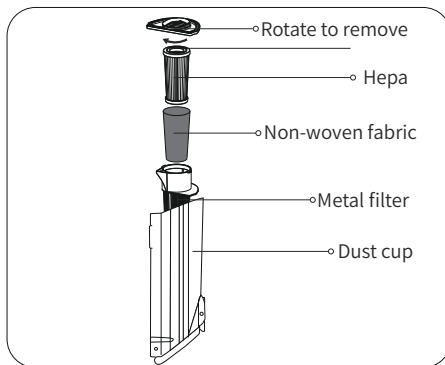


2. Remove the Hepa, metal filter and dust cup at one time

- After removing the dust cup, hold the handle of Hepa and take it out in sequence as shown in the picture. Remove the filter component.


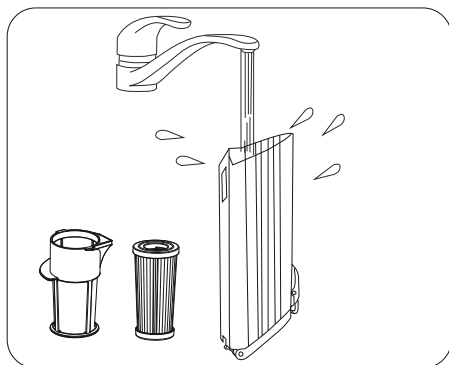


3. Wash the metal filter, HEPA and dust cup with water directly.

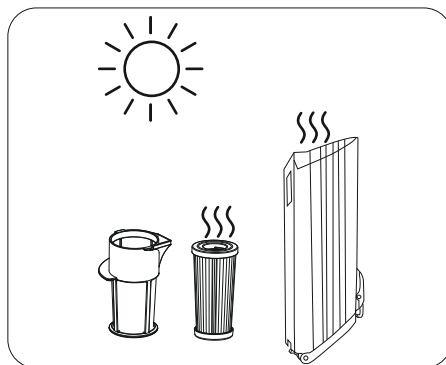

4. After washing, please be sure to dry before use.

+ Dust chamber installation sketch

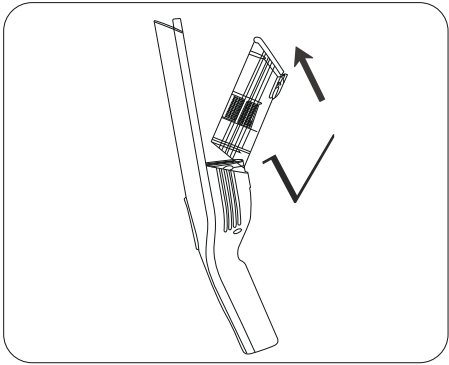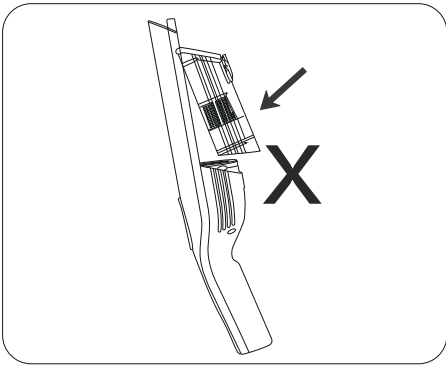

+ Product information

Model	MD2308NR(Black color)	MD2308BC(White color)
Rated voltage	DC5V	
Rated power	120W	
USB charging	5V 2A	
Battery	11,1 V d.c.(3 x Li-ion INR 18650 2000 mAh 3,7 V)	
Suction	16Kpa±10%	
Adjustment mode	Switch button + large and small mode adjustment	
Host N/W	0.66kg	
Size	452*75*77mm	
Noise level	High level ≤ 82dB Low level≤ 78dB	
Filtration method	Stainless steel metal filter + Paper HEPA filter	
Dust cup volume	200ML	
Charging time	Within 6 hours (there is charging protection and current limiting 600mA inside the host)	
Main material	ABS	
Standard accessories	Host *1(including a HEPA), Combined flat brush*1, USB type-C charging cable*1, Floor brush*1, Adapter*1, Extended straight pipe*1,	

- The above data comes from the company's laboratory, the actual performance varies according to the different use environment, please refer to the physical product.
- Due to the need for continuous improvement of the product, this product information is subject to the physical product, and our company reserves the right to update the product.

Digital abnormal display description

- **E0** : Short-circuit fault.
- **E1** : Motor overload protection.
- **E2** : No load protection.
- **E3** : No FULL signal failure .
- **E4** : Electric floor brush blocking protection, remove the object that cause block to restart.
- **E6** : Charger voltage error, please use specified 5V voltage adapter .
- **E7** : Charging current protection, check whether the correct charger is used.
- **E8** : The charging current is 0, check whether the correct charger is used.
- **BH** : The battery temperature is too high during discharge, please resume to use until the battery temperature drop down.
- **FU** : The vacuum port is blocked or the dust cup is full or the HEPA is blocked, please restart the machine after cleaning.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.



Worn out and dead batteries must be discarded in specially marked containers, delivered to special waste collection points or to electronic equipment vendors.



The device complies with the European Directives 2014/35/EU and 2014/30/EU.

Medek France
94700 maisons ALFORT France
MADE IN CHINA
<http://www.medekfrance.com>